


 <p>Animo</p>	
		
		<p>GEBRUIKSAANWIJZING (NL)</p> <p>MANUAL (GB)</p> <p>BETRIEBSANLEITUNG (D)</p> <p>MODE D'EMPLOI (F)</p> <p>MODO DE EMPLEO (ES)</p>

DIRECTIONS FOR USE WKT 3 LITRES - SEMI-AUTOMATIC

1. Pilot lamp green/yellow
2. Main switch green
3. No-drip faucet

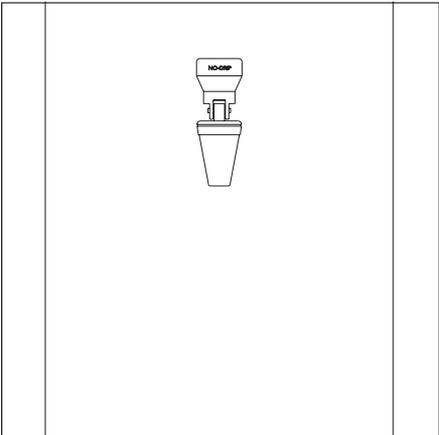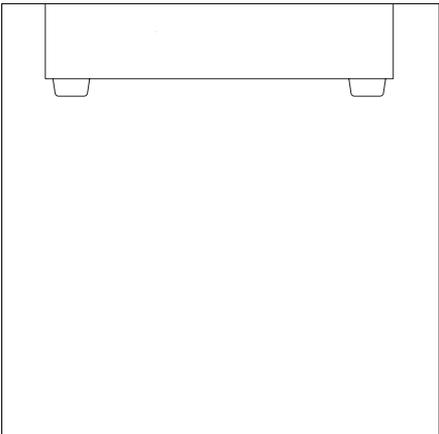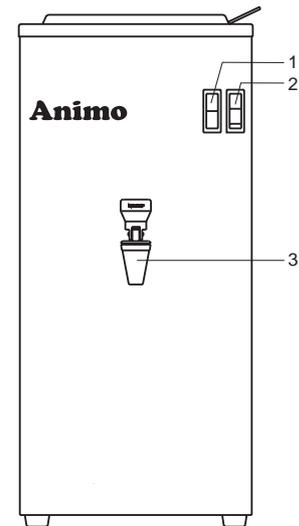

Put into use:

1. Fill the waterboiler with cold water upto the mixer-plate.
2. Put the plug into the plug-contact.
3. Put on the switch (No. 2).
4. The green pilot-lamp (No. 1) will light up, to indicate that the waterboiler is warming up.
The time for warming-up is ± 7 minutes.
5. When the green indication light goes off and the appliance is ready for use.

Use

Remove the black cover plate. Fill the boiler with cold water upto the edge. By means of the tap at the front side you can draw off cups as well as decanters with hot water.

ATTENTION!

The yellow lamp (No. 1) lights up to indicate that the boiler is running out of water and has to be filled again.

The green pilot-lamp (No. 1) will light up and go out regularly to indicate that the water is warmed up.

Removing scale

Remove the lid of the waterreservoir and the mixer plate. Hereafter the entire watertand will be visible. By turning the appliance upside down the water with possible loose scale will run out. To remove remaining scale you can make use of Animo scale remover. After this, just reassemble the appliance and perform the same handlings as described in the chapter "Put into use".

Dry-boil safety guard

The appliance is equiped with a dry-boil safety guard mounted at the backside of the appliance and coloured red. By pushing these red buttons you will put the appliance into use again.

--

--

--

--

--

--

--

Animo B.V. Headoffice
Dr. A.F. Philipsweg 47
P.O. Box 71
9400 AB Assen
The Netherlands

Tel. no. +31 (0)592 376376
Fax no. +31 (0)592 341751

E-mail: info@animo.nl
Internet: <http://www.animo.nl>

--

1199 Rev. 1 210100 Animo 09932



Accredited by
the Dutch Council
for Certification

