

Recipe button settings

- OptiMe
- OptiMe with Fresh Milk option

DRAFT



Content

1. Basics
2. How to program a recipe button
3. How the change a recipe name

1. Basics

This document describes you how to program your drinks on the different positions and screens.

- A drink can be programmed more than ones on different positons.
- A existing drink can NOT be moved from one position to another, reason: when programming a recipe on the desired position its always a basic Animo recipe from the memory.
- There is a maximum of 3 screens to program. Each screen contains a maximum of 8 drink positions.

- If there are (e.g.) 12 drink selections programmed, only 2 screens are active.

- If there are (e.g.) 20 drink selections programmed, 3 screens are active.




The recipes that are factory-set can be found in the recipes settings document which can be downloaded from below link:

OptiMe Freshmilk <http://tinyurl.com/y3c3feld>


OptiMe <http://tinyurl.com/y3h9zdsp>




Instead of a RECIPE, a Free Vend PIN can be programmed. Use this Free Vend PIN to switch the touch panel on the free vend when a payment system is active.

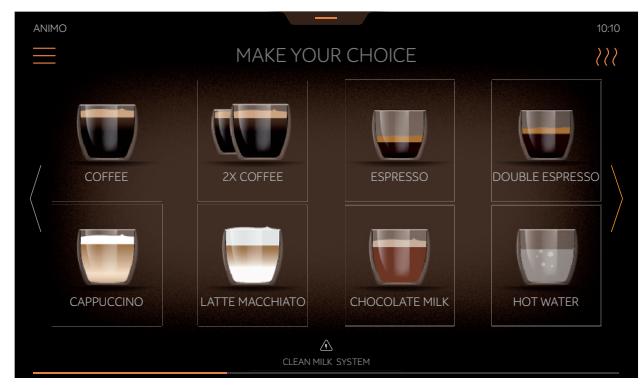


Screen 1

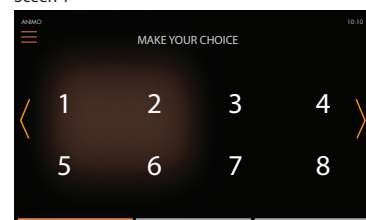

Screen 2

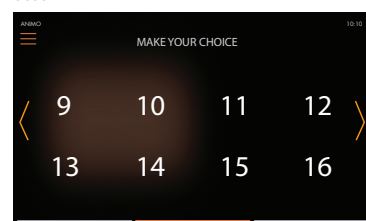


Screen 3

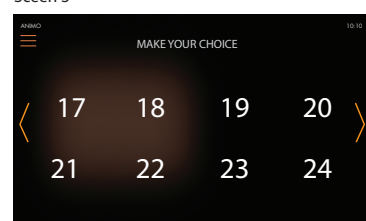

2. How to program a recipe button

Every machine contains preprogrammed basic recipes. Each key can be changed if required. In the example shown below button 3 is changed from Espresso to Ristretto.

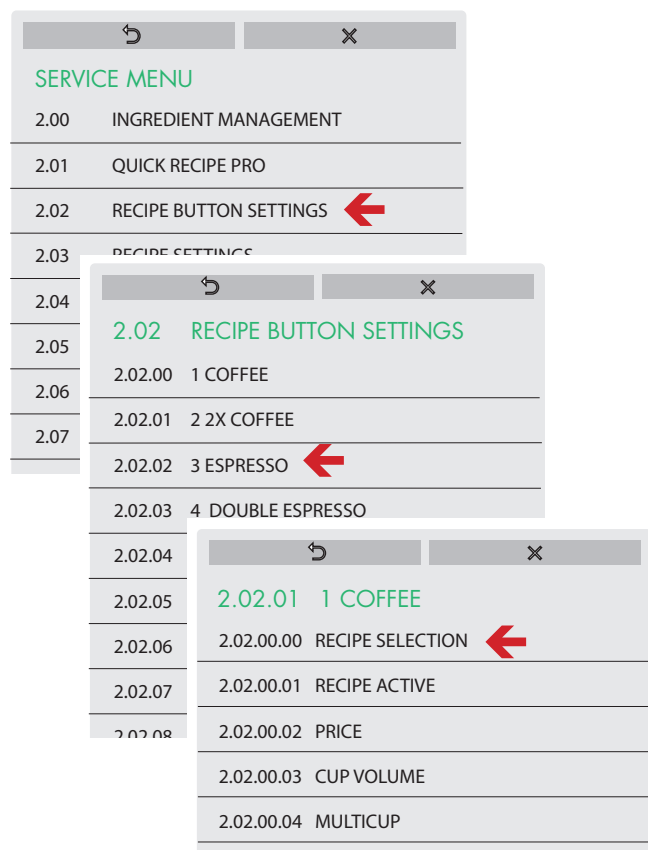

example; OptiMe 22 Fresh Milk

1. Navigate to the service menu item shown above.
2. Select RECIPE BUTTON SETTINGS / 3 ESPRESSO / BUTTON
3. Select the required recipe in the preprogrammed recipe list and press OK.
 - The **black** and grey texts show the recipes that are available in the machine.
 - The recipes in **black** texts are active (buttons are visible in the display).
 - The recipes in grey texts are not active. To activate, go to RECIPE ACTIVE, and select YES.
 - A drink can only be programmed on button position 1 till 24.




Instead of a RECIPE, a Free Vend PIN can be programmed. Use this Free Vend PIN to switch the touch panel on the free vend when a payment system is active.




3. How to change a recipe name


Its possible to change the recipe name of a drink.
In below example the Cappuccino recipe name is changed
in Cappuccino Special

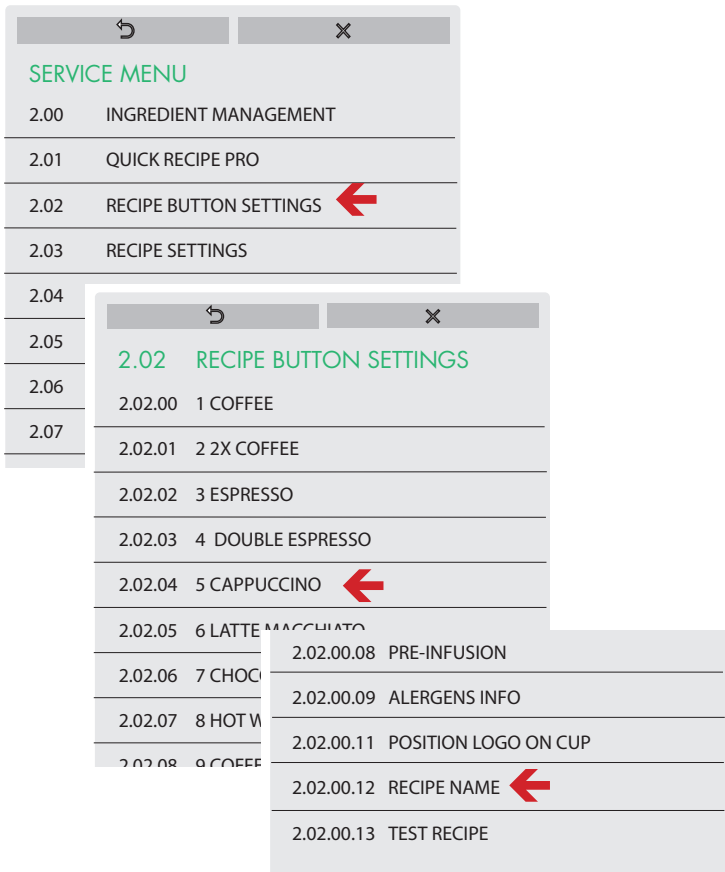

1. Enter the Service menu and navigate to 2.02.04.12 RECIPE NAME
2. Select Name Selection

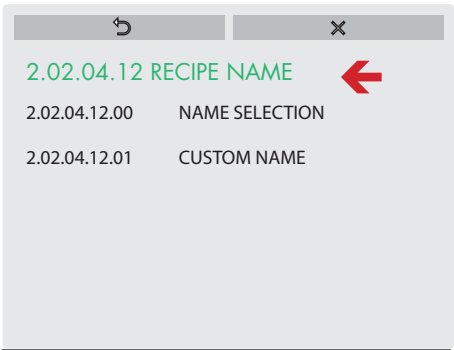


3. A keyboard appears.

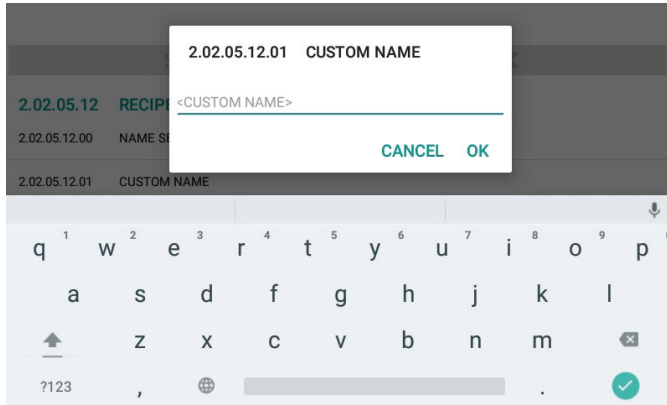

Type in your new drink name.

There are two solutions if the name is too long:

- Cappuccino#Special -> use a hashtag (#) and no spaces between the words.
The text will look like example A
- Cappuccino Special -> when only a space is used (no hashtag #) between the words the text is a running text, see example B.
- If you want to use capital letters (fast) double click the shift button twice .

4. After confirming the new recipe name select Custom and confirm with OK.
The Default recipe name always stay in the program.

