

# ANIMO

Possible loose glass panels Optibean Touch machines.



Problem description:

Due to tolerances in the different materials it may occur that a glass panel will loose from the Optilight panel.

A narrow gap will be visible at the top of the cover glass it will never fall off entirely.



A permanent solution for these problem is in progress, a temporarily solution is described on the next pages:



Temporarily solution:

Follow the next steps to solve the occurred problem.




1. Switch off the machine




2. Remove the chrome cover by pushing the inside and simultaneously pushing it upwards. Don't remove the black plastic outlet part from the machine door.

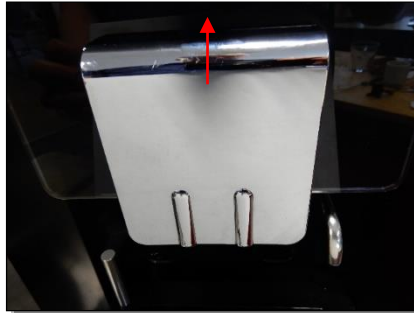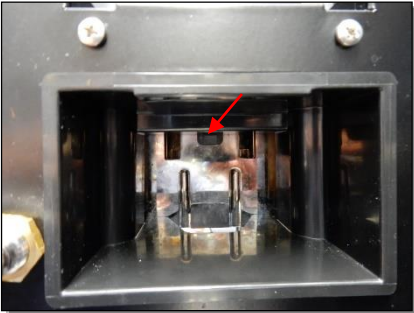

3. Remove the metal cover plate at the inside of the machine door, remove the wires.

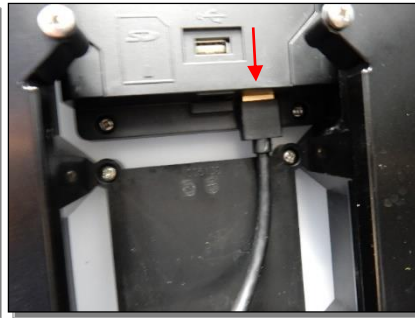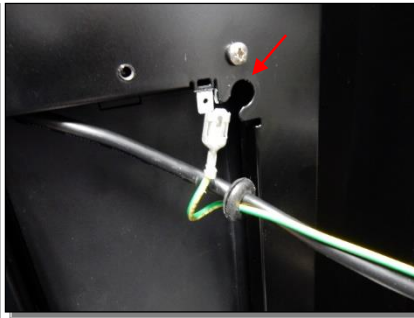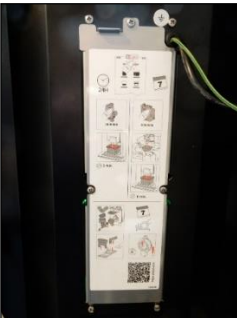

4. Remove 6 screws, hold the panel!

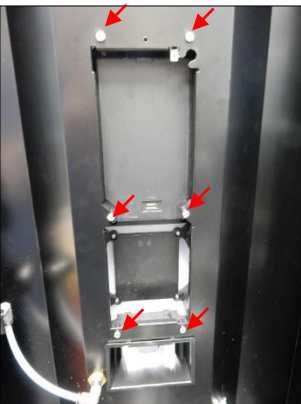


# ANIMO


5. Slide the panel from the black plastic part.




6. Put the complete panel on a flat surface, prevent scratches by placing it on a cloth.

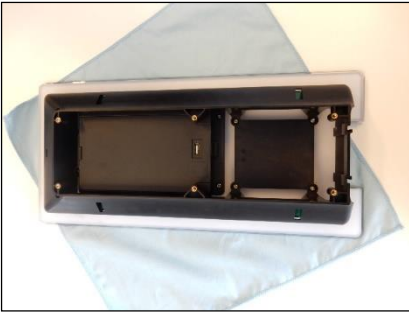


7. Turn the 4 screws a half turn to the left, this will remove the tension in the materials.

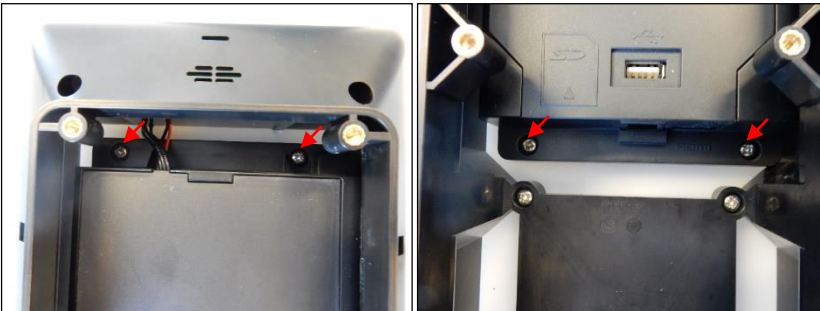

8. Press the glass panel and Optilight panel together and hold it for a couple of seconds, it should be stuck now.

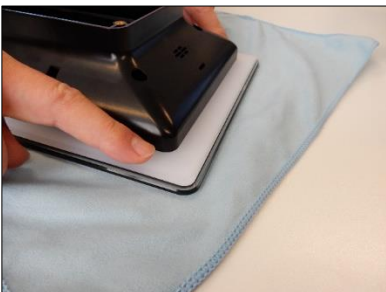



9. Slide the complete panel back into the plastic part which is mounted in the machine door.

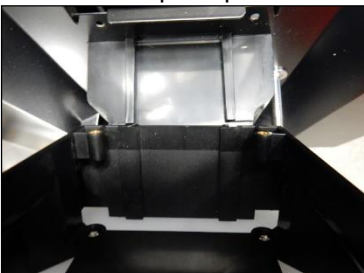

10. Position it before the mounting holes and tighten it with the 6 screws



11. Reattach the wires

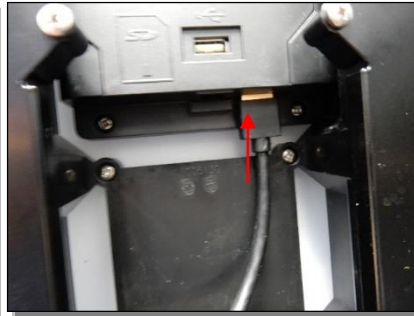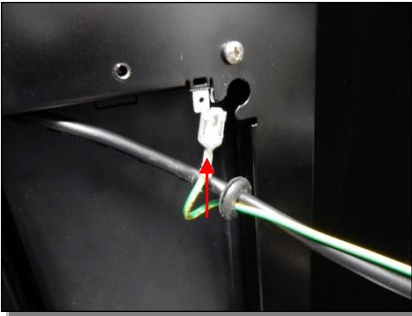

12. Put the cable back into its original position



13. Put back the metal cover plate

