


 


Operator menu continued...						
Main item	Sub-item	..	.	Range	Set	Description
1.11 VISUAL & SOUND	ADVERTISING SCREEN	CHOOSE ADVERTISING SCREEN	<div> 1.11.00.00 CHOOSE ADVERTISING SCREEN <ul style="list-style-type: none"> >NONE< IMAGE VIDEO SLIDE SHOW <div>CANCEL OK</div> </div>			Choose here what kind of entertainment the display must show.
		IMAGES <i>Picture specifications</i> PNG 480X800 pixels 24/32 bit	CHOOSE IMAGE			Select the .png file from the image directory.
			LOAD IMAGE FROM SD OR USB			Insert a SD or USB to upload your .png file.
			REMOVE IMAGE			Select a .png file to remove it from the image directory
		VIDEO <i>Video specifications</i> MPEG-4 Landscape 480X272 pixels Portrait 480x800 pixels Video bit-rate ≤500 Audio 44,1 kHz ≤128 kbps	FULL SCREEN VIDEO	YES/NO		Yes; video in portrait mode No; video in landscape mode (top of screen)
			CHOOSE VIDEO			Select the .mp4 file from the video directory
			LOAD VIDEO FROM SD OR USB			Insert a SD or USB to upload your .mp4 files.
			REMOVE VIDEO			Select the .mp4 file from the video directory
		SLIDE SHOW <i>Picture specifications</i> PNG 480X800 pixels 24/32 bit	DURATION TIME	5 - 10 sec.	sec.	Time between the selected images
			SLIDE SHOW EFFECT	SLIDE IN FADE IN		Slide in; the images starts from the side of the screen Fade in; the images starts from the middle of the screen.
			CHOOSE IMAGES			Select here the files from the slide show directory.
			LOAD IMAGE FROM SD OR USB			Insert a SD or USB to upload your .png file.
			REMOVE IMAGE			Select a .png file to remove it from the image directory
		SCREEN SAVER DELAY TIME			15 s.	
		SHOW TEXT AND TOUCH SYMBOL	SHOW TEXT	YES/NO	Yes	Yes; Show text <i>Touch screen for your selection</i> at the bottom of the screen No; don't show text
			SHOW TOUCH SYMBOL	YES/NO	Yes	Yes; Show symbol No; don't show symbol

EN

Operator menu continued...

Main item	Sub-item	..	Range	Set	Description
1.11 VISUAL & SOUND (continued....)	SOUNDS	VIDEO SOUND	0 - 100	70	Set video sound volume
		SYSTEM SOUND	0 - 100	70	Set system sound volume
	LOGO ON CUP? 	LOGO ON CUP?	YES/NO	YES	Show logo on the cup
		CHOOSE LOGO			Select the .png file from the image directory
		LOAD LOGO FROM SD OR USB			Insert a SD or USB to upload your .png file.
		REMOVE LOGO			Select a .png file to remove it from the image directory
	SHOW REPEAT RECIPE		YES/NO	NO	If set to yes, it gives the opportunity to repeat a recipe
	SHOW ALERGENS INFO		YES/NO	NO	If set to yes, it shows extra alergens information with each chosen recipe
1.12 CHANGE OPERATOR PIN CODE 1.13 CHANGE FREE VEND PIN CODE	NEW PIN CODE	REPEAT PIN CODE			With this menu item the PIN code can be changed. The complete operator menu is secured behind this PIN code. This PIN code prevents unintentional changes to the machine settings by untrained personnel. <ul style="list-style-type: none"> • The factory operator PIN code is 1-1-1-1-1 • The factory free vend PIN code is 1-2-3-4-5 PIN code forgotten? In the PIN code input display a number is displayed on the right. Enter the associated PIN code (see the list below) to access the operator menu.
		REPEAT PIN CODE			
	NEW PIN CODE	REPEAT PIN CODE			
1.14 REFILL CANISTERS	1.14 REFILL CANISTERS 	YES/NO		NO	When a Telemetry system (Vendon®) is connected the user can inform the Telemetry system when all canisters are refilled. To enable this menu item in the operator menu go to the service menu 2.04.16.01 REFILL CANISTERS IN OPERATOR MENU and set YES