


5.3 Software installation

New software can easily be installed on the machine.

New software is available in the following ways:


- www.animo.eu/en/sd (no log in needed)
- [www.animo.eu / dealer](http://www.animo.eu/dealer) login: Extranet
- by e-mail from Animo Technical Support

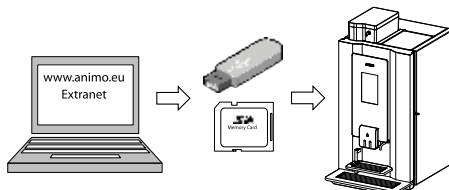

When loading new software all the existing settings are automatically saved on the SD card /USB memory. After the software update you can decide if you want to work with the factory settings, or if you want to use the settings back upped before the software update. Please follow the instruction in chapter 5.2. Movies, screensaver picture, Counters, Log and operating hours will be preserved!

The complete software update take abt. 5-8 minutes (depending on the bootloader).

1. Download the OptiBean Touch software.
2. Unpack the ZIP file and copy the all directories & files (see right) on an empty SD card / USB stick.
3. Leave the machine switched on and remove the cover plate inside the door.
4. Insert the SD card / USB stick in the designated opening in the door
5. Navigate to Automatic software update:

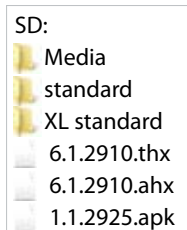

SERVICE MENU

2.11 SD/USB MENU

2.11.00 LOAD DATA/SOFTWARE UPDATE

2.11.00.06 AUTOMATIC SOFTWARE UPDATE

⏪	✕
SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU ←
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.14	INSTALLATION
2.15	DESCALING
2.16	CLEANING MANAGEMENT

⏪	✕
2.11 SD/USB - MENU	
2.11.00	LOAD DATA / SOFTWARE UPDATE ←
2.11.01	SAVE DATA
2.11.02	REMOVE SD-CARD


⏪	✕
2.11.00 LOAD DATA/SOFTWARE UPDATE	
2.11.00.00	PERSONAL SETTINGS
2.11.00.01	LANGUAGE
2.11.00.02	RECIPE
2.11.00.03	COUNTERS
2.11.00.04	OPERATING HOURS
2.11.00.05	MANUAL SOFTWARE UPDATE
2.11.00.06	AUTOMATIC SOFTWARE UPDATE ←

- Press **OK** if you want save your existing files from the machine (preferred).
Press SKIP if you don't want to save your existing files from the machine.



The personal- and recipe files are automatically stored on the SD/USB memory.


If the machine not detect files on the SD/UBS memory it will show
 NO DATA PRESENT ON MEDIA

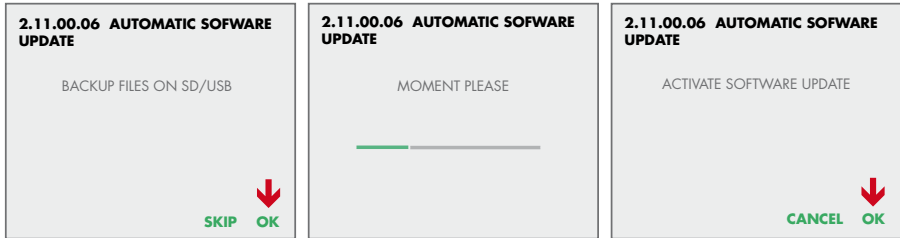

- Press **OK** to start the automatic software update.
Press CANCEL if you don't want to start the automatic software update.
The machines will start up again.




The AHX* or THX* file is being uploaded to the main PC board which is positioned behind the left side panel. *Depending on the bootloader (bios) which is preinstalled on the main PC board., the AHX or THX file is uploaded.

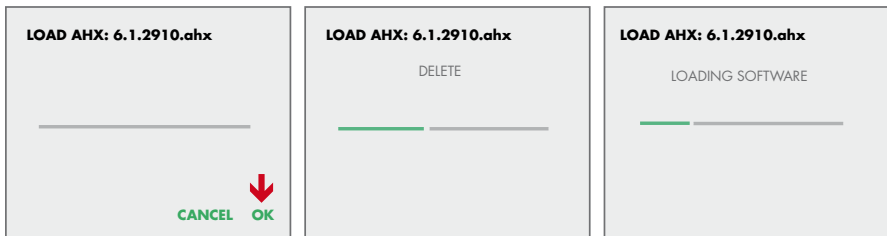

8. Press **INSTALL** to start continue the software update.




The Application (APP) is being updated to the PC board behind the display.

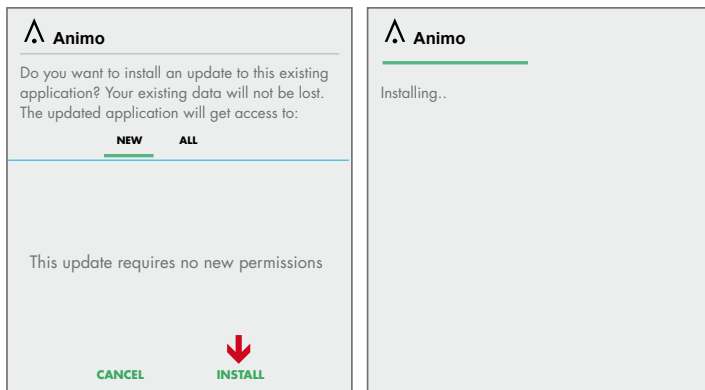

9. Select **Standard** or **XL standard** and Press the button **LOAD**



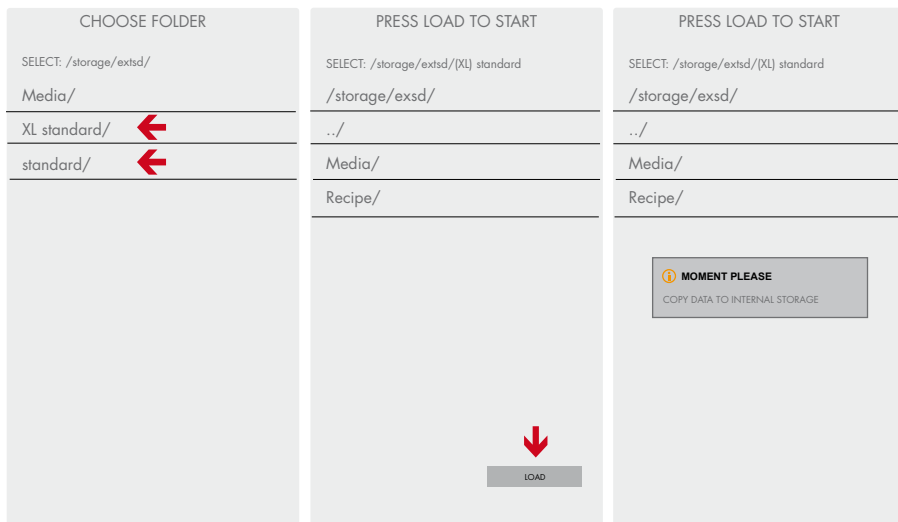

The machine model-, media- an recipe files are copied to the internal storage




OptiBean (XL) Touch

10. Select the **OptiBean Touch** model of your choice.

To select the right model please go to chapter 1.2 Model code.

-  OptiBean 2 Touch = model 3B2A
-  OptiBean 3 Touch = model 3B3A
- OptiBean 2 XL Touch = model 3B2B
- OptiBean 3 XL Touch = model 3B3B

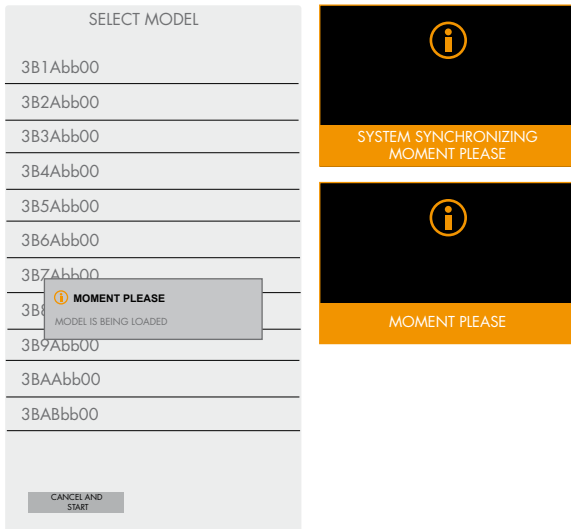

11. The software update is successfully updated. The machine operates like a new machine straight from the factory.

If you want load the saved settings (recipes) in the machine, leave the SD/USB memory in place and please follow the next step.

12. Load the personal- and recipe settings which were backed up on the SD/USB memory before the software update was started back into the machine.


Navigate to Automatic software update:

2.11 SD/USB MENU

2.11.00 LOAD DATA/SOFTWARE UPDATE

2.11.00.00 PERSONAL SETTINGS

2.11.00.02 RECIPE

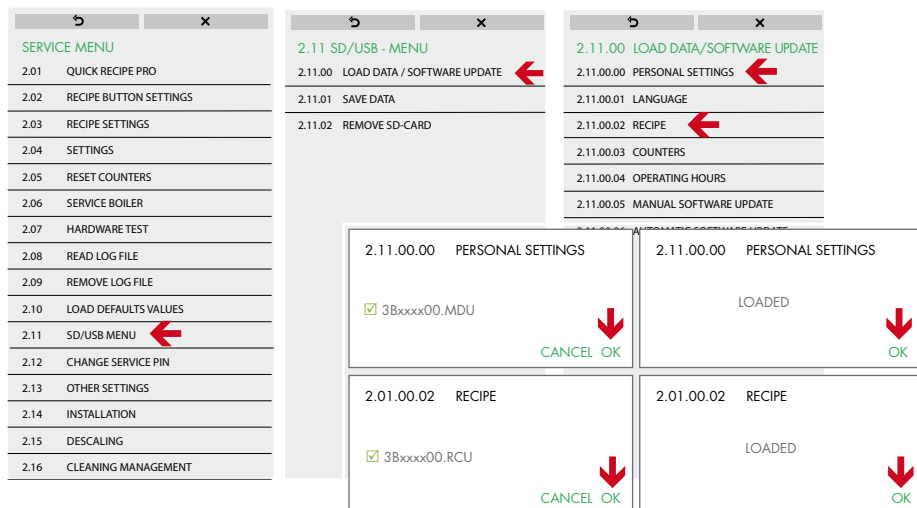

13. Remove the SD/USB from the slot