



How to customize your coffee machine

Whether you want to change the appearance of your coffee machine, there are several options.

A REQUIREMENT FOR FILES



NO IMAGE
FOUND



NO IMAGE
FOUND



NO IMAGE
FOUND



NO IMAGE
FOUND



NO IMAGE
FOUND

MEDIA	IMAGE	VIDEO LANDSCAPE (with sound)	VIDEO PORTRAIT (with sound)	SLIDE SHOW	LOGO ON CUP
Size	480 x 800 px	480 x 270 px	480 x 800 px	480 x 800 px	120 x 120 px
Data formats	PNG with 24 bit	MPEG-4 Bit rate: max. 500 kbps Image frequency: max. 25 fps	MPEG-4 Bit rate: max. 500 kbps Image frequency: max. 25 fps	PNG	PNG with 24 bit. Transparent

B UPLOADING MEDIA

You can upload you media by USB stick or SD-card, [see ... Instruction where to place USB/ SD-Card](#)

Free space for media: 400 MB

The image on the USB stick or SD card must be present in the required folder structure, have the correct data format and the correct size.

Required folder structure



C DELETING MEDIA

Delete media which is no longer required.

IMAGE/VIDEO/SLIDESHOW		LOGO	
Desired action	Screen	Desired action	Screen
1 Go to OPERATOR MENU		Go to OPERATOR MENU	Login with your code
2 Choose SOUND & VISION	1.11	Choose SOUND & VISION	
3 Choose ADVERTISING SCREEN	1.11.00	Choose LOGO ON CUP	1.11.02
4 Choose IMAGE/VIDEO/SLIDESHOW	1.11.00.03	Choose REMOVE LOGO	1.11.02.03 (logo)
	1.11.00.01.02 (image)/ 1.11.00.03.05 (slideshow)/ 1.11.00.02.03 (video)	Select files that are no longer required and confirm with OK	
5 Choose REMOVE IMAGE(S)/VIDEO	1.11.00.01.02 (image)/ 1.11.00.03.05 (slideshow)/ 1.11.00.02.03 (video)		
6 Select files that is no longer required and confirm with OK			

D CONFIGURING YOUR IMAGE AS SCREENSAVER

You can show your own image as a screensaver

Desired action	Screen	Information
1 Go to OPERATOR MENU		Login with your code
2 Choose SOUND & VISION	1.11	
3 Choose ADVERTISING SCREEN	1.11.00	
4 Choose CHOOSE ADVERTISING SCREEN	1.11.00.00	
5 Select IMAGE, confirm with OK	1.11.00.00	
6 Insert USB or SD with image in the required directory structure		See ... where to place USB/SD
7 Choose IMAGE	1.11.00.01	Uploading files. You can upload more images at a time.
8 Choose LOAD IMAGE FROM SD OR USB	1.11.00.01.00	
9 Select file (png), confirm with OK	1.11.00.01.01	
10 File LOADED, confirm with OK	1.11.00.01.01	
11 Choose <arrow back>		go one step back
12 Choose IMAGE	1.11.00.01	Select file (png)
13 Choose CHOOSE IMAGE	1.11.00.01.00	
14 Select file, confirm with OK	1.11.00.01.00	
15 File LOADED, confirm with OK	1.11.00.01.00	
16 Close OPERATOR MENU with X		

Image will show after Screensaver dealy time. [See G](#)

E CONFIGURING YOUR OWN MOVIE AS SCREENSAVER

You can show your own movie as a screensaver. Movie will be shown above IMAGE (see D) on top of screen

ANIMO[®]

	Desired action	Screen	Information
1	Go to OPERATOR MENU		
2	Choose SOUND & VISION	1.11	
3	Choose ADVERTISING SCREEN	1.11.00	
4	Choose CHOOSE ADVERTISING SCREEN	1.11.00.00	
5	Select VIDEO, confirm with OK	1.11.00.00	
6	Choose VIDEO	1.11.00.02	
7	Choose FULL SCREEN VIDEO?	1.11.00.02.00	
8	Select NO (for landscape), select YES for full screen portrait. Confirm with OK	1.11.00.02.00	
9	Insert USB or SD with movie in the required directory structure		See .. where to place USB/SD.
10	Choose LOADING VIDEO FROM SD OR USB	1.11.00.02.02	Uploading files. You can upload more videos at a time.
11	Select file name Video (MP4), confirm with OK	1.11.00.02.02	
12	Files LOADED, confirm with OK	1.11.00.02.02	
13	Choose SELECT VIDEO	1.11.00.02.02	Select file (MPEG-4)
14	Select your video.mp4, confirm with OK	1.11.00.02.01	
15	File LOADED, confirm with OK	1.11.00.02.01	
16	Close OPERATOR MENU with X		



Image of screen, where you can see where landscape movie will be shown.

LANDSCAPE MOVIE. If you want to change Image below movie, please see D

Video will show after Screensaver dealy time. See G

F CONFIGURING YOUR OWN SLIDESHOW AS SCREENSAVER

You can show your own images in a SLIDESHOW

	Desired action	Screen	Information
1	Go to OPERATOR MENU		Login with your code
2	Choose SOUND & VISION	1.11	
3	Choose ADVERTISING SCREEN	1.11.00	
4	Choose CHOOSE ADVERTISING SCREEN	1.11.00.00	
5	Select SLIDESHOW, confirm with OK	1.11.00.00	
6	Insert USB or SD with images in the required directory structure		See .. where to place USB/SD.
7	Choose SLIDESHOW	1.11.00.03	Uploading files. You can upload more images at a time.
8	Choose LOAD IMAGE FROM SD OR USB	1.11.00.03.04	
9	Select files for slideshow, confirm with OK	1.11.00.03.03	
10	Files LOADED, confirm with OK	1.11.00.03.03	Select file (png)
11	Choose CHOOSE IMAGES	1.11.00.03.04	
12	Select images for slide show, confirm with OK	1.11.00.03.03	
13	Files LOADED, confirm with OK	1.11.00.03.03	
14	Choose EFFECT DURATION TIME	1.11.00.03.00	time of the effect between two images
15	Set EFFECT DURATION TIME (sec.) and confirm with OK	1.11.00.03.00	
16	Choose DURATION TIME	1.11.00.03.01	Time the machine will show each image
17	Set DURATION TIM (Sec.), confirm with OK	1.11.00.03.01	
18	Choose SLIDESHOW EFFECT, confirm with OK	1.11.00.03.02	SLIDE or FADE IN
19	Close OPERATOR MENU with X		

SLIDE SHOW will show after Screensaver delay time. See G

G SCREENSAVER DELAY TIME

Set time after media will appear.

	Desired action	Screen	Information
1	Go to OPERATOR MENU		Login with your code
2	Choose SOUND & VISION	1.11	
3	Choose SCREENSAVER DELAY TIME	1.11.00.04	
4	Set SCREENSAVER DELAY TIME (Sec.), confirm with OK	1.11.00.04	Image will show after selected delay time
5	Close OPERATOR MENU with X		

H TEXT AND TOUCH SYMBOL

[hier afbeelding van "TOUCH SYMBOL" tonen]

Show or hide Tekst and Touch symbol

	Desired action	Screen	Information
1	Go to OPERATOR MENU		Login with your code
2	Choose SOUND & VISION	1.11	
3	Choose SHOW TEKST AND TOUCH SYMBOL	1.11.00.04	
4	Select SHOW TEKST/TOUCH SYMBOL	1.11.00.05.00	
5	Select YES or NO, and confirm with OK	1.11.00.05.xx	
6	Close OPERATOR MENU with X		

I CONFIGURING YOUR OWN LOGO ON CUP

You can show your logo on every recipe button (cup)

	Desired action	Screen	Information
1	Go to OPERATOR MENU		Login with your code
2	Choose SOUND & VISION	1.11	
3	Choose LOGO ON CUP	1.11.02	
4	Insert USB or SD with image in the required directory structure		See .. where to place USB/SD.
5	Choose LOAD LOGO FROM SD OR USB	1.11.02.02	Uploading files
6	Select file -name.png, confirm with OK	1.11.02.02	
7	Files LOADED, confirm with OK	1.11.02.02	
8	Choose SHOW LOGO ON CUP	1.11.02.00	
9	Select YES	1.11.02.00	Select file (png)
10	Choose CHOOSE LOGO	1.11.02.01	
11	Select file, confirm with OK	1.11.02.01	
12	File LOADED, confirm with OK	1.11.02.01	
13	Close OPERATOR MENU with X		

You can adjust the position of the logo on the cup

	Desired action	Screen	Information
1	Go to OPERATOR MENU		Login with your code
2	GO to SERVICE MENU	1.07	Login with service code
3	Choose RECIPE BUTTON SETTINGS	2.02	
4	Choose a recipe button which you want to change	2.02.xx	
5	Choose POSITION LOGO ON CUP	2.02.xx.xx	
6	Choose HORIZONTAL POSITION if you want to move logo to the left or right	2.02.xx.xx.xx	
7	Select + to move logo to the right and - to move to the left, confirm with OK	2.02.xx.xx.xx	
8	Choose VERTICAL POSITION if you want to move logo to up or down		
9	Select + to move up and - to move down, confirm with OK		
10	Close OPERATOR MENU with X		
11	Select recipe and check position logo on the cup		
12	Close OPERATOR MENU with X		