

INSTALLATION REGULATIONS




OptiVend Touch

ANIMO

DEDICATED TO EVERY CUP

INSTALLATION INSTRUCTIONS

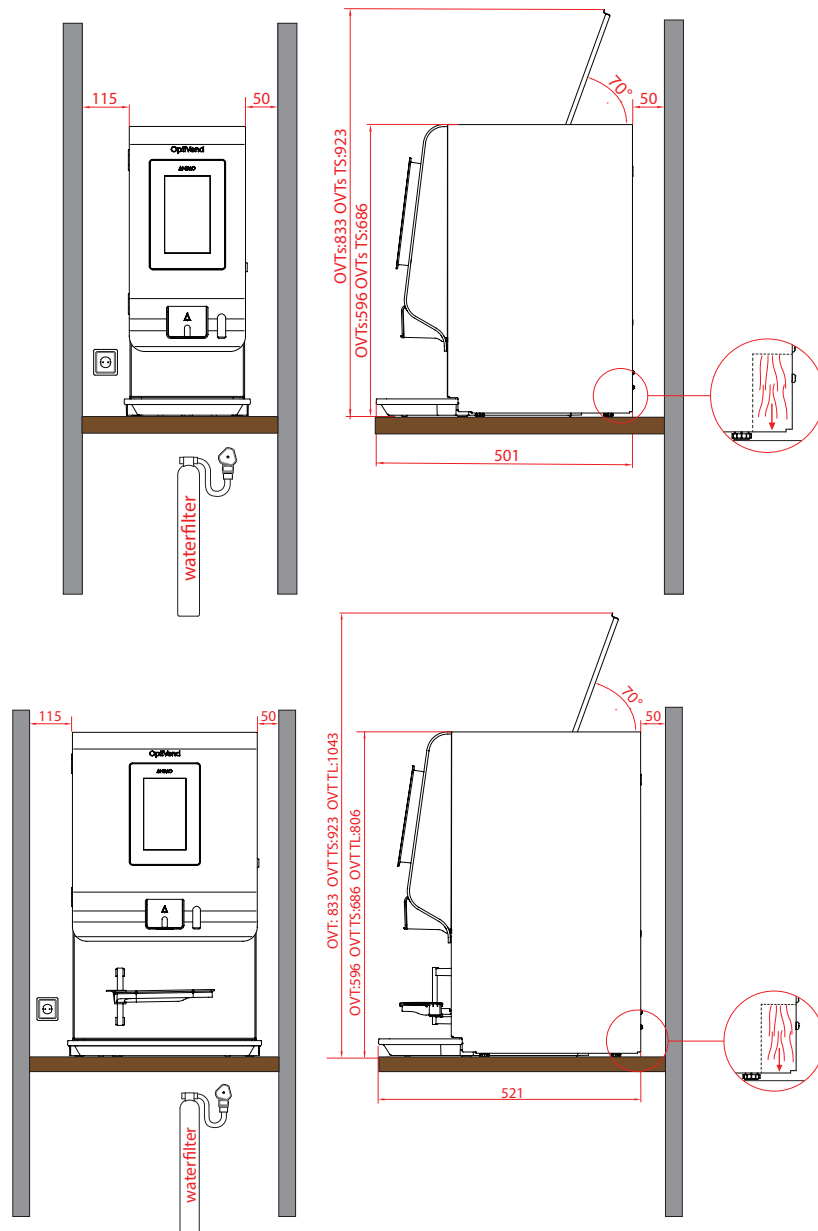

- + Dimensions OptiVend 409 (W) x 521 (D) x 596 (H), gewicht ca. 22 kg,
- Dimensions OptiVend TS 409 (W) x 521 (D) x 686 (H), gewicht ca. 23 kg
- Dimensions OptiVend TL 409 (W) x 521 (D) x 806 (H), gewicht ca. 24 kg
- Dimensions OptiVend S 248 (W) x 501 (D) x 596 (H), gewicht ca. 18 kg
- Dimensions OptiVend S TS 248 (W) x 501 (D) x 596 (H), gewicht ca. 17 kg


Dimension worktop:

OptiVend S, OptiVend S TS minimum 413 (W) x 551 (D)


OptiVend, OptiVend TS, OptiVend TL minimum 574 (W) x 571 (D)

left 115 mm space, right 50 mm space, back side minimum 50 mm space




- + Only suitable for indoor installation
- + Place the machine on a firm flat surface, recommended buffet height between 900 and 1050 mm
- + Ambient conditions: humidity max. 80% RH
- + Ambient temperature 10 - 32°C
- ! Fan blows to the rear, refrigerator fan must be clear of any obstructions

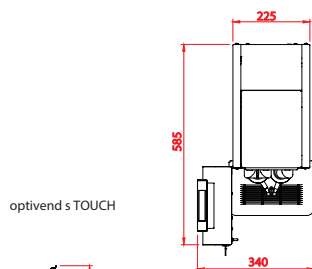


optivend s TOUCH

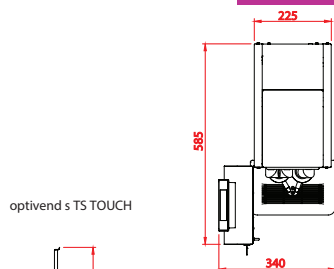


optivend s TS TOUCH

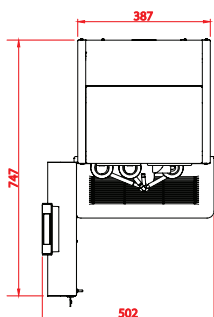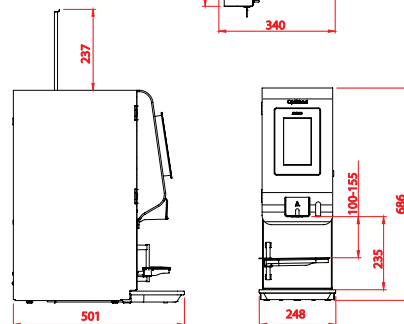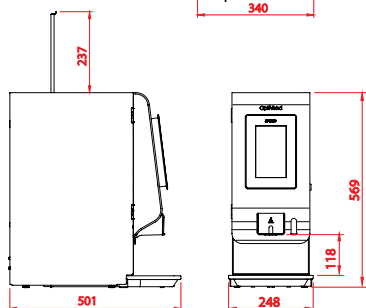





optivend TOUCH

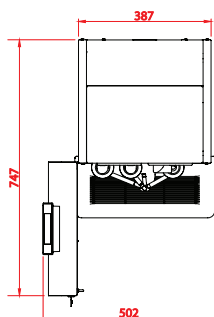


optivend TS TOUCH

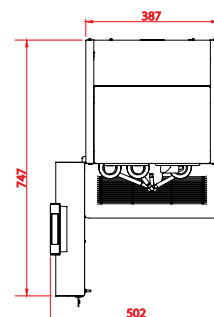



optivend TL TOUCH

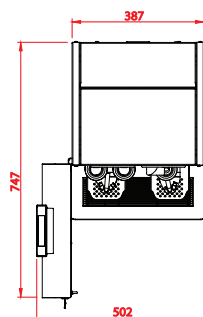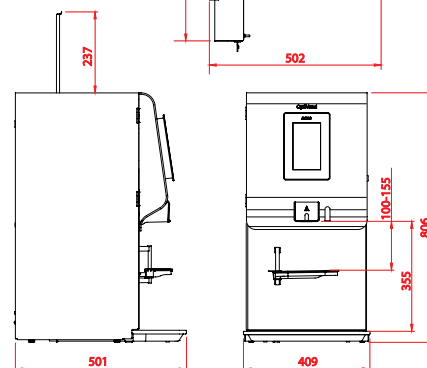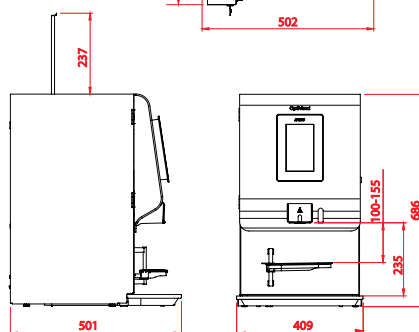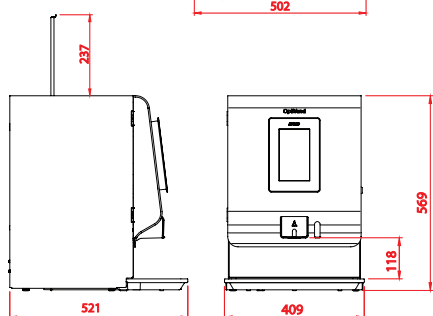


optivend HS DUO TOUCH

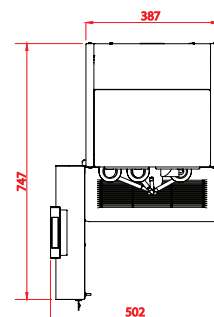

optivend TL TOUCH

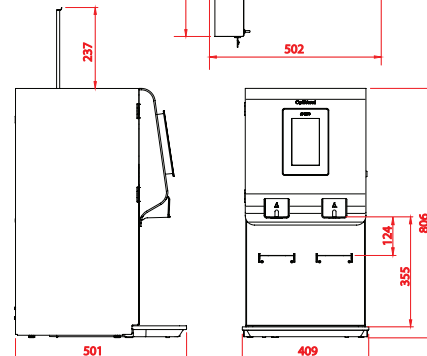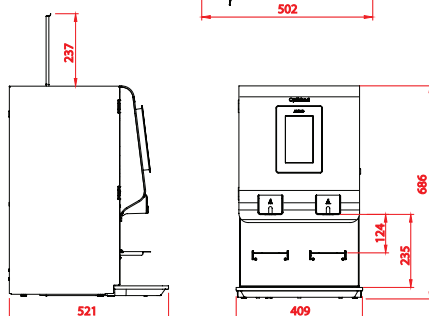

INSTALLATION INSTRUCTIONS

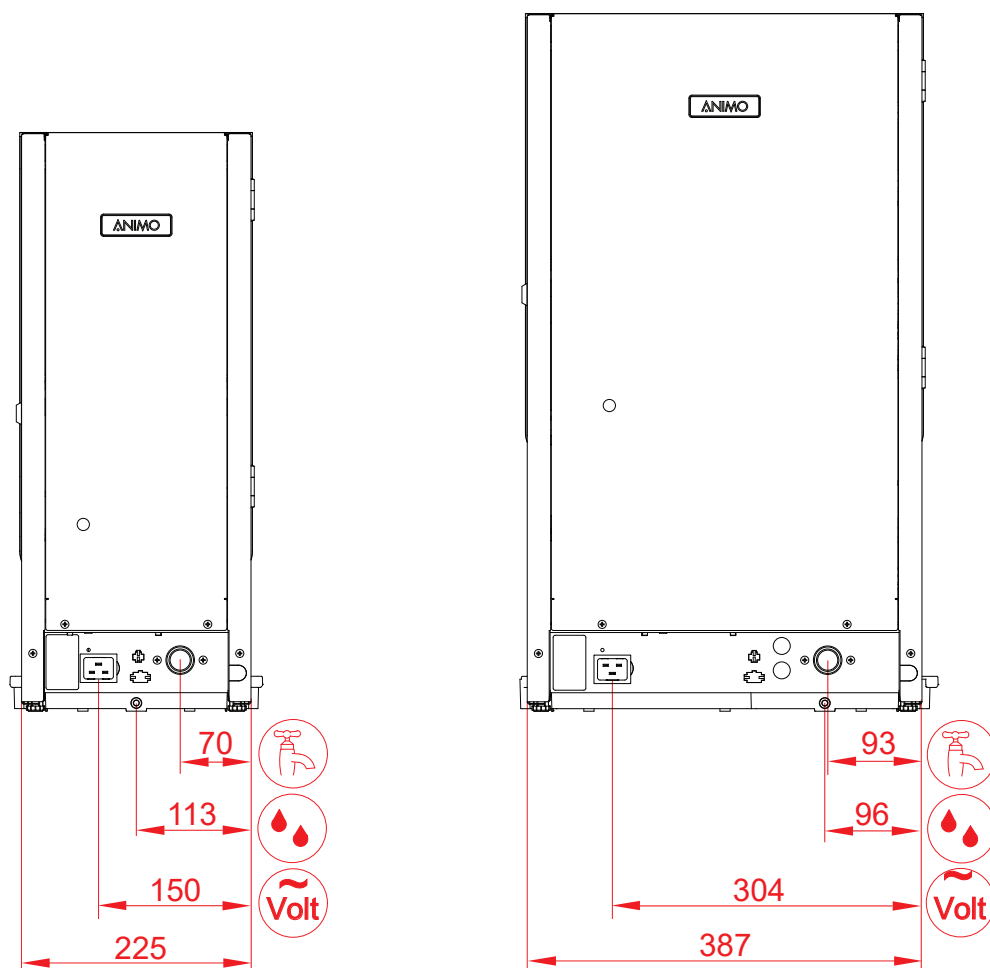

WATER SUPPLY

- + According NEN1006
- + Supply pipe: Ø15 mm
- + Water tap, ball valve or otherwise, with aerator and backflow restrictor, due to regulations of the country
- + Water pressure: 2 - 5 Bar (0.2 - 0.5 MPa), is the water pressure higher, use a reducer
- + Carbonate hardness: 3 - 5 kH 40 - 80 mg/ltr; use a water filter if the hardness is different
- + Total chlorides (Cl) < 50 mg/ ltr
- + pH value 6.5 - 8.5
- ! Places under the power supply due to the risk of short circuit

POWER SUPPLY

- + According NEN1010
- + 1N ~ 220-240 V / 50-60 Hz,
- + Grounded outlet, separately fused 16 A, within a radius of 1 meter from the machine
- + Power OptiVend Touch: 3275W
- ! Do not use an extension cable or power strip!
- ! Places above the water supply due to the risk of short circuit



REV. 0.0 – 040122