

# ANIMO

---

OptiFresh    OptiFresh Bean  
Model 2017

**TOUCH**



*Machine with taste*

service book



### TABLE OF CONTENTS

FOREWORD .....	6
1. INTRODUCTION OPTIFRESH TOUCH .....	7
1.1 Principles of operation.....	8
1.2 Model code.....	9
2. FIRST MENU SETTINGS AFTER INSTALLATION .....	10
2.1 User interface during free vend.....	14
2.2 User interface when payment system is connected.....	15
2.3 User interface drink selection screens	
2.4 How to program a recipe?.....	16
2.5 How to correct a recipe? .....	17
2.6 How to measure the weight of an ingredient only? .....	18
2.7 Adjustment rules	
2.7.1 Brewer .....	19
2.7.2 Brewer automatic pause (NEW! Brewer positions .....	20
Brewer start/ / pause Coffee <120ml Brewer start/ / auto pause Coffee >120ml	
2.7.3 Grinder (OptiFresh Bean) .....	21
Run in period grinding discs Grinding ideal Grinding too coarse Grinding too fine	
2.7.4 Coffee Waste .....	23
Hand dry (Ideal) Too wet Waste falls from the left side	
2.7.5 Troubleshooting .....	24
2.8 Detailed recipe settings.....	26
2.9 Timebar recipe settings	
3. PRINCIPLES OF OPERATION .....	27
3.1 Water management .....	28
3.2 Components.....	29
Inlet valve / Boiler / Steam thermostat / Dispensing valve / Sold state relais Fresh brew coffee canister / ingredient motor .....	25
Bean canister / coffee grinder / Freshbrew group / Drive unit Cup detection sensor / Ingredient and mixer system .....	26
Water vapour drain system / Door switches	
3.3 Cup detection (optional).....	31
3.4 Freshbrew group .....	33
3.4.1 Operation.....	34
3.4.2 Wiper tension adjustment .....	35
3.4.3 Wiper adjustment tips .....	36
3.4.4 Removing the brewer group .....	37
3.5 Drive unit.....	38
3.5.1 Operation .....	39
3.5.2 Shear pin	
3.5.3 Removing the drive unit	

3.6	Grinder (OptiFresh Bean).....	40
3.6.1	Basic settings .....	41
3.6.2	Service life .....	42
3.6.3	Replacing grinding disks .....	
3.6.4	Drive belt replacement.....	43
3.6.5	Cleaning .....	44
3.7	Instant group .....	45
3.7.1	Adjustable mixer speed .....	46
3.7.2	Ventilation mixer group.....	47
3.7.3	Ventilation waste bin .....	
3.8	Boiler system.....	48
3.8.1	Dispensing valves.....	50
3.8.2	Removing / replacing.....	51
3.8.3	Calibration .....	
4.	MENU STRUCTURE / DISPLAY.....	52
4.1	The Main menu .....	
4.2	The Operator menu.....	54
	[1.00] Free vend / [1.01] Clock / [1.02] Switching times .....	
	[1.03] Recipe counters / [1.04] Quick recipe .....	57
	[1.06] Software / [1.07] PIN-code / [1.08] OptiLight .....	
	[1.09] Backlight / [1.10] Cup sensors.....	58
	[1.11] Visual & Sound / [1.12] Change operator pin code .....	
	[1.13] Change Free Vend pin code / [1.14] Refill canisters .....	60
4.3	The Service menu.....	61
	[2.01] Quick recipe pro / [2.02] Button settings .....	
	[2.03] Recipe settings.....	64
	Recipe settings (continued).....	65
	Recipe settings (continued).....	66
	Recipe settings (continued).....	67
	[2.04] Settings .....	68
	Settings (continued) .....	69
	Settings (continued) .....	70
	Settings (continued) .....	71
	Settings (continued) .....	72
	[2.05] Reset counters / [2.06] Service boiler .....	73
	[2.07] Hardware test .....	74
	Hardware test (continued) .....	75
	[2.08] Read log / [2.09] Clear log / [2.10] Load defaults.....	76
	[2.11] SD menu .....	77
	SD menu (continued) .....	78
	[2.12] Change PIN / [2.13] Additional settings.....	79
	[2.16] Cleaning management .....	80



5. SETTINGS & SOFTWARE.....	81
5.1 Save settings .....	83
5.2 Load settings .....	84
5.3 Software installation.....	85
6. MAINTENANCE .....	90
6.1 Daily rinsing program .....	
6.2 Weekly cleaning program.....	91
6.3 Change brewer filter.....	92
6.4 Periodic maintenance.....	93
6.4.1 Service boiler .....	
6.4.2 Service brewer.....	94
6.5 Service contracts.....	95
6.5.1 Servicing .....	
6.6 Descaling instructions .....	98
6.7 Maintenance freshbrew group.....	102
6.7.1 Replacing the Brewer Cylinder and Teflon Seal .....	
6.7.2 Replacing the T-Bar & Housing, Crank Arm, Triple Cam, and the Brewer Arms.....	104
7. TRANSPORT / STORAGE.....	107
8. COMPONENT ACCESSIBILITY .....	108
9. ELECTRONICS OVERVIEW .....	110
9.1 Main PC board .....	
9.1.1 Main circuit board inputs .....	
9.1.2 Main circuit board outputs .....	112
9.1.3 Main circuit board communication .....	113
9.2 Interface / Display .....	114
9.2.1 Connections .....	
9.3 Power supply.....	115
9.3.1 Connections .....	
9.4 Grinder circuit board.....	116
9.4.1 Connections .....	
10. TROUBLESHOOTING .....	117
10.1 Read log .....	
10.2 Clear log .....	
10.3 Display messages during use .....	118
10.4 Fault analysis .....	121
11. SPECIAL OPTIONS.....	124
11.1 Installation OptiFesh NG Hot&Cold .....	
11.2 Installation OptiBean with waste to litter bin.....	125

- 12. PAYMENT SYSTEMS ..... 126
  - 12.1 Coin mechanism (optional)
    - 12.1.1 Standard configuration
    - 12.1.2 Coin blocking
    - 12.1.3 Activate existing token ..... 127
    - 12.1.4 Programme a new token
    - 12.1.5 Accepting euros and tokens
    - 12.1.6 Accepting tokens only ..... 128
    - 12.1.7 Coin channel cleaning
  - 12.2 Coin changer (optional) ..... 129
    - 12.2.1 Tube filling
    - 12.2.2 Tube emptying
    - 12.2.3 Programme a new token ..... 130
    - 12.2.4 Coin channel cleaning
    - 12.2.5 Fault analysis
  
- DIMENSIONS ..... Last page of this document



© 2017 Animo®

All rights reserved.

No part of this document may be reproduced and/or made public in print, microfilm, electronic media or any other form without the manufacturer's prior consent. This also applies to the corresponding diagrams and/or charts.



## FOREWORD

### Purpose of this document

This document is intended as a service appendix in addition to the user manual with which **authorised trained service personnel** can install, program and maintain this machine.

- By **authorised trained service personnel** is meant: persons who can install, program, maintain and carry out repairs on the machine.

Most of the settings, including the product settings are secured by a PIN code. This PIN code is intended to prevent the user accessing the service menu.

**It is recommended not to leave this document with the user after installation and to change the standard factory PIN code.**

All chapters and sections are numbered. The various figures referred to in the text can be found in the illustrations at the front of this booklet or with the subjects concerned.

---

## Pictograms and symbols



### **NOTE**

General instructions for: WARNING, CAUTION or NOTE.



### **CAUTION !**

Warning of possible serious damage to the device or bodily harm



### **WARNING**

Warning of electricity and / or current danger



### **WARNING**

Warning of electrostatic discharge (ESD) to electronics.



### **WARNING**

Warning for serious crushing injury

## 1. INTRODUCTION OPTIFRESH TOUCH

### Explanation OptiFresh Touch type designation:

Designation	Meaning	Description	Cup volume	Dispensing Hight cup	Thermos jug
1e digit	Number canisters	1 - 4			
Bean	with grinder	whole beans			
-	Cups / mugs		50-240ml	60-155mm	167mm
Touch	Touch screen	Touch screen operated model year 2017			
H&C	Hot&Cold	prepared for cabinet with cool unit			



OptiFresh Touch

- 1 (H&C)
- 2 (H&C)
- 3 (H&C)
- 4 (H&C)



Base cabinet

Hot & Cold



OptiFresh Bean Touch


- 1 (H&C)
- 2 (H&C)
- 3 (H&C)
- 4 (H&C)




With access to litter bin

### 1.1 Principles of operation

#### OptiFresh Touch

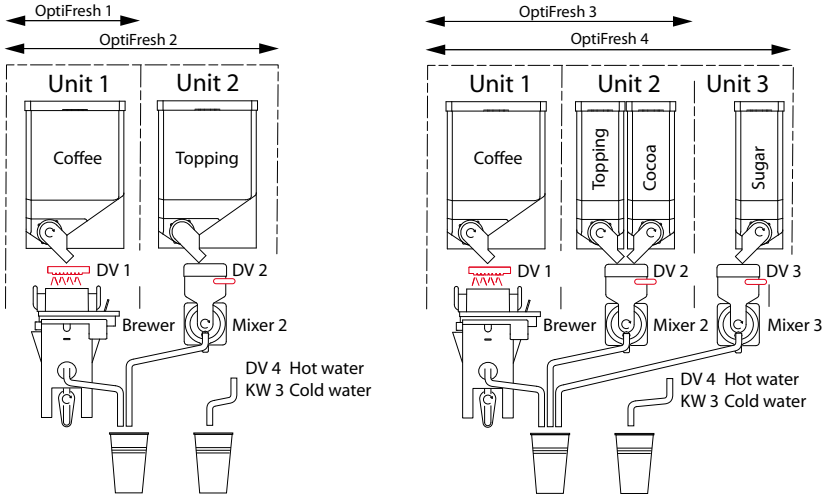

#### OptiFresh Bean Touch

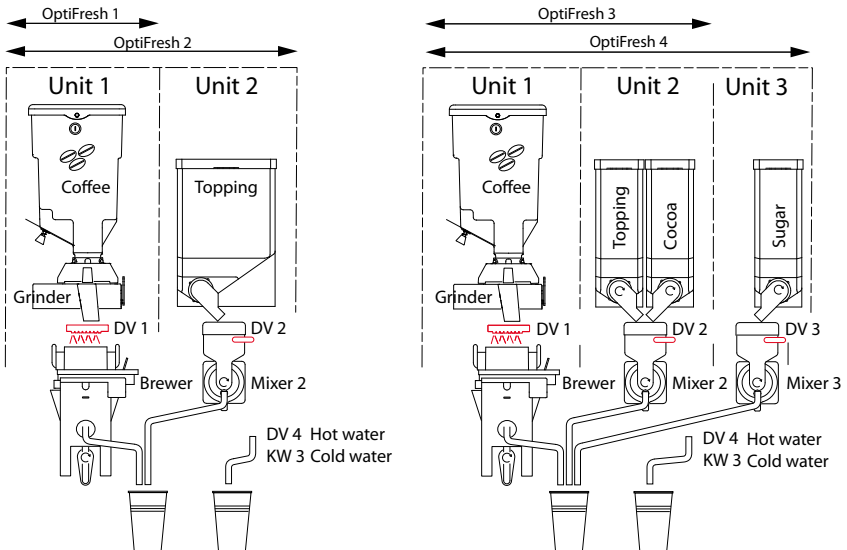



## 1.2 Model code

The OptiFresh (Bean) Touch models are standard executed according below canister configuration.

OptiFresh (Bean) NG		Model code	Canister configurations				
			1	2	3	4	5
1		<b>3F 1A</b>	<b>Coffee (beans)</b>				
2		<b>3F 2A</b>	<b>Coffee (beans)</b>		<b>Topping</b>		
		3F 5A			Cocoa		
		3F 6A			Instant coffee		
3		<b>3F 3A</b>	<b>Coffee (beans)</b>		<b>Topping</b>	<b>Cocoa</b>	
		3F 7A			Topping	Instant coffee	
		3F 8A			Cocoa	Instant coffee	
		3F 9A			Topping	Sugar	
4		<b>3F 4A</b>	<b>Coffee (beans)</b>		<b>Topping</b>	<b>Cocoa</b>	<b>Suiker</b>
		3F AA			Topping	Cocoa	Instant coffee

EN

## Button settings

Download here an overview of the standard-and optional recipes: <http://www.animo.eu/en/sd>

Enter the web site address in your web browser and your can download the relevant technical documentation without requiring a login code.

### 2. FIRST MENU SETTINGS AFTER INSTALLATION


The following data must be set in the operator and service menus immediately after the machine's first use. The language factory setting is English.

#### Switch ON the machine

- Follow the instructions on the display



- Press **SELECT A DRINK** for 2 seconds for easy access the **OPERATOR MENU**

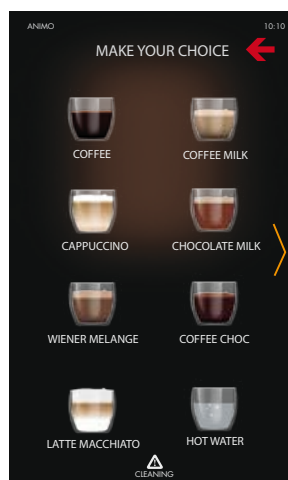

Don't want a easy access of the Operator menu?

Go to menu 1.11 Sound & Vision / 1.1.06 Menu key access / and select Yes. Now this function only works when the door key is 'open' so only the key owner can enter the menu.

#### 0.06 OPERATOR MENU



Select to **OPERATOR MENU** to enter the operator menu  
Use PIN-code 1 - 1 - 1 - 1 - 1



One step back



Leave the menu

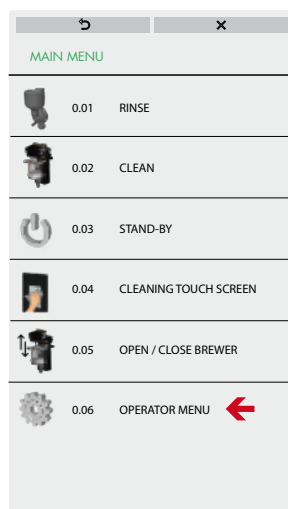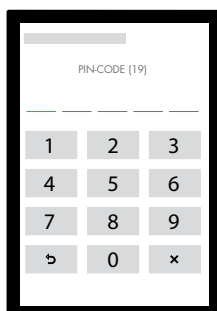

## OptiFresh (Bean) Touch

### Operator menu (Page 54)

- 1.01 Clock Time (set)  
Date (set)
- 1.02 Switching times (set)

The machines energy save mode is standard activated, if this function is not required it can be deactivated. To keep on saving energy please always program a timer so the machine will switch on and off automatically

- 1.08 OptiLight

The OptiLight is standard set on 'Random', it runs trough the whole colour spectrum in 10 minutes. If only one colour is required set random on 0 min. and mix your own colour using red, blue and green.

- 1.07 SERVICE MENU

Select to **SERVICE MENU** to enter the service menu

Use PIN-code 2 - 2 - 2 - 2 - 2



OPERATOR MENU	
1.00	FREE VEND <span style="float: right;">←</span>
1.01	CLOCK <span style="float: right;">←</span>
1.02	SWITCHING TIMES
1.03	RECIPE COUNTERS
1.04	QUICK RECIPE
1.06	HARDWARE / SOFTWARE <span style="float: right;">←</span>
1.07	SERVICE MENU <span style="float: right;">←</span>
1.08	OPTILIGHT
1.09	BRIGHTNESS DISPLAY
1.10	CUP SENSORS
1.11	SOUND & VISION
1.12	CHANGE OPERATOR PIN
1.13	CHANGE FREE VEND PIN

EN

### Service menu (Page 61)

- 2.04 Settings Language (set)
- 2.06 Service boiler Service moment  
Cups (set)  
Months (set)

### Cups

The message indicates that the device must be descaled. If a water filter is fitted (recommended), this is also an indication that the filter must be replaced.



We strongly recommend to use a water filter.

Calculate your filter capacity by using the capacity information provided with the filter. Set the amount of cups into the menu so the signal [Service Boiler] appears on the display.

SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS <span style="float: right;">←</span>
2.05	RESET COUNTERS
2.06	SERVICE BOILER <span style="float: right;">←</span>
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.16	CLEANING MANAGEMENT

(continued...)

### Months

If desired a point of time can be set when the service boiler needs to appear. Example: If 12 months is set during installation the boiler service message will appear on the display 12 months after installation.

### Water hardness table

Water quality	Hardness				Service moment after (cups)
	°D	°F	mmol/l	mgCaCo3/l	
Very hard	18-30	32-55	3,2-5,3	321- 536	5,000
Hard	12-18	22-32	2,2-3,2	214-321	12,500
Average	8-12	15-22	1,4-2,2	268-214	20,000*
Soft	4-8	7-15	0,7-1,4	72-268	40,000
Very soft	0-4	0-7	0- 0,7	0-72	0 = off



- 2.02 *Button settings*                      <Recipe name>                      (set)

Every machine contains pre-programmed basic recipes. Each button can be changed, if required. Which recipes are factory-set can be found in recipes settings document which can be downloaded. See <http://www.animo.eu/en/sd>

See chapter 2.1 How to program a recipe

- 2.01 *Quick recipe Pro*                      <Recipe name>  
    *Cup volume (ml)*                      (set)  
    *Coffee (sec.)*                      (set)  
    *Topping (sec.)*                      (set)  
    *Chocolate (sec.)*                      (set)  
    *Test receipt*

See chapter 2.2 How do you correct a recipe?

SERVICE MENU	
2.01	QUICK RECIPE PRO 
2.02	RECIPE BUTTON SETTINGS 
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.16	CLEANING MANAGEMENT


**(continued...)**

- Select **CLEANING** to run the cleaning program (without cleaning tablet) to reset the cleaning message





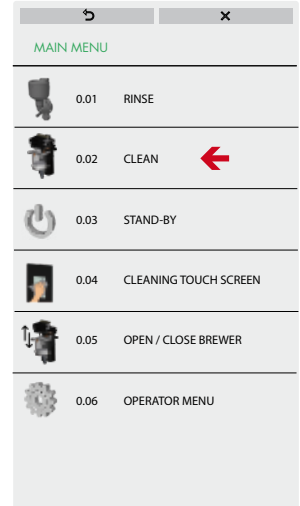

**Shut down**


Please follow chapter 6 Transport / Shut down to empty the boiler system before transporting or putting the machine in storage.



EN

**PIN CODE overview**





Owner / key holder	PINCODE	Can be changed
Operator menu	1 - 1 - 1 - 1 - 1	see menu 1.12
Stand-by	  	
Jug		
Free vend pin	1 - 2 - 3 - 4 - 5	see menu 1.13
		
<b>Trained service engineer</b>		
Service menu	2 - 2 - 2 - 2 - 2	see menu 2.12

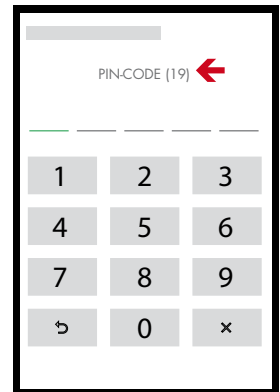

### 2.1 User interface during free vend

The user interface helps the user to select their drink (recipe) and informs them the progress of the process. Some of the items below are standard not activated. The menu number behind it shows where it can be activated in the menu.

1. Swipe or press to move to screen 2 and/or 3, depending on the number of drinks programmed.
2. Screen number and position
3. Cleaning and service attention signals
4. Show logo on cup (operator menu 1.11.02)
5. Show allergy information (operator menu 1.11.05)
6. Back button
7. Process
8. Show repeat recipe (operator menu 1.11.04)
9. Strength settings coffee, cocoa, milk or sugar / Number of cups in jug

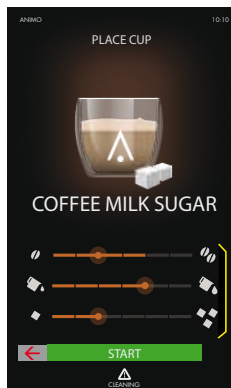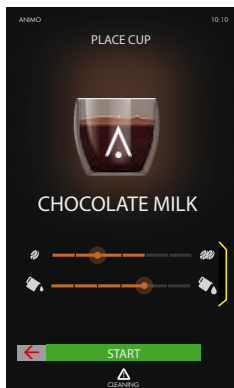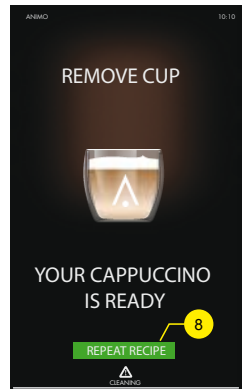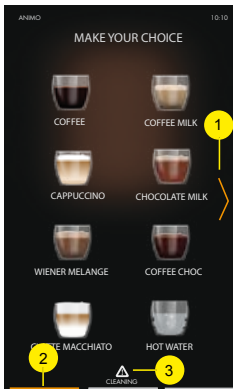

## 2.2 User interface when payment system is connected


In user interface below shows how the user is informed when its switched in the payment modus. Some of the items below are standard not activated. The menu number behind it shows where it can be activated in the menu.

1. This line shows information how a drink must be paid (money, chip, card, etc.).
2. Credit can be displayed it the display. (service menu 2.04.05.00.09)
3. Each drink shows its own price. (service menu 2.02.01.02)
4. Free vend pin (1 - 2 - 3 - 4 - 5) (service menu 2.02.0x.00)




## 2.3 User interface drink selection screens

There are maximum 3 screens to program. Each screen contains maximum 8 drink positions. If there are (eg.) 12 drink selections programmed, only 2 screens are active. If there are (eg.) 20 drink selections programmed, 3 screens are active.

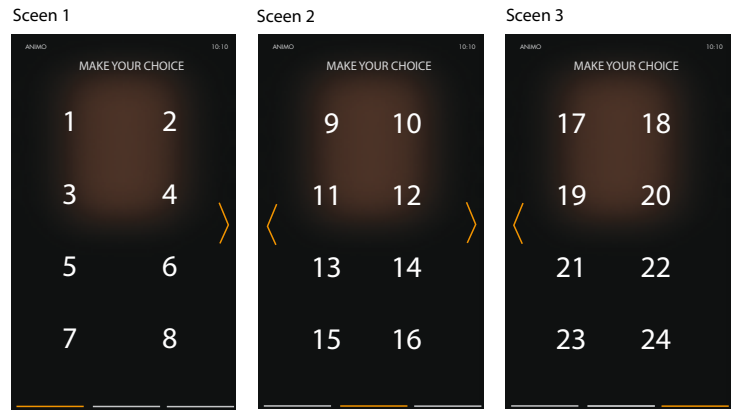


### 2.4 How to program a recipe?

Every machine contains pre-programmed basic recipes. Each key can be changed, if required. In below example button 1 will be change from **coffee** into **capuccino**.

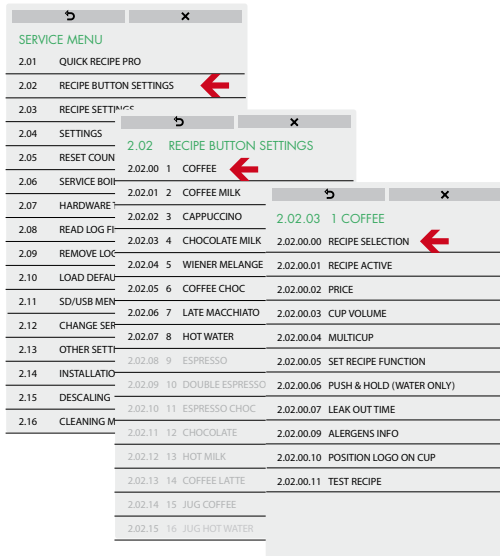

1. Navigate to above service menu item.
2. Select Recipe button settings / 1 Coffee / Button
  - The black and grey texts shows the recipes which are available in the machine.
  - The black are Active (buttons are visible in the display).
  - The grey text are not active (to activate go to RECIPE ACTIVE and activate it).
3. Select the required recipe in the pre-programmed recipe list and press OK.

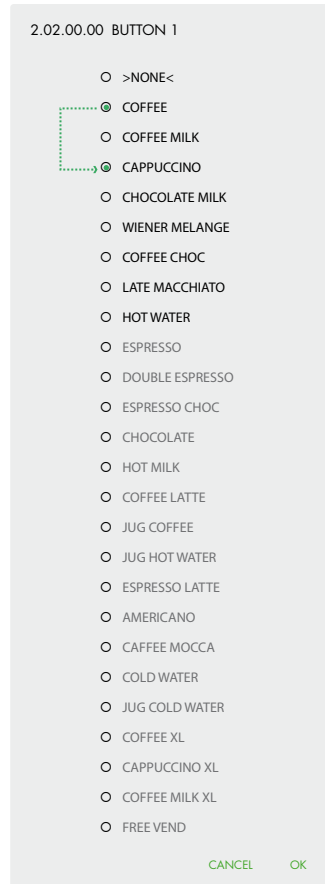

example; OptiFresh 3 Touch

**i** Which recipes are factory-set can be found in recipes settings document which can be downloaded. See <http://www.animo.nl/en/sd>


**i** In stead of a RECIPE a Free Vend PIN can be programmed. Use this Free Vend PIN to switch the touch panel on free vend when a payment system is active.





## 2.5 How to correct a recipe?

Easy way to check the dispensed drink- volume and taste without leaving the menu!

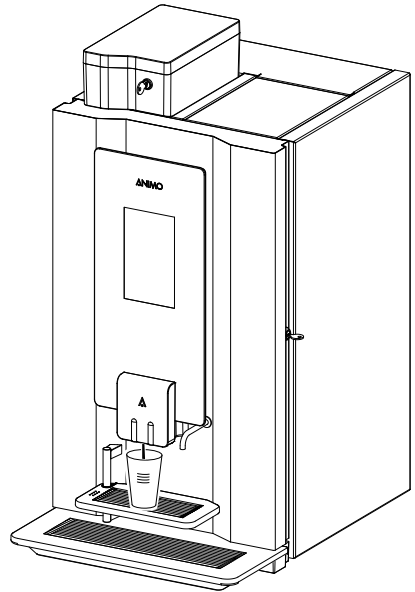

1. Navigate to above service menu item
2. Change one or more settings (Cup volume, Coffee, Topping, etc.)

**i** When the cup volume (menu parameter) is increased, the coffee, Topping, Chocolate and Sugar will be automatically proportional increased.

The Coffee, Topping and Cocoa setting is a dispensing time in seconds for a 100ml drink. When increasing the cup volume the Topping and/or Cocoa dispensing will be automatically proportional increased (not visible in the display).

3. Place an empty cup under the outlet and press TEST RECIPE. Your drink is made.

If the optimum settings are found for the first coffee button copy the set coffee time for all the coffee drinks; Coffee Milk, Cappuccino, Latte Macchiato, etc.

### 2.6 How to measure the weight of an ingredient only?

Only the grinder / ingredient motor will be driven (no water is dispensed).

**i** It is strongly recommended to check the coffee measurement using a set of mini scales. These are simple to order via the Internet.

SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS
2.11	SD/USB MENU
2.12	CHANGE SERVICE F
2.13	OTHER SETTINGS
2.14	INSTALLATION
2.15	DESCALING
2.16	CLEANING MANAG


2.01 QUICK RECIPE PRO	
2.01.00	1 COFFEE
2.01.01	2 COFFEE MILK
2.01.02	3 CAPPUCCINO
2.01.03	4 CHOCOLATE MILK
2.01.04	5 WIENER MELANGE
2.01.05	6 COFFEE CHOC
2.01.06	7 LATE MACCHIATO
2.01.07	8 HOT WATER
2.01.02.01	COFFEE +/-
2.01.02.02	COFFEE +/-
2.01.02.03	TEST RECIPE


2.01.02.01 COFFEE	
+	1.50 S
-	
TEST INGREDIENT	CANCEL OK

2.01.02.02 TOPPING	
+	0.60 S
-	
TEST INGREDIENT	CANCEL OK




OptiFresh Touch

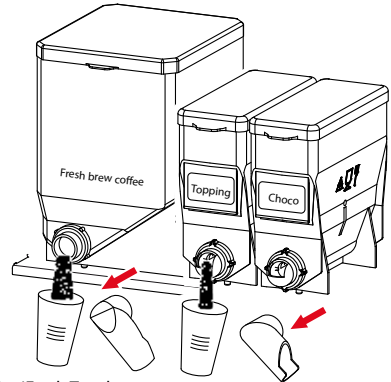

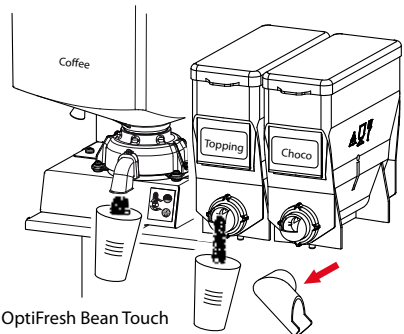OptiFresh Bean Touch

? gram

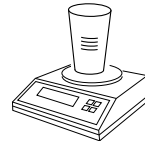

1. Navigate to above service menu item
2. Hold a empty cup under the outlet.
3. Press TEST INGREDIENT. Only the chosen ingredient will be dispensed.
4. Measure the weight of the ingredient

### 2.7 Adjustment rules

#### 2.7.1 Brewer

The OptiFresh Touch is executed with a fresh brew brewer

- A excellent black filter coffee can be made with 7,5 -15 grams (0,26 - 0,53 ounce) of coffee.
- When using pre-grinded coffee (OptiFresh NG) its preferable to use fresh brew quality which are especially developed for this type of Fresh brew machines.
- When using fresh beans (OptiFresh Bean NG) you must pay attention to the grinder settings.



EN

#### 2.7.2 Brewer automatic pause **NEW!**

When cup volumes bigger than 120ml are set, the brewer pauses are increased automatically. See Table on the right. This only applies for coffee!

Brewer tools	Large coffee means longer:
Pause 1	filling time
Pause 2	extraction time
Pause 3	coffee residue dry time
Pause 4	pour out time

**i** This function only applies for coffee. When its a coffee in combination with instant products (e.g. Cappuccino 200ml) the brewer pauses are not increased automatically.

Example:

Coffee black 120ml, pause 3 brewer is 1,5 sec.  
 Coffee black 120 --> 180ml, pause 3 brewer is automatically increased according the graphic on the next page.

A manual correction on one or more brewer pauses will always be possible. Just navigate to the pause brewer you want to change and press + or -.

The basic 120ml and the calculated value (180ml) is changing. The value between the clamps is the new pause 3 brewer time.

**i** Press TEST RECIPE to start the drink to check the new setting.


The screenshots show the following menu structure:

- SERVICE MENU**
  - 2.01 QUICK RECIPE PRO
  - 2.02 RECIPE BUTTON SETTINGS
  - 2.03 RECIPE SETTINGS ←
  - 2.04 SETTINGS
- 2.03 RECIPE SETTINGS**
  - 2.03.00 1 COFFEE ←
  - 2.03.01 2 COFFEE MILK
  - 2.03.02 3 CAP
  - 2.03.03 4 CHC 2.03.00.00 1 COFFEE
  - 2.03.04 5 WIEI 2.03.00.00 UNIT 1 ←
  - 2.03.05 6 COF 2.03.00.01 UNIT 2
  - 2.03.06 7 LATI 2.03.00.02 UNIT 3
  - 2.03.07 8 HOT 2.03.00.03 HOT WATER VALVE DELAY TIME (DV4)
- 2.03.00.00 UNIT 1**
  - 2.03.00.00 BREWER VALVE DELAY TIME (DV4)
  - 2.03.00.00.01 BREWER VALVE (DV4)
  - 2.03.00.00.02 RINSE 1 DELAY TIME
  - 2.03.00.00.03 RINSE 1
  - 2.03.00.00.04 COFFEE DELAY TIME
  - 2.03.00.00.05 COFFEE
- 2.03.00.00.13 PAUSE 3 BREWER**
  - START 1 BREWER
  - PAUSE 1 BREWER (FILLING)
  - START 2 BREWER
  - PAUSE 2 BREWER (EXTRACTION) ←
  - START 3 BREWER
  - PAUSE 3 BREWER (DRYING)
  - START 4 BREWER
  - PAUSE 4 BREWER (POUR OUT)

The adjustment screen for PAUSE 3 BREWER shows:

- Current value: 1.5 s : 120 ml
- Target value: (5.1 s : 180 ml)
- Buttons: +, -, TEST RECIPE, CANCEL OK


### Brewer positions

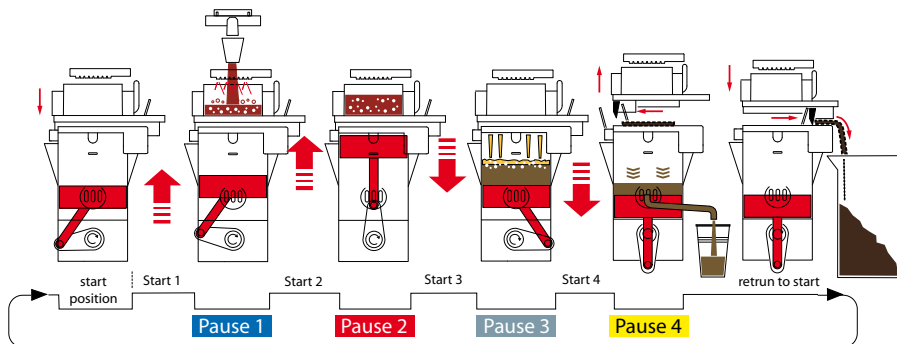

### Brewer start / pause Coffee < 120ml

Cup volume	Start 1	Pause 1	Start 2	Pause 2	Start 3	Pause 3	Start 4	Pause 4
120 ml	1,0	6,0	2,4	2,5	3,0	1,5	1,9	3,5


### Brewer auto pause > 120ml

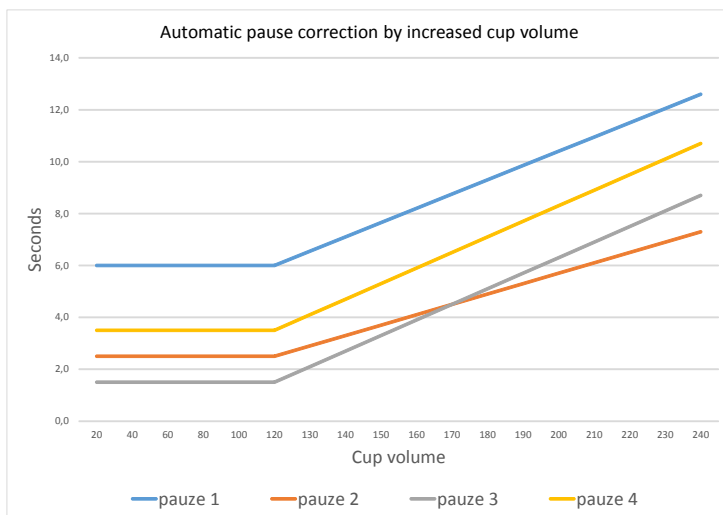

Graphic: Automatic Brewer Pause settings in relation to Cup volume (coffee only)

### 2.7.3 Grinder (OptiFresh Bean)

- There are two factors that affect the output of the coffee grinder. The set grinder duration (**2.1 Quick recipe pro / Coffee**) and the **grinding fineness** of the coffee grinder.
- When the coffee grinder is set coarser, the volume of the grind increases.
- When the coffee grinder is set finer, the volume of the grind decreases.
- Only increase the coffee grinder fineness when the grinder is running! Adjustment from fine to coarse can be done when the grinder is stationary.
- Only adjust the grind setting in steps of 1/4 turn.  
Note: only the 3rd cup of coffee is 100% made with the changed grind fineness! (do not taste or measure the first 2 cups).

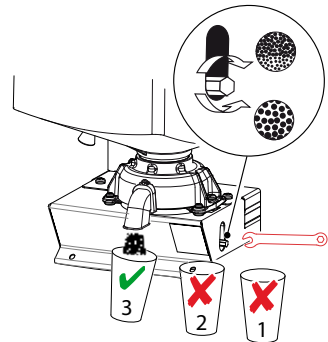


EN

### Run in period grinding discs

Tests have shown that new ceramic grinding discs have a run in period of 10 kg of coffee beans (about 1350 cups at 7.5 g




We recommend to re-adjust (finer) the grinder after this period.

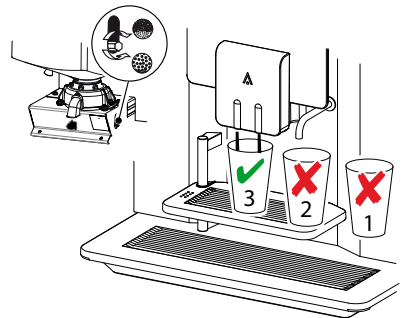

### Grinding Ideal

If the brewer piston runs down in the **start 3** brewer position a beige foam layer is (briefly) creates on the coffee.


The grinding adjustment is ok, the brewing process runs perfectly.

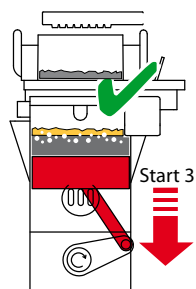

### Grinding too coarse

Weak coffee, High coffee dose. The grain size is too large to get a good extraction. The coffee will be under extracted. To get a good cup of coffee the coffee dosage must be extreme high (too much) There is the danger of overdose.


**i** Adjust the coffee grinder finer (turn adjustment shaft clockwise). Reduce the coffee dosage in de recipe menu.

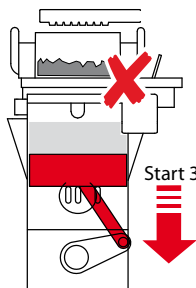

### Grinding too fine

The brewer piston is pulled up the **pause 3** due to a high vacuum in the brewer cylinder. The coffee is grinded too fine, the flavour extraction is too extreme (too many bitter substances). The brewer is overloaded, and can brake down!


**i** Adjust the coffee grinder coarser (turn adjustment shaft counterclockwise).

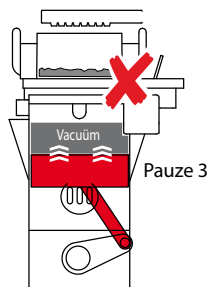

## 2.7.4 Coffee Waste

### Hand dry (ideal)

When the coffee waste is wiped from the filter it must be hand dry. The wiper wipes the coffee residue easy from the filter into the waste bin.

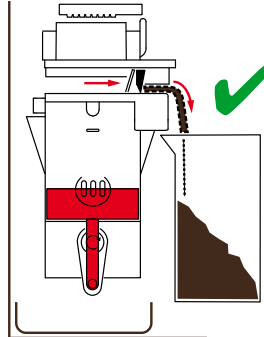

### Too wet

When the coffee residue is too wet the brewer must use high force to wipe the wet residue from the filter.




If the residue is too wet, increase pause 3 brewer (vacuum time)

#### 2.03 Recipe setting

2.03.01 Coffee (drink)

Unit 1

Pause 3 brewer (Drying)

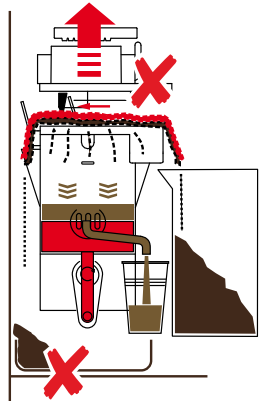

### Waste falls from the left side

Only when the coffee residue bed is flat and even the wiper can move freely (to the left) without touching any coffee bumps. Coffee will be pushed from the left of brewer if the coffee residue bed is not flat.




If the residue is not flat increase brewer 2 pause (extraction time) or reduce the dispensed coffee (grams)

#### 2.03 Recipe setting

2.03.01 Coffee (drink)

Unit 1

Pause 2 brewer (Extraction)

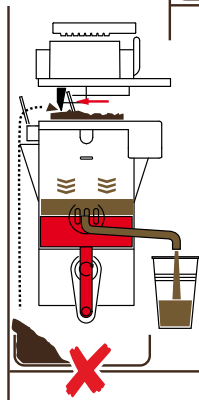

### 2.7.5 Troubleshooting

Problem	Probable cause	Action
Coffee does not taste strong enough.	The used coffee is too coarse.	OptiFresh: Prevent overdosing, use a 'fresh brew' coffee quality. This quality has coffee particles which are much smaller to shorten the extraction time. OptiFresh Bean: adjust the coffee grinder finer.
	The contact time of the coffee/water mixture is too short.	Extend <b>pause 2 brewer time</b> , this increase the coffee/water mixture contact time.
Coffee taste too strong and/or too bitter.	The used coffee is too fine.	OptiFresh Bean: adjust the coffee grinder courser.
	The contact time of the coffee/water mixture is too long.	Shorten <b>pause 2 brewer (extraction) time</b> , this decrease the coffee/water mixture contact time.
The in cup coffee volume is suddenly too less.	The boilers overflow is obstructed so the boiler is vacuumed.	Check if the overflow outlet, located just above the waste bin, is not being obstructed by a plastic bag.
Coffee stay behind in the brewer cylinder.	The coffee outlet does not stay in position long enough.	Extend <b>pause 4 brewer time (pour out)</b> , the coffee outlet stays open longer.
The coffee flows out too slowly from the brewer.	The piston does not drops far enough and close the spout partially.	Extend <b>start 4 brewer</b> so the piston drops further.
1st cup of coffee overflows	Brewer dispensing valve (DV1) does not close. During the night the brewer fills with water	Check Brewer dispensing valve (DV1), descale or replace the valve.
During the preparation of Cappuccino and Latte macchiato, the milk layers were disrupted.	The coffee flows out too quickly from the brewers sprout.	Shorten <b>start 4 brewer</b> so the brewers spout does not opens completely and the coffee slowly runs out. Its possible that <b>pause 4 brewer</b> need to be extended too.



Problem	Probable cause	Action
The wiper pushes against the coffee residue when moving to the left. The brewer unit does not rise far enough.	The brewer unit is hindered during the upward movement.	Check if the brewer unit is able to move upwards freely.
	The coffee bed is not flat enough.	Extend <b>pause 2 brewer (extraction)</b> to give the coffee the time to get wet completely. This mostly result in a flat coffee bed after the vacuum process.
The coffee residue remains too wet. Coffee residue drops from both sides when the brewer chamber lifts.	The permanent filter is dirty or worn.	Clean or replace the permanent filter.
	The coffee residue is not being vacuumed long enough.	Execute brewer motor calibration program.
		Extend <b>pause 3 brewer (vacuum)</b> time, this increases the vacuum process time.
Check if vacuum is lost because the piston moves down too far down. Shorten <b>start 3 brewer</b> time if coffee still remains too wet.		
If the above-mentioned problem is not resolved:	Check the brewer chamber and cylinder for fractures.	Replace the defective parts.
	Check the cylinder for wear and tear or scratches.	Replace the defective parts.
	Check the Teflon seal for wear and tear.	Replace the defective parts.

EN

### 2.8 Detailed recipe settings

To change detailed recipe settings (service menu 2.3) you first need to be aware of the various parts such as valves, brewer motor, ingredients motor and mixers that work together. See section 2.6 Time bar recipe settings.

The following rules should be taken into consideration:


- Water (valves) are easily set in millilitres.
- Motor running times (Ingredients/Mixers/Brewer) are set in seconds (0.01 second steps)
- All parameters (Water and Ingredients) are based on a 100 ml drink and the programme automatically converts them to the cup volume as set in 1.4 / 2.1 Quick recipe and 2.2 Button settings.
- If a drink contains DV1 and DV2, the total amount of water should always be 100 ml when combined. For DV1, DV2 and DV3, this amount = > 100 ml.
- A Rinse parameter is used to ensure that the brewer unit and mixers are properly rinsed after making a drink. After the mixers are almost empty a small amount of hot water is dispensed to the mixer so that it is as clean as possible on completion.

A realistic rinse value is 7.5 ml. Caution: this does not need to be deducted from the amount of water as the programme does this automatically!


Example: Set parameter for DV2 = 100 ml, Rinse 2 = 8 ml -->

Programme carries out the following action: DV2 = 92 ml, Rinse 2 = 8ml

### 2.9 Time bar recipe settings

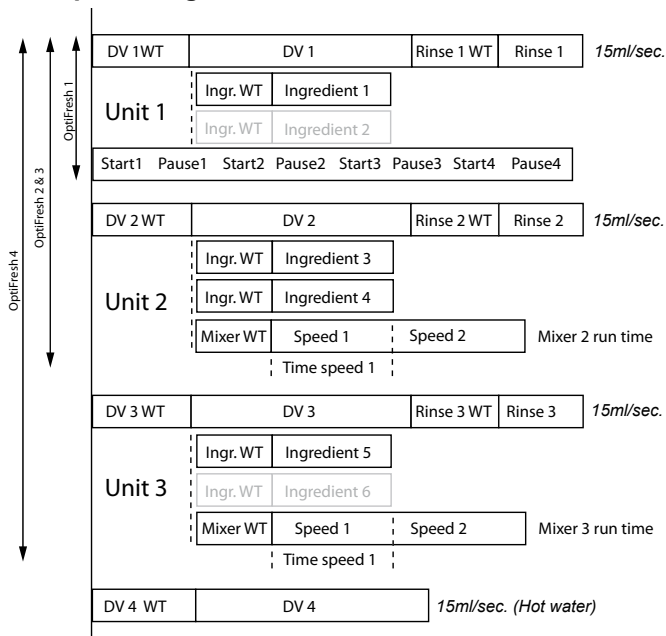

3. PRINCIPLES OF OPERATION

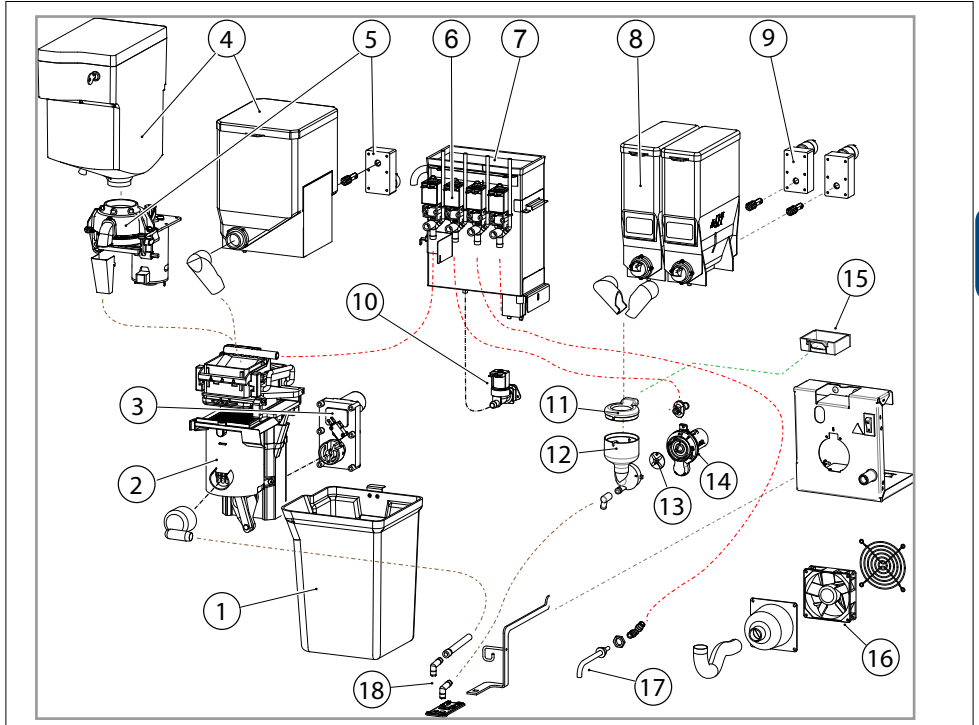


EN

Item	Description
1.	Coffee waste bin
2.	Freshbrew group
3.	Gear motor brewer
4.	Coffee bean canister (OF Bean) Fresh brew canister (OF)
5.	Coffee grinder (OF Bean) Gear motor fresh brew canister (OF)
6.	Dispensing valve
7.	Boiler
8.	Instant canisters

Item	Description
9.	Gear motor instant canister
10.	Inlet valve
11.	Evaporation extractor ring
12.	Mixer housing
13.	Mixer motor
14.	Mixer impellor
15.	Extraction tray
16.	Ventilator
17.	Hot water outlet
18.	Coffee outlet / Drink outlet (instant)






### 3.1 Water management




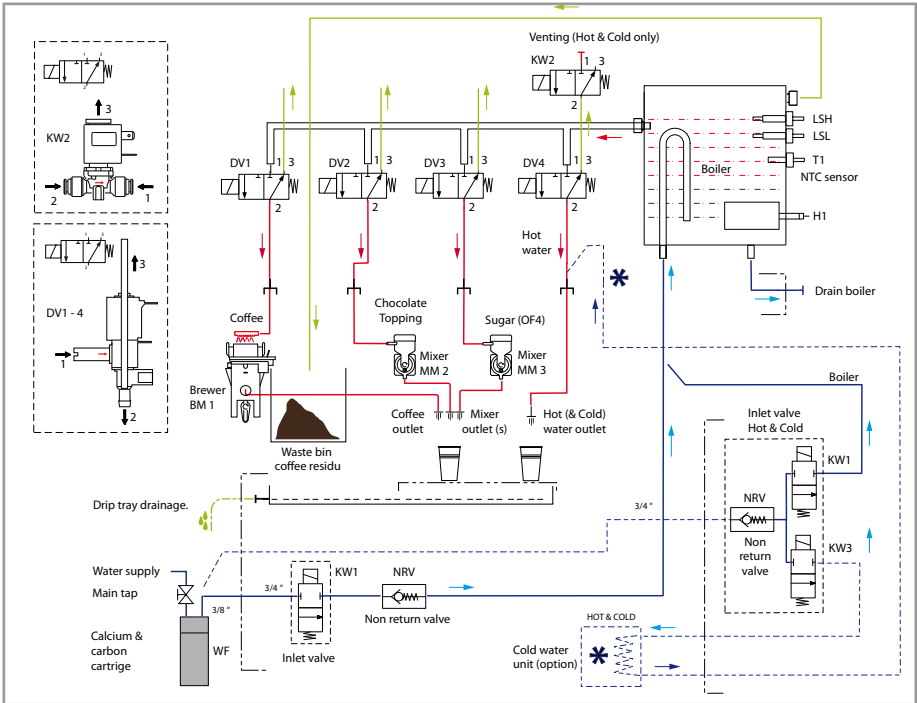




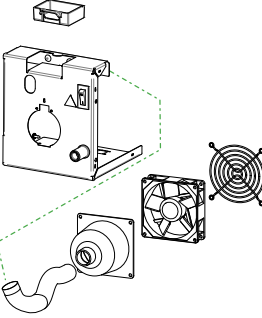
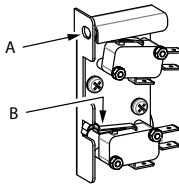
Code	Description
WF	Water filter
KW1	Inlet valve
NRV	Non-return valve
H1	Boiler
T1	NTC sensor
LSL	Minimum level sensor
LSH	Maximum level sensor
DV1	Brewer dispensing valve

Code	Description
DV2	Mixer 2 dispensing valve
DV3	Mixer 3 dispensing valve
DV4	Hot water dispensing valve
KW3	Cold water inlet valve (H&C optional)
BM1	Fresh brew group
MM2	Mixer system Choco/Topping
MM3	Mixer system sugar
KW2	Venting valve (H&C optional)

## 3.2 Components

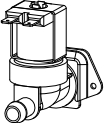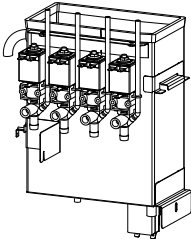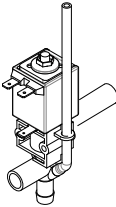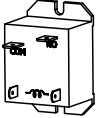Component	Image
<p><b>Inlet valve KW1 [02801]</b> Opens and closes the water supply, 24 Vdc coil closure. Water flow abt. 2,5 Litre/min.</p>	
<p><b>Boiler</b> Open 3L boiler manufactured entirely from material AISI 316L , insulated.</p> <p><b>Temperature sensor [1000740]</b> Screw thread M12x1 / material AISI 316L / 100 kΩ/25°C</p> <p><b>Heating element H1 [03216]</b> 230V 2200W</p> <p><b>Boil-dry protection [03093]</b> Activation temperature 135°C / 1 pole / manual reset</p> <p>See chapter <b>3.7 Water boiler</b> for operation.</p>	
<p><b>Dispensing valve [03250]</b> Supplies water to the fresh brew unit and mixers.</p> <p>See chapter <b>3.7.1 Dispensing valves</b> for operation.</p>	
<p><b>Steam thermostat [03484]</b> The steam thermostat contact is in series with the solid state. This thermostat prevents the boiler from boiling empty when the solid state breaks down in a operating condition. The thermostat switches the heating element OFF when steam escapes from the boiler. The thermostat must be manually reset.</p>	
<p><b>Power Relais [1004596]</b> The heating element, brewer motor and pump is controlled by a power relay.</p>	

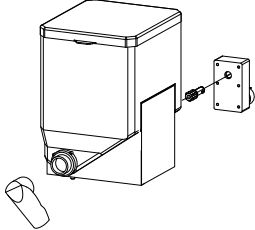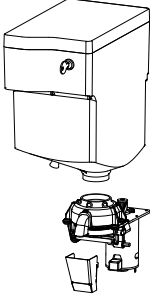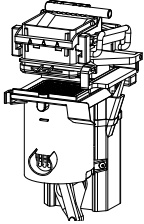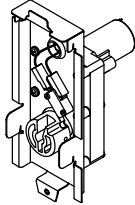Component	Image
<p><b>Model OptiFresh NG is executed with a fresh brew canister (pre-grinded coffee)</b></p> <p><b>Fresh brew canister [03400]</b> The coffee canisters is powered by a 130RPM motor. The coffee is forced out of the canister by a coil and drops through the dispensing bent pipes into the fresh brew unit</p> <p><b>Ingredient motor [02906] + Drive shaft [03330]</b></p>	
<p><b>Model OptiFresh Bean NG is executed with a bean canister and a coffee grinder</b></p> <p><b>Bean canister [1001671]</b> The bean canister supplies coffee to the coffee grinder and is easy to remove.</p> <p><b>Coffee grinder [1000665]</b> The coffee grinder grinds the beans and fills the brewer with a precisely measured quantity of coffee. See Section 3.6 <b>Coffee grinder</b> for the operation.</p>	
<p><b>Fresh brew group [13622]</b> (Pre)grinded coffee and hot water are dispensed onto the permanent filter and are drawn through the filter by a piston (vacuum). After the coffee is dispensed to the cup the coffee residue is wiped away by the filter wiper and drops into the waste bin. See Section 3.4 <b>Fresh brew group</b> for the operation.</p>	
<p><b>Gear motor unit [1001149]</b> The fresh brew group is been driven by a 24Vdc 5 RPM gear motor. On the outgoing shaft is a plastic connector which drives the fresh brew unit. See Section 3.5 <b>Gear motor unit</b> for the operation.</p>	

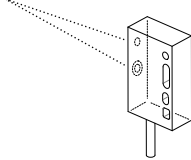Component	Image
<p style="text-align: center;"><b>Cup detection sensor [1003231]</b></p> <p>Reflection infrared sensor. This sensor can optionally build in the machine door. This sensor checks whether there is a cup / mug positioned under the (correct) spout.</p> <p style="text-align: center;">See chapter <b>3.3 Cup detection</b> for operation.</p>	
<p style="text-align: center;"><b>Ingredient and mixer system</b></p> <p>Each of the ingredient canisters is driven by a motor running at 130 rpm. The instant product (ingredient) is pushed out of the canister by a worm screw and falls via the dispensing nozzle into the mixer unit. At the same time, hot water is measured into the mixer unit. The instant product and the water are mixed together by the mixer impeller driven by the mixer motor running at 16,500 rpm. The drink flows via the drink outlet into the cup. See chapter</p> <p style="text-align: center;">See chapter <b>3.7 Instant group</b></p>	
<p style="text-align: center;"><b>Water vapour drain system</b></p> <p>Most of the water vapour given off during the mixing is collected by the vapour drain ring and extracted via the extraction tray by the fan. The instant residue is collected by the extraction tray. The extraction tray can be easily removed (for cleaning) by dismantling the mixer unit. This largely prevents water vapour getting into the canister outlet and the ingredient becoming moist.</p> <p style="text-align: center;">See chapter <b>3.7.1 Ventilation mixer group</b></p>	
<p style="text-align: center;"><b>Door switches</b></p> <p>There are two door switches on the inside of the right side wall. Switch A is activated when the door is closed, and switches the machine off when the door is opened. Switch B is operated when the door lock is locked and switches the hot water valve DV4 when the lock is opened.</p>	

EN

### 3.3 Cup detection (optional)

The sensors detect the presence of a cup below the coffee outlet of the beverage dispenser. Coffee is only prepared when a cup has been placed. Also the outlet for hot water is equipped with a cup sensor. The sensitive sensors will detect paper cups, as well as porcelain or glass cups.

The new cup detection is extremely safe in use and will prevent you from wasting freshly brewed coffee or tea.




#### WARNING

- Keep the sensor windows free of dirt.
- Don't reach below the drink spouts when a drink is prepared.



#### Caution

- the cup detection sensors are standard activated.
- run the rinsing program with a closed door.
- when placing a cup the machine awakes itself from the energy safe mode

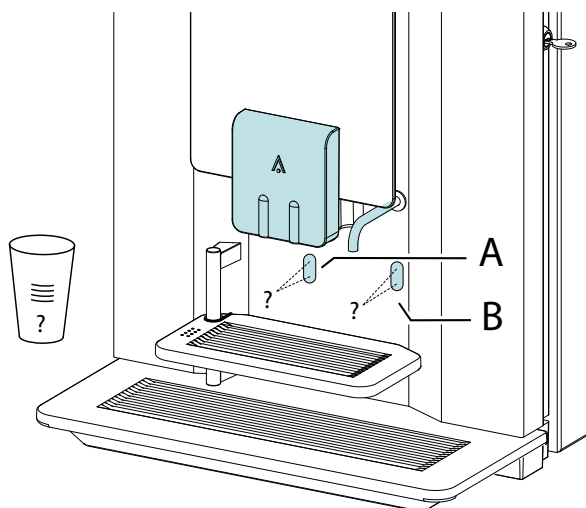

**A:** Cup detection for coffee, cappuccino, chocolate spout.

**B:** Cup detection for tea water spout




### 3.4 Fresh brew group

The fresh brew group consists of a fresh brew unit [ 4 ] and an drive unit [ 5 ]. The drive unit carries a DC gear motor with drives the fresh brew unit (Pre)grounded coffee [ 3 ] and hot water [ 4.1 ] are dispensed onto the permanent filter [ 4.4 ] and are drawn trough the filter by a piston [ 4.5 ] (vacuum). After the coffee is dispensed to the cup [ 4.6 ] the coffee residue is wiped away by the wiper [ 4.3 ] and drops into the waste bin. Next sections explain how the unit operates.

EN

Major components	Technical data	Material
<b>1. Bean canister / Fresh brew canister</b>	Content 2,2 kg / 1,8 kg	PC / PE
<b>2. Coffee grinder / canister gear motor</b>	See 3.6 Coffee grinder	
<b>3. Coffee guide</b>		st.st. / PE
<b>4. Fresh brew unit</b>	max. 240 ml with 16-20 gram coffee	
4.1 Water supply		PSU
4.2 Brewer chamber		PSU
4.3 Wiper		
4.4 Permanent filter	37 µm (art.no. 03488)	st.st.
4.5 Piston		Teflon
4.6 Coffee outlet		
<b>5. Drive unit</b>	See 3.5 Drive unit	

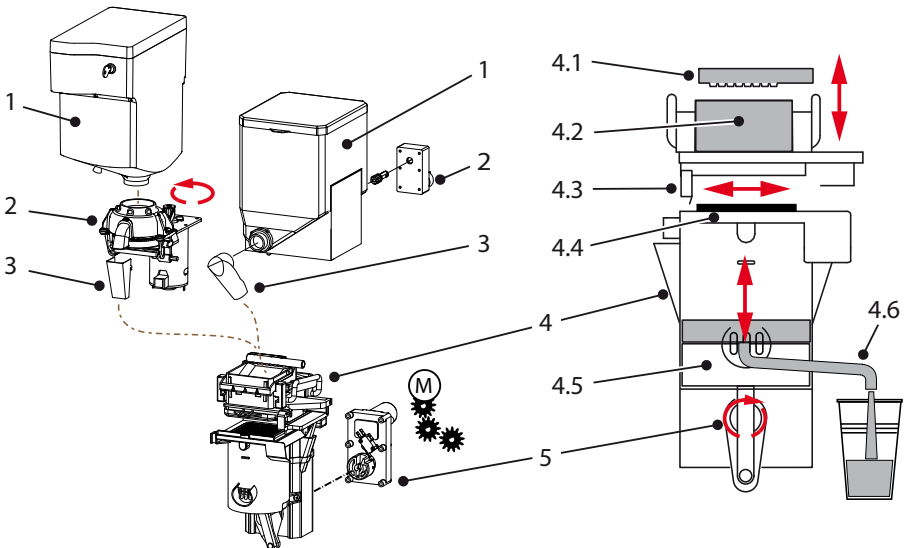


### 3.4.1 Operation

After making a fresh brew drink selection the following process starts:

Position	Action
Start 1	The piston leaves the start (home) position. Ground coffee and hot water is dispensed to the brewer chamber.
Pause 1	The piston stops just above the outlet. Coffee and hot water is still dispensed.
Start 2	The piston continues moving upwards, forcing air through the coffee grounds and water. The agitation created by the forced air mixes the coffee and water together, starting the extraction process.
Pause 2	Once the piston reaches its highest position, it pauses to allow more contact time between the coffee grounds and water. This contact time increases the extraction from the coffee grounds.
Start 3	The piston then starts moving downwards, creating a vacuum in the brewer cylinder.
Pause 3	When it is just above the pour spout area of the cylinder, the piston then pauses. This pause allows the vacuum created in the cylinder to pull the liquid (brewed coffee) through the coffee grounds and through the filter screen at the top of the cylinder, and leaves the residue 'dry' behind on the filter.
Start 4	The piston then moves down just below the pour spout area, dispensing brewed coffee into the user's cup. At the same time, the brew chamber lifts and a rubber wiper moves from the right side of the chamber, to the left side.
Pause 4	The coffee is now dispensed to the cup or jug.
Return to start	The brew chamber lowers slightly to bring the wiper onto the top surface of the cylinder and filter screen. The wiper then moves across the top of the cylinder (and filter screen) wiping the used coffee grounds off the right edge on the cylinder and into a waste container. The brewer then moves back to the home (starting) position. The brew chamber moves down (closing) to create a seal between the bottom of the chamber and the top of the cylinder. The brewer is ready to repeat the process for the next drink.



The maximum capacity of this brewer is approximately 240 ml (8 oz.). Do not attempt to exceed this value as doing so may create flooding/overflow problems with the brewer.

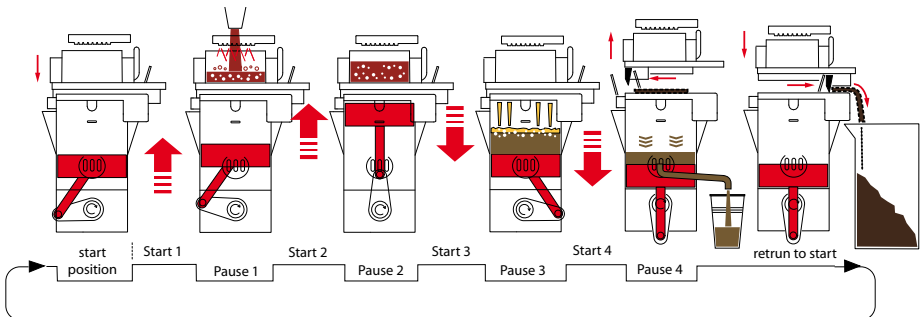

### 3.4.2 Wiper tension adjustment

If a leak occurs between the brewer chamber [ 2 ] and the permanent filter [ 4 ] the tensile force of the brewer needs to be increased. The tensile force of the brewer should be set so that no water is able to leak between the brewer chamber [ 2 ] and the permanent filter [ 4 ]. The tensile force also ensures that the wiper [ 5 ] completely pushes the coffee residue off of the permanent filter.

1.	Fixation bracked	
2.	Brewer chamber	
3.	Rubber seal	(art.no. 03375)
4.	Permanent filter	(art.no. 03488)
5.	Wiper	(art.no. 03380)
6.	T-bar	
7.	Adjustment shim	(art.no. 03384)
8.	Recession	
9.	H-frame	
10.	T-bar housing	

1. First remove the brewer from the device (see section 3.4.5 for instructions).
2. The tension can be set by adding adjustment shims [ 7 ] between the T-bar [ 6 ] and the H-frame [ 9 ]. Extra shims are located behind the stainless steel panel on the inside of the door.
3. Press the H-frame downwards and take the T-bar out of the recession. Place an adjustment shim\* in the recession and replace the T-bar.




Adding multiple shims at the same time can cause excess tensile force and damage the brewer!

4. In most cases this procedure is sufficient for repairing leaks. If the brewer unit still leaks fit another adjustment shim.
5. If the brewer unit still leaks remove the two adjustment shims and then turn in the T-bar one rotation (clockwise). First remove the fixation bracked [ 1 ].



Turning in the T-bar should only be done as a last resort.

6. If the tensile force is correct but the brewer still leaks do not increase the tensile force anymore!  
For further help see chapter 3.4.4 Troubleshooting.

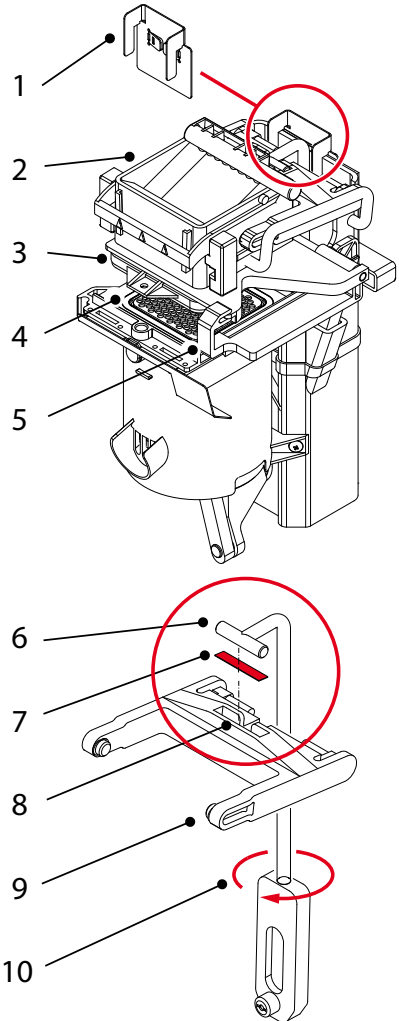


EN

### 3.4.3 Wiper adjustment tips


#### Wiper tension correct (ideal)

If the brewer is adjusted correctly, the wiper moves carefully over the upper side of the cylinder and pushes the coffee residue off of the permanent filter. The wiper bends slightly. When the wiper moves to the right the coffee residue is transported to the waste bin. The coffee residue drops from the right side of the brewer straight into the waste bin.

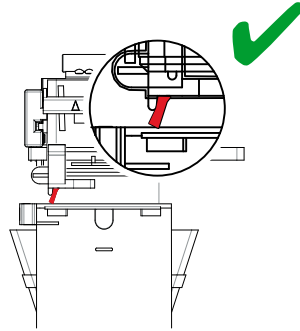

#### Wiper tension too low


If the wiper moves over the upper side of the cylinder it makes no contact with the permanent filter, so that coffee residue is left on the filter. The wiper does not bend at all. If the brewer unit is adjusted in this way it can leak. If leakage is severe this can even result in a vacuum loss, which means that the coffee residue remains too wet (particularly for larger dispensing volumes).

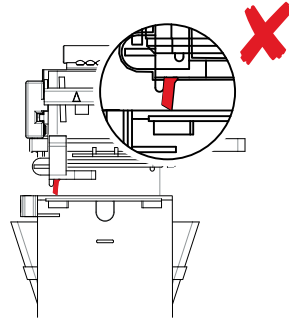

#### Wiper tension too high

If the brewer is adjusted too high, the wiper will stretch and become clearly warped. Glancing along the long side of the wiper will show a warped effect in the rubber. The brewer is under extreme pressure and the sound of the brewer motor audibly changes as a sign of the severe load. This may even damage the wiper and permanent filter!

During the complete brewer cycle, ball bearings from the wiper arms and the tension member are under severe pressure, resulting in bending. The ball bearings may then break away, cracking the plastic brewer housing.

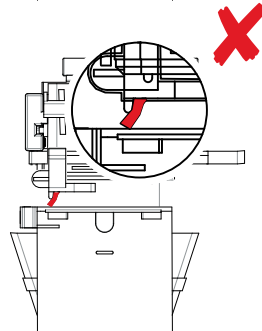

#### Signs that the tension is too high:


- The wiper is severely bent when it slides across the upper side of the brewer cylinder and permanent filter.
- It appears as if the wiper arm is flattened between the brewer unit and the upper side of the brewer cylinder.
- The brewer motor sounds as though it is running under extreme pressure.
- The wiper pushes against the coffee residue when moving to the left.
- Accumulation of coffee residue round the waste bin.

### 3.4.4 Removing the brewer group

The brewer can be entirely removed for thorough cleaning and service.

Removing the brewer:

1. Open the door of the machine and press the open/close brewer button [1]. The brewer will turn into the 'open' position.
2. Remove the coffee sprout [3] outlet from the brewer.
3. Flip up the hot water machine arm [2].
4. Remove the waste bin [4].
5. Remove the water connection [5].
6. First pull the bottom section [6] of the brewer towards you to release it from the drive mechanism.
7. Lift the brewer [7] from the suspension bracket.
8. The brewer can now be thoroughly cleaned.
9. Position the parts back into the machine in reverse order. Caution: first secure the brewer into the suspension bracket and then press the bottom section back into the drive mechanism. **Do not forget to reconnect the water supply [5]!**
10. Press the open/close brewer button [1]. Confirm / answer the display text [ *is filter replaced?* ] Yes: OK / No: Cancel. The brewer will return to its initial position. The machine is ready for use again.

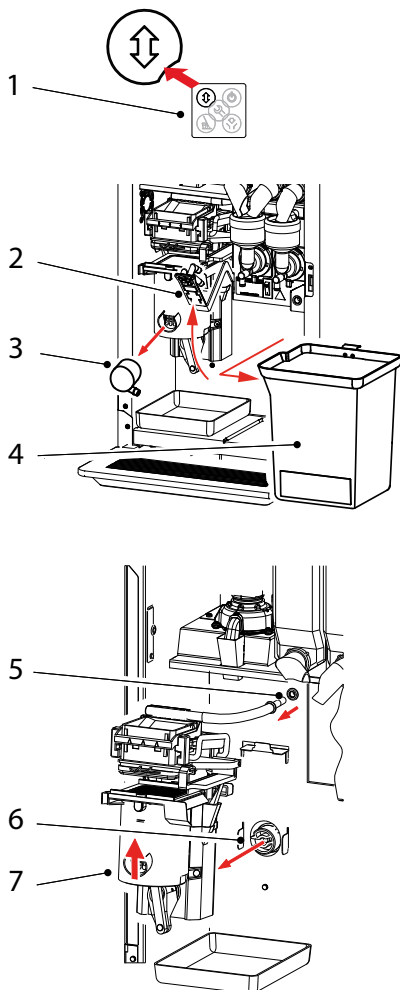


### 3.5 Drive unit

The fresh brew unit [1] is driven by drive unit [2] with a 24Vdc motor 5 RPM [2.1]. On the output shaft is a plastic connector [2.3] which drives the fresh brew unit [1]. A micro switch [2.5] controls the position of the fresh brew unit.

The micro switch [2.5] detects if the fresh brew unit has started to turn after a coffee has been selected or afterwards returned to its home position (home) position. An error E4 or E5 will occur when something wrong is with one of the two detection positions.

Major parts		Technical data	Material
<b>1. Brewer unit</b>		See chapter 3.4	
<b>2. Drive unit</b>		art.no. 1002149	
	2.1 Motor + gear	24Vdc / 5 RPM	alu
	2.2 Shear pin	art.no. 03341	steel
	2.3 Drive connector	art.no. 03340	nylon
	2.4 Motor bracket		st.st.
	2.5 Microswitch	art.no. 03321	
	Position A	brewer in start position	
	Position B	brewer is 'running'	

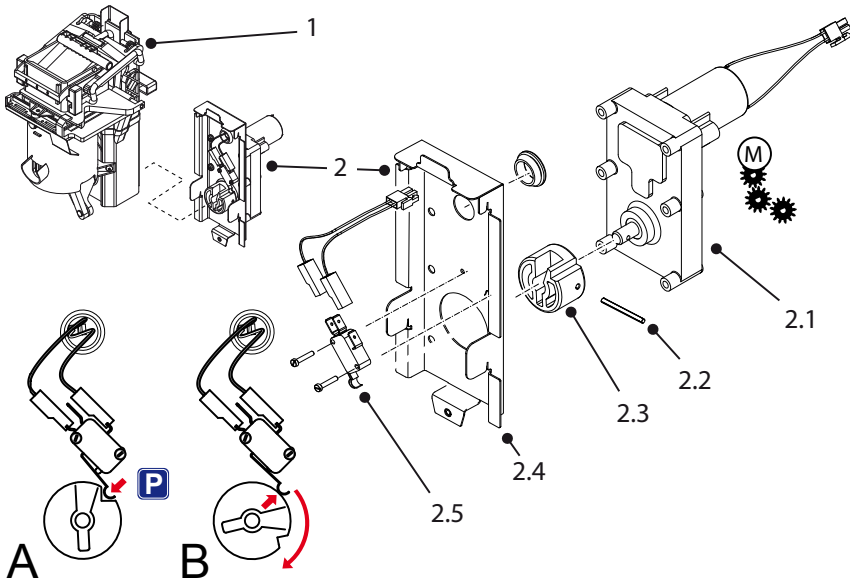

### 3.5.1 Operation

After making a fresh brew drink selection the following process starts:

Position		Brewer unit	Switch contact
Start	The software always checks if the fresh brew unit is in its initial (start) position when the machine is switched ON. If the plastic connector is in position B, the drive unit will be powered until the micro switch falls into the plastic connectors ressession (position A).		
A	Brewer is in its initial (start) position.	home	closed
B	Brewer is 'on the go'.	on the go	opened

EN

### 3.5.2 Shear pin

The shear pin [2.2] is special constructed to break ones the fresh brew unit runs too heavy.

The shear pin can breaks because of:

- mechanical defect in the brew unit.
- brewer unit and/or permanent filter is clogged up by coffee residue and oils.




Always use the original (solid) shear pin, its specially designed for this job. Don't use retaining pin or a hollow pin they are to weak.

### 3.5.3 Removing the drive unit

The drive unit can easily be removed from the rear.

1. Remove the brewer, see section 3.4.5
2. Remove the fixing screw [1] from the underside of the motor plate [2].
3. Disconnect the connectors [3] from the drive unit.
4. Lift the motor plate [2] and remove it from the partition wall.

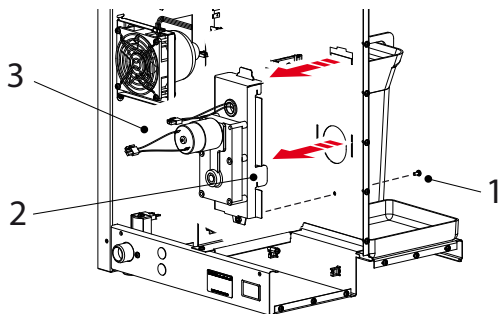


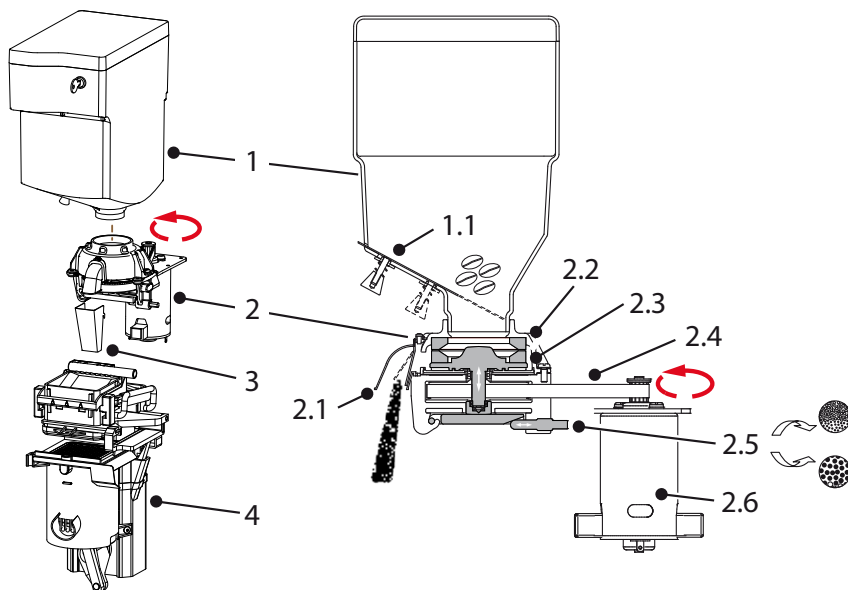
### 3.6 Grinder (OptiFresh Bean)

The grinder is driven by a powerful DC motor [2.6].

The upper grinding disk [2.2] is fixed. The lower grinding disk [2.3] is driven by a drive belt [2.4]. The grind fineness can be set with an adjustment screw [2.5]. When the screw is turned clockwise, the distance from the upper grinding disk reduces; anti-clockwise it increases.

The ground coffee leaves the grinder via the coffee outlet [2.1]. A rubber flap prevents the entry of moisture.

Major parts	Technical data	Material
<b>1. Bean canister</b>	Content 2.5 kg	PC
<b>2. Coffee grinder</b>	Sound level < 70 dB(A)	
2.1 Coffee outlet		ABS
2.2 Upper grinding disk	Ø 65mm	Ceramic
2.3 Lower grinding disk	Ø 65mm	Ceramic
2.4 Drive belt		Rubber
2.5 Fine adjustment	hexagonal + 	
2.6 DC motor	230Vdc	
<b>3. Coffee guide</b>		st.st.
<b>4. Fresh brew group</b>	See Section 3.4	





### 3.6.1 Basic adjustment

The coffee grinder is factory set for an average grind fineness.



#### WARNING

- Keep your fingers away from the grinding mechanism when the machine is in operation.



#### WARNING


- If there is a sound of two stones rubbing against each other, make the grind coarser.
- The grinding disks must never come into contact with one another.
- The grind fineness and grind capacity depends on the type of coffee beans and the roasting.
- Always adjust the coffee grinder from coarse to fine with the grinder running or empty. Adjusting from fine to coarse can be done when the grinder is stationary.

1. Close the bean canister plug.
2. Remove the stainless steel coffee guide [1].
3. Hold a beaker under the coffee grinder outlet and run the grinder until it is empty.




Tip; go to the service menu: **2.07 Hardware test / Outputs / IM1** Press recipe key 11 until the coffee grinder is empty (the speed increases).

5. Unscrew the black plastic coffee outlet [2] on the grinder.
6. Set the distance between the grinding disks [3] so that a 0.40 mm feeler gauge fits between them.
7. After adjusting the grind fineness, carefully check the operation of the brewer, see Section 2.4.2 Adjust the grind fineness as necessary!

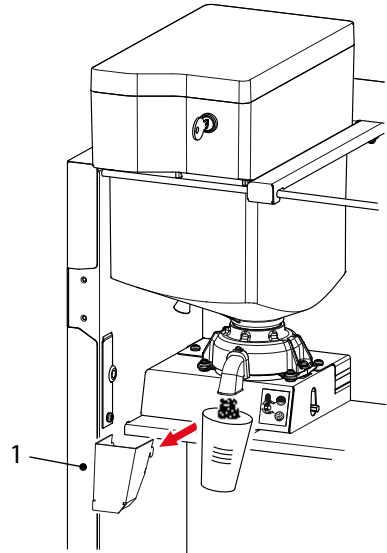

EN

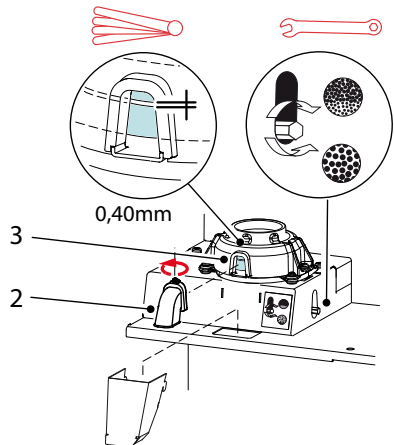

### 3.6.2 Service life

The service life of the ceramic grinding disks is approximately 3x longer than steel grinding disks. The service life depends on the type of coffee beans\* and is approx. 3,000 kg of coffee beans. With an average measure of 7.5 g/sec. that makes approx. 400,000 shots.

When you reach these grind quantities, we advise you to replace the complete grinder. Not only do the grinding disks need replacing, but the bearings, carbon brushes and drive belt have also reached their maximum service life. In case of a damaged grinding disk (due to stones or other foreign objects) they can be ordered and replaced as a separate set.

\* *light to dark roast, dry or oily, caramelized*

### 3.6.3 Run in period grinding discs

Tests have shown that new ceramic grinding discs have a run in period of 10 kg of coffee beans (about 1350 cups at 7.5 g / 1000 cup at 9.5 g.).




We recommend to re-adjust (finer) the grinder after this period.



### 3.6.4 Grinding disk replacement

1. Follow chapter 3.6.1 Basic adjustment till point 5.
2. Switch the machine OFF.
3. Loosen the screws [1] and dismantle the grinder head [2].
4. Remove the grinding disks [3&4] by loosening the three screws [4].
5. Thoroughly clean all parts.
6. Fit the new grinding disks in reverse order.
7. Position the lower plastic sealing disc [5] so it shuts the bottom of the grinder spout.
8. Set the distance between the grinding disks so that a 0.40 mm feeler gauge fits between them.
9. After adjusting the grind fineness, carefully check the operation of the brewer. Adjust the grind fineness as necessary!

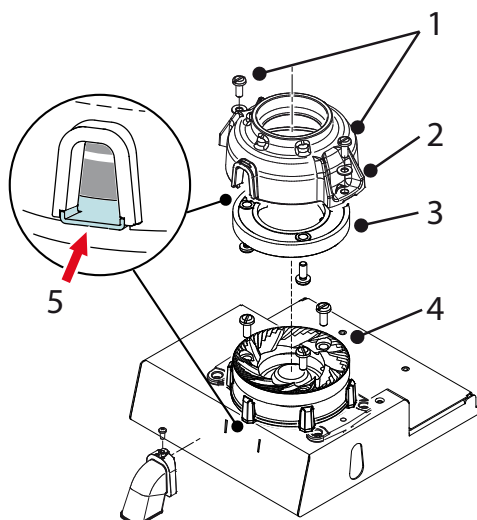


#### WARNING

- Do not drop the ceramic grinding disks.
- The grinding disks must never come into contact with one another.
- After assembly, adjust the grind fineness.

### 3.6.5 Drive belt replacement



#### Coffee grinder housing disassembly

1. Remove the bean- and instant canister [1] and remove the cover plate [2] behind it.
2. Disconnect the electrical connections to the small coffee grinder circuit board (via the rear wall).
3. Remove the two screws [3] on the underside of the housing.

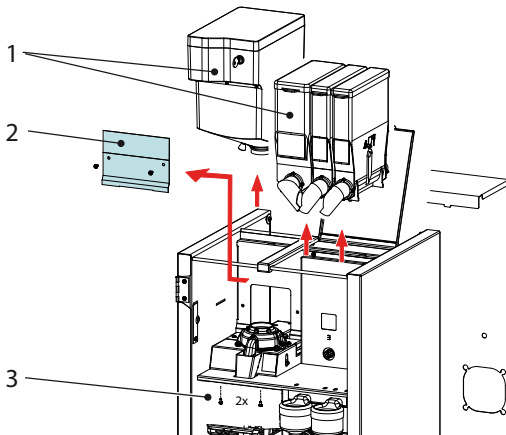

#### Drive belt removal

4. The whole assembly [4] can now be removed from the machine.
5. Remove the three screws [5] and remove the belt cover plate.
6. Remove the four screws [6] from the mounting rubbers and remove the coffee grinder with motor plate.
7. Loosen the screen [7] on the coffee outlet and remove it.
8. Remove the two screws [8] from the grinder housing [9].
9. Remove the grinder housing [9].
10. Slightly loosen the motor screws [10] so that the drive belt tension is released.
11. Pull the grinding disk [11] carrier vertically upwards.
12. Remove the belt disk and belt [12] and replace these parts.
13. Fit the new belt disk and drive belt [12] in reverse order.
14. Tension the belt disk and re-tighten the motor screw [10].

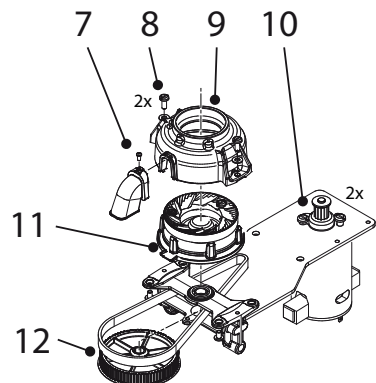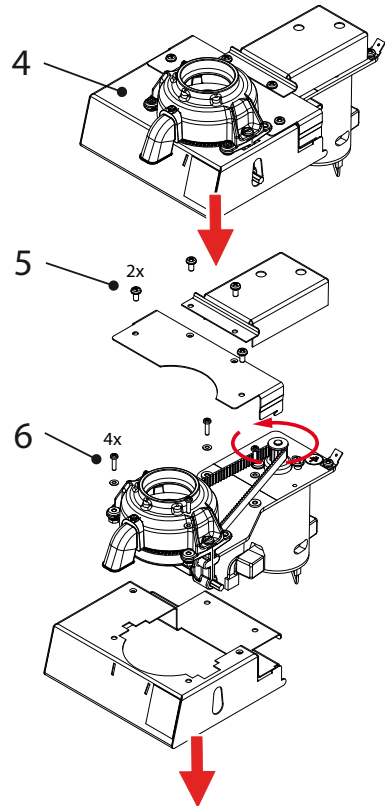

EN

### 3.6.5 Cleaning

Depending on the fineness of the grind and the intensity of use, coffee residue collects in the grinder housing and on the grinding disks (fine particles, coffee oil, coffee residue), which can affect the grinding capacity, the measuring accuracy and also the taste.

#### Cleaning frequency

To guarantee a constant grind quality, it is recommended to clean the coffee grinder at least every 6 months.

#### Recommended cleaning agent

- Coffee grinder cleaner 430 g. GRINDZ™
- Art.no. 1000151
- Shelf life 18-24 months
- Gluten free

#### What is GRINDZ™? Is it harmful?

GRINDZ™ consists of 100% biological, natural materials (including grain, starch) and is absolutely harmless for the health. It binds the coffee oil and cleans the grinder housing and grinding disks by friction. If small residual particles mix into the follow-up shots, this does not affect the extraction or the taste.


#### Cleaning with GRINDZ™

1. Close the bean canister plug.
2. Hold a beaker under the coffee grinder outlet.
3. Run the grinder until it is empty.



Tip; go to the service menu: **2.7 Hardware test / Outputs / IM1**. Press recipe key 11 until the coffee grinder is empty (the speed increases).

4. Lift the bean canister off the coffee grinder and remove the coffee beans.
5. Place 70 g GRINDZ™ (2x content of the cover) in the bean canister.
6. Grind the GRINDZ™ with the grinder and collect the ground product.
7. Grind approx. 6 shots of coffee to 'flush' the GRINDZ™ residue out of the grinder housing.

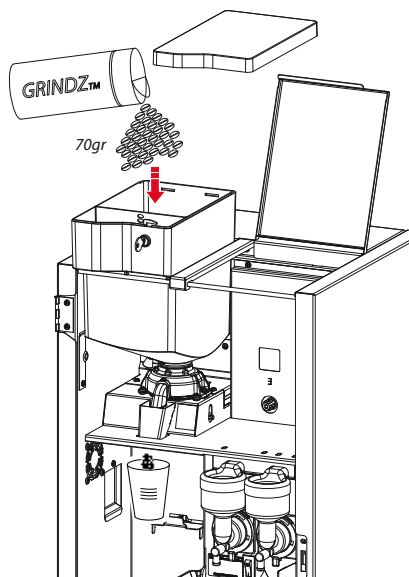


### 3.7 Instant group

The instant product (ingredient) is pushed out of the canister [ 1 ] by a worm screw and falls via the dispensing nozzle into the mixer unit [ 3.4 ]. At the same time, hot water is dispensed into the mixer unit. The instant product and the water are mixed together by the mixer impeller [ 3.3 ] driven by the mixer motor [ 3.1 ] running at 16.500 rpm . The drink flows via the drink outlet into the cup.

Most of the water vapour given off during the mixing is collected by the vapour drain ring [ 3.5 ] and extracted via the extraction tray [ 3.6 ] by the fan [ 2 ]. The instant residue is collected by the extraction tray. The extraction tray can be easily removed (for cleaning) by dismantling the mixer unit. This largely prevents water vapour getting into the canister outlet and the ingredient becoming moist.

Major components	Art. no.	Technical data
<b>1. Instant canister</b>		
1.1 Ingredient motor	02906	24Vdc / 130 RPM
<b>2. Extraction System</b>		
<b>3. Mixer group serie 247</b>		
3.1 Mixer motor	1003567	24Vdc / 16.500 RPM
3.2 Mounting ring cpl	1003568	
3.3 Mixer rotor	1003569	
3.4 Mixer bowl	1003570	
3.5 Extraction ring	1003571	
3.6 Extraction drawer	1003273	
3.7 Water inlet adapter	1003575	

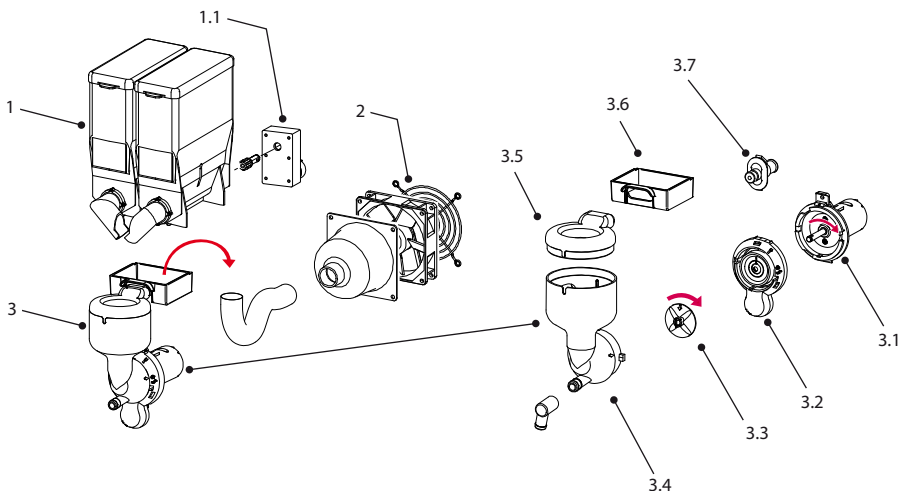

EN

### 3.7.1 Adjustable mixer speed

The mixer speed is adjustable from 20 to 100%.


During the **Running time** two speeds can set, **Speed 1** and **Speed 2**.

It's possible to adjust the percentage of **Time speed 1**.

**Speed 2** is then performed over the remaining **mixing time**.



At low speed, instant product is less whipped as it is at a high speed.

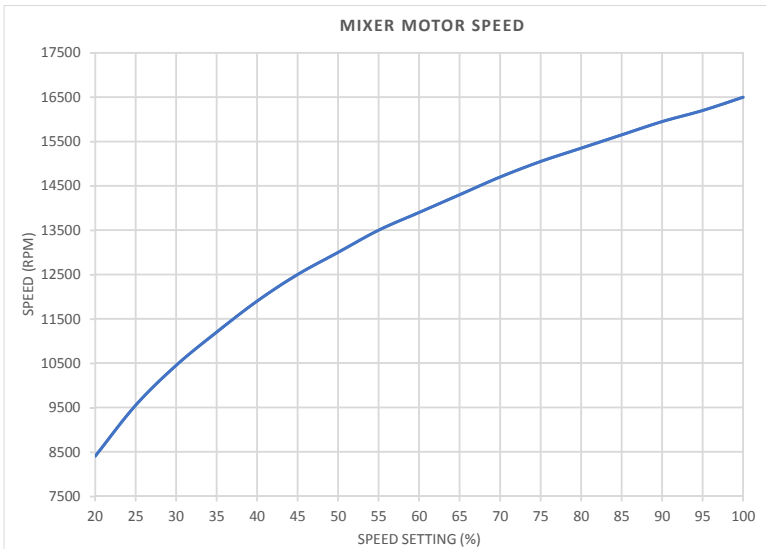

### 3.7.2 Ventilation mixer group

The fan on the rear side of the machine ventilates the mixer group.


The fan is easy to remove by turning the screw underneath.

The fan speed can be adjusted in the service menu:

#### 2.4 Settings

##### 2.4.05 Fan

- Fan running time after preparation
- Fan speed during rest
- Fan speed recipe preparation

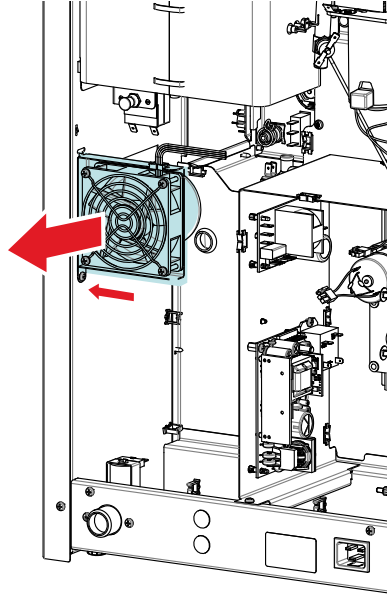


EN

### 3.7.3 Ventilation waste bin

The fan on the side of the machine ventilates the waste bin.


The fan runs as long as the machine is switched on.

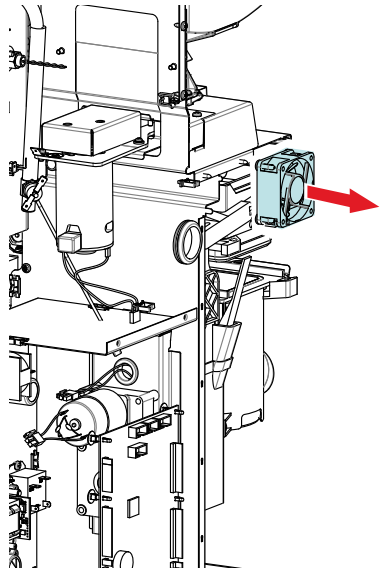

### 3.8 Boiler system

Turn on the device using the ON/OFF switch. The display will light up. The magnetic valve [1.7] will open and the hot water reservoir [1] will be filled to the maximum level electrode [1.2]. The heating element will be switched on when the minimum level electrode [1.3] is in the water. As soon as the NTC sensor [1.4] measures the set temperature, the heating element [1.6] will be switched off.

Major parts	Technical data	Material
<b>1. Boiler system</b>	3 Litre	st.st.
1.1 Overflow tube		
1.2 Maximum level electrode		st.st.
1.3 Minimum level electrode		st.st.
1.4 Temperature sensor NTC		st.st.
1.5 Heating element	230V 2200W	st.st.
1.6 Steam thermostat	230V 16A	
1.7 Boiler inlet		st.st.
1.8 Dry boil protection	230V 16A	
1.9 Boiler drain		
<b>2. Dispensing valve</b>	See 3.8.1 Dispensing valve	

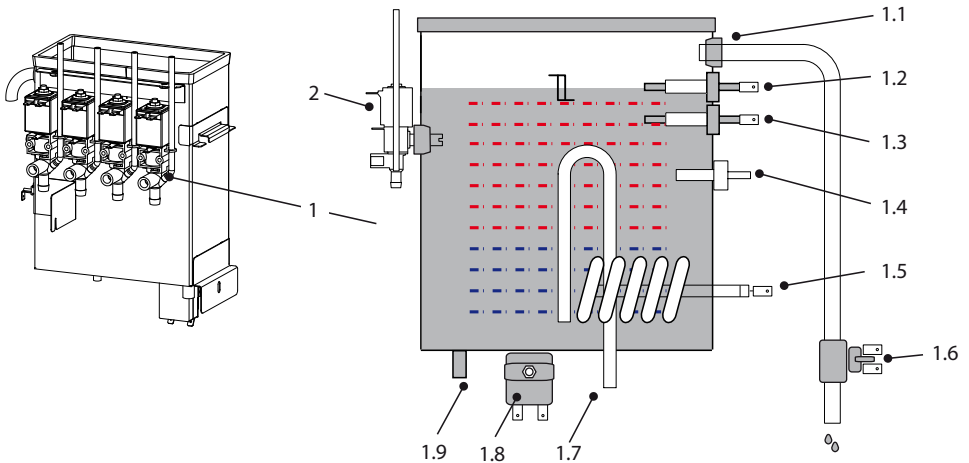



## Level regulation

When a drink is being dispensed the water level drops and the maximum level electrode [1.2] is released; the inlet valve [1.7] (2.5 litres/min.) opens and immediately refills the reservoir until the maximum level [1.2] is reached again. If the water level falls under the minimum level electrode [1.3] during operation, the operating panel display will show [ *boiler filling* ]. If the supply of water is not restored within 90 seconds, the display will show the error message [E3 level error] and shut off the inlet valve [1.7].

## Temperature regulation

The heating element [1.5] is turned on when the water temperature falls below the temperature setting and the minimum level electrode [1.3] registers water. The temperature in the water reservoir is measured using an NTC precision sensor [1.4] mounted on the outside wall of the reservoir.

The water temperature also drops when drinks are dispensed. To avoid the temperature regulator from responding too late, the heating element is switched on as soon as the inlet valve [1.7] opens and cold water is added. The heating element [1.5] switches off again as soon as the inlet valve shuts off. The heating element always switches off when the maximum boiler temperature of 99°C is reached.

EN

## Steam thermostat


The power relay is secured by a steam thermostat [1.6] which is build in line with the overflow tube [1.1] from the boiler. The steam thermostat contact is in series with the power relay. This thermostat prevents the boiler from boiling empty when the relay breaks down in a operating condition.

The thermostat switches the heating element OFF when steam escapes from the boiler, after 8 minutes Error E21 will occur. The thermostat must be manually reset.

### 3.8.1 Dispensing valves

After a drink has been selected one of the dispensing valves [DV] opens and lead the hot water to the brewer or mixer system. The flow rate of each valve is adjusted by means of the adjusting screw [2.5.3] on the valve. The flow rate is determined by the time that the valve is opened. If the valve closes, the output [2.5.2] aerated [2.5.1] so that the supply hose to the brewer and mixer are always completely emptied.


Major parts	Technical data	Materiaal
<b>1. Water boiler</b>	3 Liter	AISI 316
<b>2. Dispensing valves</b>	art.no. 03250	
2.1 Coil	24Vdc	
2.2 Core		
2.3 Valve housing (inlet)		PSU
2.4 Seal set	art.no. 99673	
2.4.1 Cup seal		VMQ
2.4.2 Plastic ring		PVDF
2.4.3 O-ring		VMQ
2.4.4 Plastic seat		PVDF
2.5 Outlet piece	bayonet connection	PSU
2.5.1 Aeration	tube	VMQ
2.5.2 Outlet	to brewer /mixer(s)	PSU
2.5.3 Adjusting screw	see 3.8.3 Calibrating	PSU

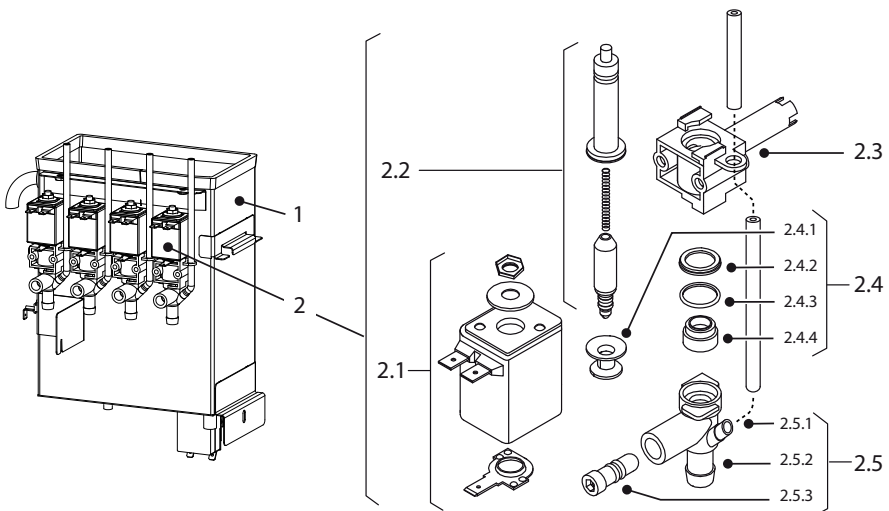

### 3.8.2 Removing / replacing

The hot water dispensing valves are accessible by dismantling the cover behind the ingredients canisters.

1. Switch off the machine.
2. Drain the water heater with the drain hose.  
Attention: hot water.
3. Take the coffee- and instant canisters from the machine and remove the back cover.
4. Gently loosen off the wiring and hoses and gently pull the valves out of the silicone grommets.

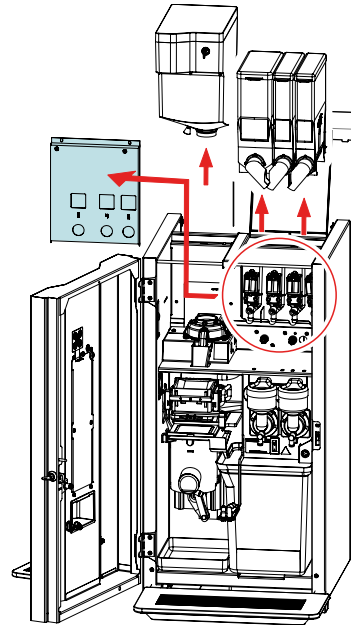

EN

### 3.8.3 Calibration


In the unlikely event that one of the valves needs replacing, it should be calibrated to one of the dispensing speeds given the figure on the right after it has been fitted.

**i** When calibrating valves, use the special **Valve Calibration** menu by opening the **Service Menu** and navigate to **2.07 Hardware Test / 2.07.2 Calibration**

1. Place an empty measuring cup with a minimum volume of 250ml under the drink outlet.
2. Select the valve (DV) which needs to be calibrated and press **ACTIVATE** to open the relevant valve for 10 seconds. The result must be 150ml

**i** To calibrate the Brewer valve DV1 extent the hot water connection so the water can flow directly into the measuring cup.

3. Keep fine tuning the adjusting screw until 150ml is measured. (Tolerance  $\pm 5$  ml)

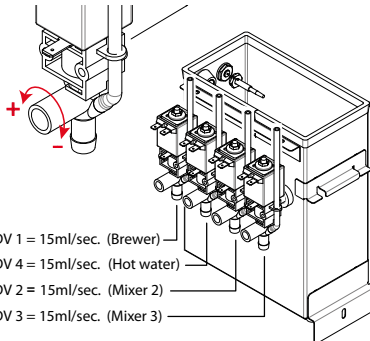

- DV 1 = 15ml/sec. (Brewer)
- DV 4 = 15ml/sec. (Hot water)
- DV 2 = 15ml/sec. (Mixer 2)
- DV 3 = 15ml/sec. (Mixer 3)

2.07.02	CALIBRATION
2.07.02.00	BREWER VALVE (DV1)
2.07.02.01	MIXER 2 VALVE (DV2) ←
2.07.02.02	MIXER 3 VALVE (DV3)
2.07.00.03	HOT WATER VALVE (DV4)
2.07.02.04	DOSING VALVE (DV5)
2.07.02.05	DOSING VALVE (DV5)
2.07.02.09	COLD WATER VALVE 3 (KW3)
2.07.02.10	BREWER CALIBRATION

**2.07.02.01 MIXER 2 VALVE (DV2)**

150 ml (15 ml/s)

ACTIVATE CANCEL OK



### 4. MENU STRUCTURE / DISPLAY

#### 4.1 The main menu


The main menu can be activated:

By pressing the text 'MAKE YOUR CHOICE' for 2 seconds.


By opening the door and press on the text 'DOOR OPEN' .

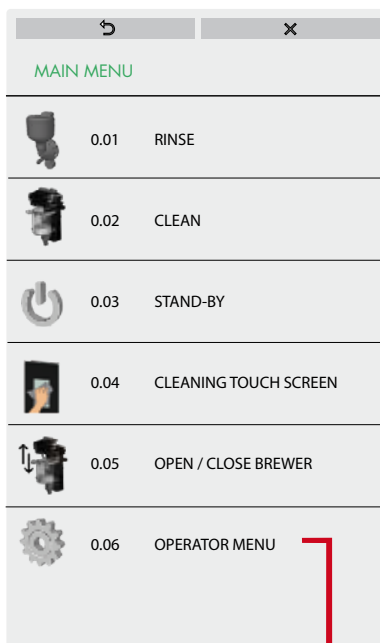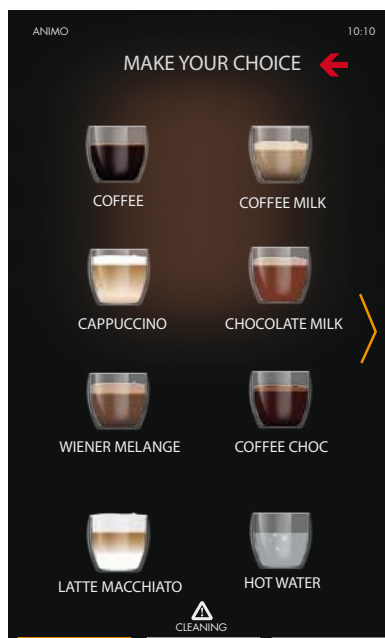

Operator menu  
Pin code: 1 1 1 1 1

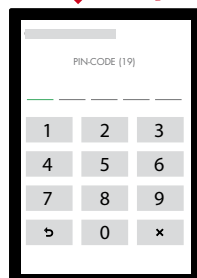

Most of the settings, including the product settings are secured by a PIN code. This PIN code is intended to prevent the user accessing the service menu.

 It is recommended not to leave this document with the user after installation and to change the standard factory PIN code.

This chapter describes the various settings that can be changed by **trained, authorised service personnel**. How you gain access to the **service menu** is described below.

EN


OPERATOR MENU	
1.00	FREE VEND
1.01	CLOCK
1.02	SWITCHING TIMES
1.03	RECIPE COUNTERS
1.04	QUICK RECIPE
1.06	HARDWARE / SOFTWARE
1.07	SERVICE MENU
1.08	OPTILIGHT
1.09	BRIGHTNESS DISPLAY
1.10	CUP SENSORS
1.11	SOUND & VISION
1.12	CHANGE OPERATOR PIN
1.13	CHANGE FREE VEND PIN

SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.16	CLEANING MANAGEMENT

Service menu  
Pin code: 2 2 2 2 2



### 4.2 The operator menu

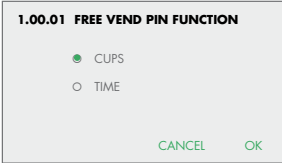Operator menu					
Main item	Sub-item	..	Range	Set	Description
1.00 FREE VEND	FREE VEND		YES-NO	YES	Set the machine for free or paid vending. To disable this item go to the service menu 2.04.14 FREE VEND IN OPERATOR MENU and set NO
	FREE VEND PIN FUNCTION				<b>Free vend pin function needs:</b> - Activated payment system (free vend NO) - FREE VEND PIN button programmed & selected - Press PIN CODE 1 - 2 - 3 - 4 - 5
	FREE VEND PIN CUPS		0-10	2	<b>Cups:</b> maximum 2 drinks can be taken for FREE
	FREE VEND PIN TIME		5 min.	0-5 min.	<b>Time:</b> drinks are FREE for 5 min.
1.01 CLOCK	TIME		HH:MM		Set the clock to the correct local time.
	DATE		DD-MM-YYYY		Set the clock to the correct local date.
1.02 SWITCHING TIMES	MONDAY - FRIDAY	MONDAY - FRIDAY BLOCK 1 BLOCK 2 BLOCK 3	OPERATION TIME	ON TIME OFF TIME	<b>Operation time:</b> blocks keys and switches off. Set the time (max. 3 timers) when the machine must be in operation. When the timer switches the machine off it automatically goes into <b>stand-by</b> and/or <b>energy mode</b> (if activated).  <b>Time pricing policy:</b> On/Off time set (max 3 timers.): The machine per- forms in this period the set <b>price choice</b> , <b>Price low</b> or <b>Free</b> . If no time is set <b>price high</b> will be used.  <b>Price selection:</b> Specify here at what pricing choice, <b>free</b> , <b>price</b> <b>high or price low</b> , the machine must handle.
			TIME PRICING POLICY	ON TIME OFF TIME	
			PRICE SELECTION	FREE HIGH LOW	
	SATURDAY	SATURDAY BLOCK 1 BLOCK 2 BLOCK 3	OPERATION TIME	ON TIME OFF TIME	
			TIME PRICING POLICY	ON TIME OFF TIME	
			PRICE SELECTION	FREE HIGH LOW	
	SUNDAY	SUNDAY BLOCK 1 BLOCK 2 BLOCK 3	OPERATION TIME	ON TIME OFF TIME	
			TIME PRICING POLICY	ON TIME OFF TIME	
			PRICE SELECTION	FREE HIGH LOW	


Operator menu continued...					
Main item	Sub-item	..	Range	Set	Description
1.02 SWITCHING TIMES (continued...)	ENERGY SAVE MODE	ACTIVE	YES-NO	YES	<b>Active:</b> after the set time the machine goes to power save (sleep mode) and uses less energy. The product keys remain active but the boiler cools down in steps of 5°C. When a product is chosen, the machine 'wakes up' and after a short warm-up period is ready for operation again.
		TIME	15-240 min.	30 min.	
		LCD	YES-NO	YES	Backlight LCD display during energy save mode.
		OPTILIGHT	0-100%	15%	OptiLight during energy save mode. 0=off
		BOILER TEMPERA- TURE	OFF / 60- 80°C	OFF	Boiler temperature during power save.

Example:

Three switching times set

Machine automatically switches from Stand-by to ON at 9 am. At 11am back to Stand-by, etc., etc.


During stand-by the key panel is switched off and the boiler temperature drops to the set stand-by temperature (menu 2.4 Settings / Stand-by temp / off - 60-80°C (by default the stand-by temp is set to 'off'))



Three switching times set & Energy save mode activated.


When the machine is ON and it is not in use, it switches to power save after 30 min.

The boiler temperature decreases by 5°C every 30 minutes. If a product is chosen after 2 hours, the machine springs back into life. In this way, less energy is used if the machine is switched on but is used little or if someone forgot to switch it off.




Energy save mode activated (no switching times set)

If there is no dispensing, the machine switches to power save after 30 min. The boiler temperature decreases by 5°C every 30 minutes. If a product is chosen after 2 hours, the machine springs back into life. In this way, less energy is used if the machine is switched on but is used little or if someone forgot to switch it off.



Example:

Three set prices for beverages MONDAY-FRIDAY.



SERVICE MENU / 2.02 BUTTON SETTINGS / BUTTON 1- - - 10 Price / Price high 1,00 + Price low 0,50

SERVICE MENU / 2.04 SETTINGS / PAYMENT SYSTEM / G13

OPERATOR MENU / 1.00 FREE VEND / NO

### 1.02 SWITCHING TIMES / MONDAY-FRIDAY / MONDAY-FRIDAY 1

9.00 till 11.00 free

Pricing time / on time 9.00 & off time 11.00

Price choice / free

If no time is set from 11:00 to 18:00 the machine is automatically switched from free to price high rate.

### 1.02 SWITCHING TIMES / MONDAY-FRIDAY / MONDAY-FRIDAY 2


18.00 till 22.00 price low (0,50)

TIME PRICING POLICY / on time 18.00 & off time 22.00

PRICE SELECTION / price low 0,50

After 22:00 the machine will automatically switch over from low price to high price. When Saturday and Sunday have not been set the machine stays these days on price high rate.



Operator menu continued...						
Main item	Sub-item		Range	Set	Description	
1.03 RECIPE COUNTERS	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	TOTAL	cups		Total count per recipe (from free till jugs).	
		FREE	cups		Number of drinks <u>free</u>	
		PAID LOW PRICE	cups		Number of drinks <u>paid low price</u>	
		PAID HIGH PRICE	cups		Number of drinks <u>paid high price</u>	
		TEST RECIPE	cups		Number of drinks made by test recipe	
		TOKEN	cups		Number of drinks <u>paid with token</u> per recipe	
		JUG	cups		Number of drinks dispensed in jug	
	RECIPES TOTAL	See above	cups		Total count for all recipes with the same subdivision as above	
	SERVICE COUNTERS	RINSE				Rinse programme counter
		CLEANING				Cleaning programme counter
	RESET COUNTERS					Reset all counters if activated
	SAVE COUNTERS					Copy your counter readings to an SD card - Place an SD memory card in the slot - Press enter; save as: file.CNT - Press Enter → please wait → saved - Remove the SD card - Place the SD card in your computer and open the file. CNT with notepad or Word pad. Error messages: SD card error: lock function on SD card ON No SD card present: no SD card inserted
	1.04 QUICK RECIPE	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	CUP VOLUME	25-350 ml	120 ml	Thins menu item is only visible when its activated in the service menu. Here you can easily set the volume and strength of coffee, milk, sugar, cocoa yourself for each recipe (drink key). Only the ingredients for the recipe concerned are visible.
COFFEE BEANS			-5 / +5%	0%		
TOPPING			-5 / +5%	0%		
COCOA			-5 / +5%	0%		

EN

Operator menu continued...					
Main item	Sub-item		Range	Set	Description
1.06 SOFTWARE / HARDWARE	SOFTWARE				<div style="border: 1px solid black; padding: 5px;"> <p><b>1.06.00 SOFTWARE</b></p> <p>BOOTLADER: V6.0.2253            MAINBOARD: V6.0.2522            ANDROID APP: 0.1.2528            ANDROID BUILD: var_mx6-eng 5.0.2                              1.0.0-ga-var03                              20161115 V0.04</p> <p>MDD: 3Bxxxx.MDU            RCD: 3Bxxxx.RCU            TLF: 3Bxxxx.tif</p> <p style="text-align: right;">OK</p> </div>
	HARDWARE				<div style="border: 1px solid black; padding: 5px;"> <p><b>1.06.01 HARDWARE</b></p> <p>ANI-MAIN REV: 0            ANI-MAIN OPT: 0            ANI-TOUCH REV: 0            ANI-TOUCH: 0            OPT: 0</p> <p style="text-align: right;">OK</p> </div>
1.07 PIN CODE			2-2-2-2-2		Press Pin code
1.08 OPTILIGHT	RED		0-100%	0%	Set your LED lighting colour yourself by setting the colours red, green and blue.
	GREEN		0-100%	0%	
	BLUE		0-100%	100%	When Random colors is set, the LED mood lighting cycles through the whole colour spectrum at the set time. 0= off
	RANDOM COLORS		0-60 min.	10 min.	
1.09 BACKLIGHT			25-100%	75%	Set the contrast of the LCD display
1.10 CUP SENSORS	CUP SENSOR LEFT		YES-NO		yes; cup sensor active no; cup sensor not active
	CUP SENSOR MIDDLE		YES-NO		
	CUP SENSOR RIGHT		YES-NO		



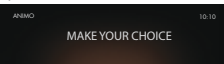

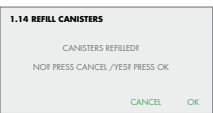
### OptiLight colour recipes

OptiLight	red	green	blue		OptiLight	red	green	blue
Red	100%	0%	0%		Light blue	0%	100%	100%
Green	0%	100%	0%		White	100%	100%	100%
Blue	0%	0%	100%		Pink	100%	0%	10%
Yellow	100%	50%	0%		Orange	100%	15%	0%
Purple	100%	0%	100%					

Table 1

Operator menu continued...							
Main item	Sub-item	..	.	Range	Set	Description	
1.11 VISUAL & SOUND	ADVERTISING SCREEN	CHOOSE ADVERTISING SCREEN	<div style="border: 1px solid black; padding: 5px;"> <p><b>1.11.00.00 CHOOSE ADVERTISING SCREEN</b></p> <ul style="list-style-type: none"> <li><input type="radio"/> &gt;NONE&lt;</li> <li><input type="radio"/> IMAGE</li> <li><input type="radio"/> VIDEO</li> <li><input type="radio"/> SLIDE SHOW</li> </ul> <p style="text-align: right;"><span style="color: green;">CANCEL</span> <span style="color: green;">OK</span></p> </div>			Choose here what kind of entertainment the display must show.	
		IMAGES	<div style="border: 1px solid gray; padding: 2px;"> <i>Picture specifications</i>                      PNG                      480X800 pixels                      24/32 bit                 </div>	CHOOSE IMAGE			Select the .png file from the image directory.
		LOAD IMAGE FROM SD OR USB				Insert a SD or USB to upload your .png file.	
		REMOVE IMAGE				Select a .png file to remove it from the image directory	
		VIDEO	<div style="border: 1px solid gray; padding: 2px;"> <i>Video specifications</i>                      MPEG-4                      Landscape                      480X272 pixels                      Portrait                      480x800 pixels                      Video bit-rate ≤500                      Audio                      44,1 kHz                      ≤128 kbps                 </div>	FULL SCREEN VIDEO	YES/NO		Yes; video in portrait mode No; video in landscape mode (top of screen)
		CHOOSE VIDEO				Select the .mp4 file from the video directory	
		LOAD VIDEO FROM SD OR USB				Insert a SD or USB to upload your .mp4 files.	
		REMOVE VIDEO				Select the .mp4 file from the video directory	
		SLIDE SHOW	<div style="border: 1px solid gray; padding: 2px;"> <i>Picture specifications</i>                      PNG                      480X800 pixels                      24/32 bit                 </div>	EFFECT DURATION TIME	0,1 - 3 sec.	0,5 s.	Time of the effect between the selected images
		DURATION TIME		1 - 10 sec.	5 s.	Time between the selected images	
		SLIDE SHOW EFFECT		SLIDE IN FADE IN		Slide in; the images starts from the side of the screen Fade in; the images starts from the middle of the screen.	
		CHOOSE IMAGES				Select here the files from the slide show directory.	
		LOAD IMAGE FROM SD OR USB				Insert a SD or USB to upload your .png file.	
		REMOVE IMAGE				Select a .png file to remove it from the image directory	
		SCREEN SAVER DELAY TIME			10-120 s.	60 s.	
		SHOW TEXT AND TOUCH SYMBOL	SHOW TEXT	YES/NO	Yes	Yes; Show text <i>Touch screen for your selection</i> at the bottom of the screen. No; don't show text	
		SHOW TOUCH SYMBOL	SHOW TOUCH SYMBOL	YES/NO	Yes	Yes; Show symbol No; don't show symbol	

EN

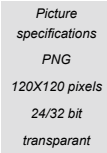Operator menu continued...					
Main item	Sub-item	..	Range	Set	Description
<b>1.11 VISUAL &amp; SOUND</b> (continued....)	SOUNDS	VIDEO SOUND	0 - 100	70	Set video sound volume
		SYSTEM SOUND	0 - 100	70	Set system sound volume
	LOGO ON CUP?  	LOGO ON CUP?	YES/NO	YES	Show logo on the cup
		CHOOSE LOGO			Select the .png file from the image directory
		LOAD LOGO FROM SD OR USB			 Insert a SD or USB to upload your .png file.
		REMOVE LOGO			Select a .png file to remove it from the image directory
	SHOW REPEAT RECIPE		YES/NO	NO	If set to yes, it gives the opportunity to repeat a recipe
	SHOW ALLERGENS INFO		YES/NO	NO	If set to yes, it shows extra allergens information with each chosen recipe
MENU KEY ACCESS		YES/NO	NO	If set to yes, is only possible to enter the operator menu after the door lock is turned. Use this function to prevent unauthorised persons are able to enter the operator menu.  	
<b>1.12 CHANGE OPERATOR PIN CODE</b>	NEW PIN CODE	REPEAT PIN CODE			With this menu item the PIN code can be changed. The complete operator menu is secured behind this PIN code. This PIN code prevents unintentional changes to the machine settings by untrained personnel. <ul style="list-style-type: none"> <li>• The factory operator PIN code is 1-1-1-1-1</li> <li>• The factory free vend PIN code is 1-2-3-4-5</li> </ul>
<b>1.13 CHANGE FREE VEND PIN CODE</b>	NEW PIN CODE	REPEAT PIN CODE			
<b>1.14 REFILL CANISTERS</b>		YES/NO	NO	When a Telemetry system (Vendon®) is connected the user can inform the Telemetry system when all canisters are refilled.  To enable this menu item in the operator menu go to the service menu 2.04.16.01 REFILL CANISTERS IN OPERATOR MENU and set YES	

Pin Code Table

No.	Operator Pin code				
1	4	2	1	2	2
2	3	3	4	4	3
3	1	4	1	1	3
4	2	4	2	1	2
5	3	3	3	1	3
6	1	4	4	4	1
7	4	1	2	3	1


No.	Operator Pin code				
8	3	4	3	1	4
9	4	2	1	3	4
10	3	3	3	1	4
11	4	2	3	2	2
12	4	3	2	2	2
13	3	2	2	4	4
14	3	3	1	2	4







No.	Operator Pin code				
15	3	4	3	1	2
16	3	4	4	2	4
17	1	4	2	2	4
18	1	3	2	4	4
19	3	3	4	4	1
20	1	4	1	3	4
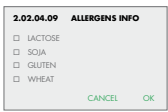
### 4.3 The service menu

EN

Service menu						
Main item	Sub-item	Item	Range	Set	Beschrijving	
2.01 QUICK RECIPE PRO	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	CUP VOLUME	25-350 ml	120ml	Here you can easily set the volume and strength of coffee, milk, sugar, cocoa yourself for each recipe (drink key). Only the ingredient for the recipe concerned is visible.	
		COFFEE BEANS	0,0 - 5,00 s			
		TOPPING	0,0 - 5,00 s			
		COCOA	0,0 - 5,00 s			
		TEST RECIPE			Use this function to stay in the menu and test each drink after changing some settings	
2.02 RECIPE BUTTON SETTINGS	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	RECIPE SELECTION	2.02.00.00 BUTTON 1 <input type="radio"/> >NONE< <input checked="" type="radio"/> COFFEE <input type="radio"/> COFFEE MILK <input type="radio"/> CAPPUCCINO <input type="radio"/> CHOCOLATE MILK <input type="radio"/> WIENER MELANGE <input type="radio"/> COFFEE CHOC <input type="radio"/> LATE MACCHIATO <input type="radio"/> HOT WATER <input type="radio"/> ESPRESSO		Change any recipe buttons here that standard factory settings. All settings that correspond to selected recipes are automatically loaded. See chapter 2.4 How to program a recipe?  In stead of a RECIPE a Free Vend PIN can be programmed. Use this Free Vend PIN to switch the touch panel on free vend when a payment system is active.	
		RECIPE ACTIVE	YES/NO	YES	Use this to place the product concerned out of service.	
		PRICE				
		PRICE HIGH	0,05-2,00	0,10	For paid dispensing a <u>price high</u> can be set here for each product button.	
		PRICE LOW	0,05-2,00	0,25	For paid dispensing a <u>price low</u> can be set here for each product button.	
		CUP VOLUME	25-350 ml	120ml	Set the desired cup volume here. When the Cup volume (menu parameter) is increased, instant products Topping and Chocolate will be automatically proportional increased. The coffee however will not automatically increased!	
		MULTI CUP	0-10	0	Set the number of cups that should be dispensed when the key switch is in the jug setting.	

Service menu continued ...					
Main item	Sub-item	Item	Range	Set	Beschrijving
<b>2.02</b> <b>RECIPE BUTTON</b> <b>SETTINGS</b> (continued....)	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	SET RECIPE FUNCTION	0-1-2-3		Set the required operation of the key switch. See table 2
		PUSH & HOLD	YES-NO	NO	If set to yes; when this key is held the dispensing of the hot/cold* water starts and stops when it is released. Use this option only with DV 4 and KW3 in combination with a hot/cold* water recipe key. * Cold water is optional
		LEAK OUT TIME	0-10 sec.	2 sec.	The time that the product continues to run out of the brewer or mixer. After this interval has elapsed a new drink selection can be made.
		PRE-INFUSION	YES-NO	Yes	<b>Pre-infusion for optimum espresso extraction.</b> Pre-infusion is the advance moistening of the ground coffee just before the coffee is made. This ensures an even better extraction and creaming of the coffee. This option only works for the coffee and espresso recipes.
		ALLERGENS INFO			Select here which product is inside the recipe (drink). This information will be displayed on the screen to inform the user.
		POSITION LOGO ON CUP	HORIZONTAL		The position cup logo can be corrected horizontally
			VERTICAL		The position cup logo can be corrected vertically
TEST RECIPE			Use this function to stay in the menu and test each drink after changing some settings		

2.02 RECIPE BUTTON SETTINGS / 2.02.00.05 SET RECIPE FUNCTION				
SETTING	DRINK	PIN CODE NEEDED	NO PAYMENT SYSTEM CONNECTED	PAYMENT SYSTEM ACTIVE
0				DRINK IS FREE
1		NO		DRINK MUST BE PAID
2		NO		DRINK MUST BE PAID
3				DRINK IS FREE

EN

Service menu continued ...						
Main item	Sub-item	Sub	Item	Range	Set	Description
2.03 RECIPE SETTINGS	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	UNIT 1	BREWER VALVE 1 DELAY TIME (DV1)	0,0-30,0 s		Brewer valve (DV1) delay time
			BREWER VALVE 1 (DV1)	0-100 ml		Dispensing volume brewer valve (DV1)
			RINSE 1 DELAY TIME	0,0-20,0 s		Delay time rinse Water (DV1)
			RINSE 1	0-15 ml		Dispensing volume rinsing water automatically deducted from DV1
			COFFEE DELAY	0,0-30,0 s	0,5 s	Coffee (grinder) delay time
			COFFEE	0,00-5,00 s		Coffee (grinder) dispensing time
			START 1 BREWER	0,0-30,0 s	1,0 s	Time the brewer motor runs the piston leaves the start position.
			PAUSE 1 BREWER (FILLING)	0,0-30,0 s	6,0 s	Pause time the piston stay in position to allow the brewer chamber (top) is filled with coffee grounds and hot water.
			START 2 BREWER	0,0-30,0 s	2,4 s	Time the brewer motor runs the piston in the highest position. The air above the piston allow to get a perfect mix of the coffee grounds with the water. If foam bubbles out over the brewer chamber when the piston moves up you can decrease the set value. The decreased time is automatically deducted from Start 1 brewer.
			PAUSE 2 BREWER (EXTRACTION)	0,0-30,0 s	2,5 s	Pause time the piston stay in the highest position to allow more contact time between the coffee grounds and water.
			START 3 BREWER	0,0-30,0 s	3,0 s	Time the brewer motor runs the piston down <u>just before</u> to the pour out opening
			PAUSE 3 BREWER (DRYING)	0,0-30,0 s	1,5 s	Pause time the piston pauses just before the outlet to let de vacuum pull the liquid coffee down and dry the coffee residue
			START 4 BREWER	0,0-30,0 s	1,9 s	Time the brewer motor runs the piston down to the pour out opening
PAUSE 4 BREWER (POUR OUT)	0,0-30,0 s	3,5 s	Pause time the piston pauses in the open position to empty the brewer cylinder.			




Service menu continued ...					
Main item	Sub-item	Sub	Item	Range	Description
<b>2.03</b> <b>RECIPE SETTINGS</b> (continued....)	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	UNIT 2	MIXER 2 VALVE DELAY TIME (DV2)	0,0-30,0 s	Mixer valve (DV2) delay time
			MIXER 3 VALVE (DV2)	0-100 ml	Dispensing volume mixer valve (DV2)
			RINSE 2 DELAY TIME	0,0-20,0 s	Delay time rinse water (DV2)
			RINSE 2	0-15 ml	Dispensing volume rinsing water automatically deducted from DV2
			TOPPING DELAY TIME	0,0-30,0 s	Topping product delay time
			TOPPING	0,00-5,00 s	Topping product dispensing time
			COCOA DELAY TIME	0,0-30,0 s	Cocoa product delay time
			COCOA	0,00-5,00 s	Cocoa product dispensing time
			MIXER 2 DELAY TIME	0,0-30,0 s	Delay time Mixer 2
			MIXER 2		
			RUNNING TIME	0,0-10,0 s	Mixing time Mixer 2
			SPEED BLOCK 1 MIXER 2	20-100%	1st speed Mixer 2
			TIME SPEED BLOCK 1	0-100%	Time 1st speed Mixer 2
SPEED BLOCK 2 MIXER 2	20-100%	2nd speed Mixer 2			

EN


Service menu continued ...					
Main item	Sub-item	Sub	Item	Range	Description
<b>2.03</b> <b>RECIPE SETTINGS</b> (continued....)	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	UNIT 3	MIXER 3 VALVE DELAY TIME (DV3)	0,0-30,0 s	Mixer valve (DV3) delay time
			MIXER 3 VALVE (DV3)	0-100 ml	Dispensing volume mixer valve (DV3)
			RINSE 3 DELAY TIME	0,0-20,0 s	Delay time rinse water (DV3)
			RINSE 3	0-15 ml	Dispensing volume rinsing water automatically deducted from DV3
			SUGAR DELAY TIME	0,0-30,0 s	Sugar product delay time
			SUGAR	0,00-5,00 s	Sugar product dispensing time
			MIXER 3 DELAY TIME	0,0-30,0 s	Delay time Mixer 2
			MIXER 3		
			RUNNING TIME	0,0-10,0 s	Mixing time Mixer 3
			SPEED BLOCK 1 MIXER 3	20-100%	1st speed Mixer 3
		TIME SPEED BLOCK 1	0-100%	Time 1st speed Mixer 3	
		SPEED BLOCK 2 MIXER 3	20-100%	2nd speed Mixer 3	
		HOT WATER VALVE DELAY TIME (DV4)	0.0-30.0 s	Hot water valve delay time	
		HOT WATER VALVE	0-100 ml	Dispensing volume Hot water valve (DV4)	
		DOSING VALVE 5 DELAY TIME (DV5)	0.0-30.0 s	n.a.	
		DOSING VALVE 5 (DV5)	0-100 ml	n.a.	
		DOSING VALVE 6 DELAY TIME (DV6)	0.0-30.0 s	n.a.	
DOSING VALVE 6 (DV6)	0-100 ml	n.a.			

Service menu continued ...						
Main item	Sub-item	Sub	Item	Range	Description	
<b>2.03</b> <b>RECIPE SETTINGS</b> (continued....)	1 RECIPE 2 RECIPE 3 RECIPE 4 RECIPE ETC.	INGREDIENT RANGE SETTING				
			COFFEE STRENGTH	0-10%	With the strength range item an ingredient can be added to the strength control. Ingredient strength control: 0 = off / >1 = on Example: [coffee] 5% Example: [milk] 20%	
			COFFEE DECAF STRENGTH	0-10%		
			TOPPING STRENGTH	0-40%		
			COCOA STRENGTH	0-40%		
			SUGAR STRENGTH			
			COLD WATER VALVE 3 DELAY TIME (KW3)	0.0-30.0 s	Cold water valve 3 delay time *	
			COLD WATER VALVE 3 (KW3)	0-100 ml	Cold water valve 3 dispensing quantity * (* Optional cold water dispensing)	
			OTHER RECIPE SETTINGS		This menu item is not available for the service technician and can only entered with a special PIN code.	
			TEST RECIPE		Test here your altered settings by starting the drink without leaving the menu	

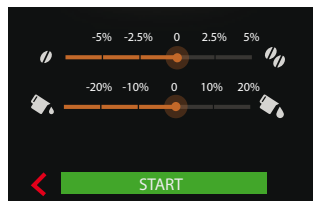

EN



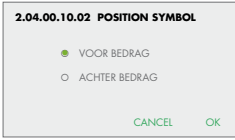
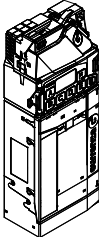
Service menu vervolg ...					
Hoofd item	Sub item	Item	Bereik	Set	Beschrijving
<b>2.04 SETTINGS</b>	LANGUAGE	<div style="border: 1px solid black; padding: 5px;"> <p><b>2.04.16 LANGUAGE</b></p> <ul style="list-style-type: none"> <li><input type="radio"/> NEDERLANDS</li> <li><input type="radio"/> ENGLISH</li> <li><input type="radio"/> DEUTSCH</li> <li><input type="radio"/> FRANÇAIS</li> <li><input type="radio"/> .....</li> <li><input type="radio"/> .....</li> </ul> <p style="text-align: right; margin-top: 5px;">CANCEL    OK</p> </div>		EN	Display language selection. English is factory set.
	TEMPERATURE	BOILER TEMPERATURE	70-97°C *	95°C	Boiler temperature
		TEMPERATURE HYSTERESIS	2-10°C	0°C	Temperature decrease after which the boiler must heat up again
		DISPENSE BLOCKING	70-90°C	78°C	Boiler temperature disables dispensing. Display: [Out of order, boiler heating]
		DISPENCE RELEASE	70-90°C	85°C	Boiler temperature allows dispensing again
		TEMPERATURE STAND-BY	OFF / 60-80°C	OFF	Boiler temperature during stand-by
		EXTENDED HEATING TIME	<p>0-5 sec</p>	1 sec	To maintain the optimum boiler temperature the heating element and inlet valve switch on simultaneously. Set the delay of the element here after the inlet valve is closed.
	DISPLAY	SHOW CLOCK	YES/NO	NO	Show clock in display
		SHOW DATE	YES/NO	NO	Show date in display
		DAYLIGHT SAVING TIME			
		AUTOMATIC	YES/NO	YES	Automatic summer time
		SUMMERTIME ZONE	EU/USA zone	EU	Summer time zone
	TIME DIFFERENCES	+1 / -1 DTS	+1	Time difference	
	USE BEEPER		YES/NO	YES	Sound signal on or off
	VENTILATOR	FAN TIME	0-300 sec.	60 s.	Duration of fan speed 2 after dispensing.
		FAN SPEED DURING REST	40-100%	40%	Fan speed when idle
		FAN SPEED RECIPRE PREPARATION	40-100%	70%	Fan speed during dispensing

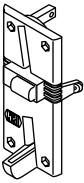

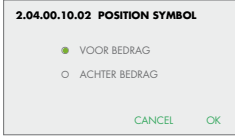
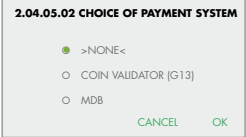
Service menu continued						
...						
Main item	Sub-item	Item		Range	Set	Description
<b>2.04</b> <b>SETTINGS</b> (continued...)	COIN SYSTEM	COIN VALIDATOR (G13) 	COIN CHANNEL 1		€ 0.05	Coin value per channel setting. € 0.05 to € 2.00. 0.00 = free No euro's? Please adjust the coin channels for the foreign currencies
			COIN CHANNEL 2		€ 0.10	
			COIN CHANNEL 3		€ 0.20	
			COIN CHANNEL 4		€ 0.50	
			COIN CHANNEL 5		€ 1.00	
			COIN CHANNEL 6		€ 2.00	
			SINGLE VEND	YES-NO	YES	Yes: any excess money inserted is not kept for the following drink. No: is kept for the following drink.
			MAXIMUM COIN ACCEPTION	0.05-100.00	2.00	Insertions higher than, for example, 2.00 will be refused and returned via the coin groove of the coin mechanism. Set to the highest recipe product price.
			POINT POSITION	0-2	2	The position of the decimal point in the amount.
			SHOW CREDIT	YES-NO	YES	Show credit on the display

EN


COIN CHANNEL	Danish Krone	Swedish Krone	Norwegian Krone	South African Rand	Jordanian Dinar
	DK	SKR	NOK	ZAR	JOD
1	0,50	0,50	1,00	0,50	0,50
2	1,00	1,00	5,00	1,00	1,00
3	2,00	5,00	10,00	2,00	25,00
4	5,00	10,00	20,00	5,00	50,00
5	10,00	1,00	10,00	5,00	1,00
6	20,00	0,00	20,00	0,00	0,00
Max coin accep.	10,00	10,00	10,00	2,00	50,00

# Coin channel settings foreign currencies

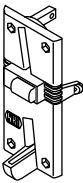Service menu continued ...						
Main item	Sub-item	Item		Range	Set	Description
2.04 SETTINGS (continued...)	COIN SYSTEM (cont...)	COIN VALIDATOR (G13) 	CURRENCY SYMBOL			
			SHOW SYMBOL	YES-NO	NO	Show valuta symbol
			SELECT SYMBOL			
			POSITION SYMBOL			
		MDB 	SINGLE VEND	YES-NO	YES	Yes: any excess money inserted is not kept for the following drink. No: is kept for the following drink.
			MAXIMUM COIN ACCEPTION	€ 0,05-100,00	€ 2,00	Insertions higher than, for example, € 2.00 will be refused and returned via the coin groove of the coin mechanism. Set to the highest recipe product price.
			POINT POSITION	0-2	2	The position of the decimal point in the amount.
			SHOW CREDIT	YES-NO	YES	Show credit (Cr.) on the display.
			PURCHASE OBLIGATION	YES-NO	YES	Whether money is returned or not when the return handle is pressed.
			PRE PAY	YES-NO	NO	Whether or not a drink selected can be made after sufficient money has been inserted.
	CASH AND CARD		YES-NO	NO	yes: when Y-cable is used for coin- and card system on one MDB connection	
	EXTERNAL RELEASE?		YES-NO	NO	yes: the machine can be released by using a potential-free contact (pulse).	
	EXTERNAL RELEASE TIME	0-255 sec.	20 s.	Set the time that the machine may be released		

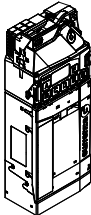Service menu continued ...							
Main item	Sub-item	Item		Range	Set	Description	
2.04 SETTINGS (continued...)	COIN SYSTEM (cont....)	 <p>MDB</p>	CURRENCY SYMBOL				
			SHOW SYMBOL	YES-NO	NO		
			SELECT SYMBOL				
			POSITION SYMBOL				
		CASHLESS PAYMENT TIMEOUT		0-255 sec.	20 s.	The time the payment instruction stays active in the display. When there is no payment within this time the display shows; PAYMENT FAILED.	
		CHOICE OF PAYMENT SYSTEM			>None< no coin systems connected Coin validator connected MDB coin changer or cashless payment system connected		

Service menu continued ...					
Main item	Sub-item	Item	Range	Set	Description
2.04 SETTINGS (continued...)	RESET COUNTERS IN OPERATOR MENU		YES-NO	NO	Add/remove menu item <u>RESET COUNTERS</u> to the operator menu.
	QUICK RECIPE IN OPERATOR MENU		YES-NO	NO	Add/remove menu item <u>QUICK RECIPE</u> to the operator menu.
	DRIP TRAY SIGNAL		YES-NO	YES	Deactivate the drip tray sensor warning in the software.

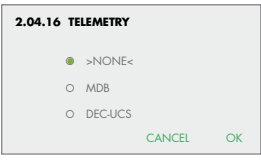Service menu continued ...						
Main item	Sub-item	Item	Range	Set	Description	
<b>2.04 SETTINGS</b> (continued...)	DEMO MODUS		YES-NO	YES	This function can be used when the machine is in a showroom or at a trade fair. The machine does not then need to be connected to a water supply. In the display, DEMO is shown on the bottom line. Keys, LEDs and the Display operate normally.	
	STOP BUTTON		YES-NO	YES	If this function is standard set to yes. To deactivate the stop button, set no	
	DIRECT CHOICE		YES-NO	NO	If this function is set to Yes, the chosen product will be started immediately, without the start key being pressed. Strength setting is not possible anymore.	
	FREE VEND		YES-NO	YES	Set the machine for free or paid vending.	
	FREE VEND IN OPERATOR MENU		YES-NO	YES	Add/remove menu item 1.01 FREE VEND to the operator menu.	
	CUP SENSORS	CUP SENSOR LEFT		YES-NO	YES	yes; cup sensor active no; cup sensor inactive
		CUP SENSOR RIGHT		YES-NO	YES	
		CUP SENSORS IN OPERATOR MENU		YES-NO	YES	Add/remove menu item 1.10 CUP SENSORS to the operator menu.
	OPTILIGHT DURING PREPARATION	BLINK DURING PROCESS		YES-NO	NO	Blinking OptiLight during dispensing a drink
		BLINK RATE		0,1 - 10,0	0,3	Blinking rate setting
		OPTILIGHT		R G B	RED	Colour setting during blinking
	TELEMETRY	TELEMETRY INTERFACE				>None< : No telemetry system connected.
						MDB: Telemetry system connected via MBD port. Data transfer via MDB connection.  DEX-UCS: Telemetry system connected via DEX port. Data transfer via DEX connection.
		REFILL CANISTERS IN OPERATOR MENU		YES-NO	NO	Add menu item <u>1.14 REFILL CANISTER</u> to the operator menu.



Service menu continued ...					
Main item	Sub-item	Item	Range	Set	Description
<b>2.05 RESET COUNTERS</b>	SERVICE COUNTERS	RINSE COUNTER?			Reset rinse counter.
		CLEAN COUNTER?			Reset cleaning counter.
	RECIPE COUNTERS	RECIPE COUNTERS			Reset recipe counters for each recipe.
		TOTAL COUNTER			Reset total counters.
	ALL COUNTERS				Reset all counters at once.
<b>2.06 SERVICE BOILER</b>	SERVICE MOMENT	CUPS	0-50.000	20.000	After reaching the set service moment (cups or month), the message <b>Service boiler</b> appears in the display on switching on. See also Chapter 6 Service.
		MONTHS	0-18	0	If desired a point of time can be set when the <b>Service boiler</b> signal should appear. Example: If 12 months is set during installation the service boiler message will appear on the display 12 months after installation.
	SERVICE COUNTER	CUPS		20.000 ↓ 0 ↓ -20.000	The total number of vended cups or passed month is counted down here. It can be checked here at any time how far away the machine is from periodic maintenance (boiler descaling or water filter replacement). When the counter reaches 0 it continues with a negative count.
		MONTHS			
	RESET SERVICE COUNTER				After periodic maintenance has been carried out (boiler descaled or filter replaced) the service counter must be set to zero.

Water hardness table

Water Quality	Hardness					Service moment after x (cups)
	°D	°F	°K	mmol/l	mgCaCo3/l	
Very hard	18-30	32-55	11-18	3,2-5,3	321- 536	5000
Hard	12-18	22-32	7-18	2,2-3,2	214-321	12.500
Average	8-12	15-22	5-7	1,4-2,2	268-214	20.000*
Soft	4-8	7-15	2-5	0,7-1,4	72-268	40.000
Very soft	0-4	0-7	0-2	0- 0,7	0-72	0 = uit

\* factory setting

Service menu continued ...				
Main item	Sub-item	Sub	Range	Description
<b>2.07 HARDWARE TEST</b>	INPUTS	TEMPERATURE	Boiler temp °C	Shows the status of the sensors / switches concerned
		LEVEL SENSORS	High Yes/no Low Yes/no	
		DRIP TRAY SENSOR	YES/NO	
		WASTE BIN	YES/NO	
		DOOR SWITCH 1 (PIN)	YES/NO	
		BREWER SWITCH	YES/NO	
		DOOR SWITCH 2 (LOCK)	YES/NO	
		CUP SENSOR LEFT	YES/NO	
		CUP SENSOR RIGHT	YES/NO	
	JUMPER DETECTION	YES/NO		
	OUTPUTS	WATER INLET VALVE (KW1)	2500mA	Hold button ACTIVATE pressed to start the selected output. During test the display the shows the nominal current (mA) from the # outputs.  When the Nominal current (mA) of a output rises above the set current mentioned in the table the output will be shut off and a error appears in the display.
		BREWER VALVE (DV1)		
		MIXER VALVE (DV2)		
		MIXER VALVE (DV3)		
		HOT WATER VALVE (DV4)	# 600mA	
		INGREDIENT MOTOR * (IM1)		
		INGREDIENT MOTOR (IM3)		
		INGREDIENT MOTOR (IM4)		
		INGREDIENT MOTOR (IM5)		
		BREWER MOTOR (BM)	1500mA	
		MIXER MOTOR 2 (MM2)	# 3000mA	
		MIXER MOTOR 3 (MM3)		
		FAN	-	
COLD WATER VALVE 3 (KW3)		500mA		
OPTILIGHT	Red, Green, Blue			
<div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>2.07.01.14 MIXER MOTOR (MM2)</b></p> <p>400 mA</p> <p>CANCEL    ACTIVATE</p> </div>				

\*OptiFresh = ingredient motor 1



\*OptiFresh Bean = grinder (no motor current control)



Service menu continued ...					
Main item	Sub-item	Sub	Item	Description	
<b>2.7 HARDWARE TEST</b> (continued...)	CALIBRATION	DV1	15 ml / sec	Calibrate to 150 ml (10 sec x 15 ml)	
		DV2	15 ml / sec		
		DV3	15 ml / sec		
		DV4	15 ml / sec		
		KW3	35 ml / sec	Cold water inlet valve cannot be calibrated (fixed flow)	
	BREWER CALIBRATION			The machine determines every 100 cups an automatic correction factor to correct deviations in the motor brewer speed. With this correction factor the brewer stop positions are automatically adjusted. To activate this function manually press ACTIVATE.	
	OPERATING HOURS	BREWER/ MIXER(S)	BREWER MOTOR (BM/MM1)	CYCLE COUNTER Number x activated   - - - - OPERATOR HOURS Day - Hour : Min. : Sec.         0 - 00 : 00 : 00	
			MIXER MOTOR 2 (MM2)		
			MIXER MOTOR 3 (MM3)		
		INGREDIENT MOTORS)	INGREDIENT* MOTOR (IM1)		
			INGREDIENT MOTOR (IM3)		
			INGREDIENT MOTOR (IM4)		
			INGREDIENT MOTOR (IM5)		
		VALVES	BREWER VALVE (DV1)		example
			MIXER 2 VALVE (DV2)		
			MIXER 3 VALVE (DV3)		
			HOT WATER VALVE (DV4)		
			WATER INLET VALVE (KW1)		
			COLD WATER VALVE 3 (KW3)		
	HEATER	ELEMENT 1			
ELEMENT 2					
TOTAL OPERATING HOURS					

EN

\*OptiFresh = ingredient motor 1  
 \*OptiFresh Bean = grinder (no motor current control)

Service menu continued ...			
Main item	Sub-item	Item	Description
<b>2.08</b> <b>READ LOG FILE</b>	ERROR LOG		Last 20 error messages including time and date will be saved
	CLEANING LOG		Last 31 cleaning actions including time and date will be saved
	RINSE LOG		Last 31 rinsing actions including time and date will be saved
<b>2.09</b> <b>ERASE LOG</b>	Are you sure?		Log will be erased
<b>2.10</b> <b>LOAD DEFAULTS</b>  # See Section 1.2 Model code	<u>MODEL #</u> OF1  OF4	<u>TYPE CODE</u> Stand 3F1A  3FAA	The defaults must be loaded when a new circuit board is installed. When loading the defaults, the OptiFresh Touch model stated on the type plate must be set. Only after confirming the question 'are you sure?' the right model settings will be loaded. <b>Note:</b> <ul style="list-style-type: none"> <li>• When you confirm this setting, all factory settings are loaded into the control and all changed programmed values are lost.</li> <li>• After loading the defaults, the PIN code is 2-2-2-2-2 again and the language is set to English again. Change if necessary.</li> </ul>

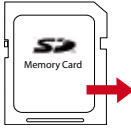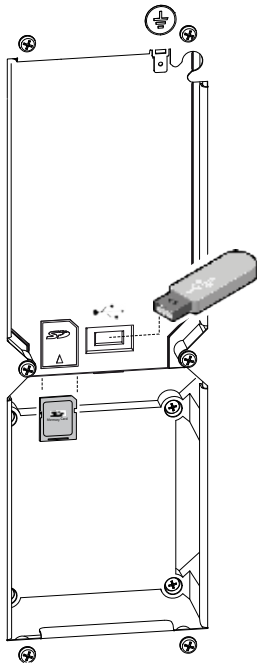Service menu continued ...				
Main item	Sub-item	Item	Description	
<p><b>2.11</b> <b>SD / USB - MENU</b></p> 	LOAD DATA / SOFTWARE UPDATE	PERSONAL SETTINGS	<p>With this menu item <b>Personal settings</b> can be loaded into the machine using an SD / USB memory.</p> <p>This file contains the (changed) personal settings for the menus; <b>2.4 Settings / 2.6 Service boiler / 2.13 Additional settings</b>.</p> <p>The data file (3Fxxx00.MDU) must be on the SD / USB memory</p>	
	<p>Before loading or saving data, place an empty SD / USB memory in the designated slot</p> <p>This is located behind the stainless steel panel on the inside of the door.</p> 		LANGUAGE	<p>With this menu item, a <b>non-standard language</b> set can be loaded into the machine. The data file (xxxxxx.TLF) must be on the SD / USB memory.</p>
			RECIPE	<p>With this menu item <b>Personal recipes</b> can be loaded into the machine using an SD / USB memory.</p> <p>This file contains the (changed) personal recipes for the menus; <b>2.01 Quick recipe / 2.02 Button settings / 2.03 Recipe settings</b>. The data file (3Fxxx00.RCU) must be on the SD / USB memory.</p>
			COUNTERS	<p>With this menu item <b>Recipe counters</b> can be loaded into the machine using an SD or USB memory.</p> <p>There must be a data file (3Fxxx00.CNT) on the SD / USB memory. This file contains all recipe counters from the <b>1.03 Recipe counters</b></p> <p>Use this function only when, for example, a new Main PC board must be installed in the machine and the counters must be 'moved' from the old board to the new one. Do not misuse this function!</p>
			OPERATING HOURS	<p>With this menu item <b>Operating hours</b> can be loaded into the machine using an SD / USB memory.</p> <p>There must be a data file (3Fxxx00.TMR) on the SD / USB memory. This files contains all the operating hours from the menu <b>2.07 Hardware test / operating hours</b>.</p> <p>Use this function only when, for example, a new Main PC board must be installed in the machine and the counters must be 'moved' from the old board to the new one. Do not misuse this function!</p>
			MANUAL SOFTWARE UPDATE	<p>With this menu item an <b>Manual software update</b> can be loaded into the machine using an SD / USB memory.</p> <p>Use this function only if you are a experienced and trained engineer.</p>
			AUTOMATIC SOFTWARE UPDATE	<p>With this menu item an <b>Automatic software update</b> can be loaded into the machine using an SD / USB memory.</p> <p>Follow the chapter 5.3 Software installation for a step by step instruction</p>

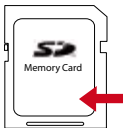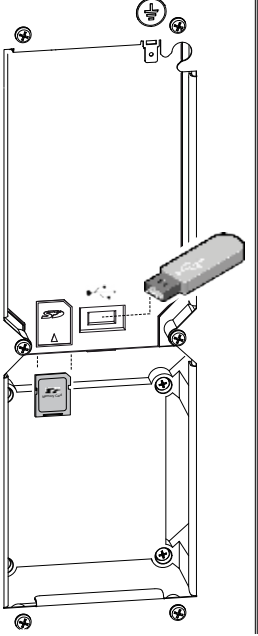Service menu continued ...			
Main item	Sub-item	Item	Description
<p><b>2.11</b> <b>SD / USB - MENU</b> (continued...)</p>	<p>SAVE DATA</p> 	PERSONAL SETTINGS	<p>With this menu item <b>Personal settings</b> can be saved on an SD/USB memory and/or copied to another machine.</p> <p>All changed settings made in the menus; <b>2.04 Settings / 2.06 Service boiler / 2.13 Additional settings</b> are saved in a data file (3Fxxx00.MDU) on the memory.</p>
	<p>Before loading or saving data, place an empty SD / USB memory in the designated slot</p> <p>This is located behind the stainless steel panel on the inside of the door.</p> 	RECIPE	<p>With this menu item <b>Recipe settings</b> (personal recipes) can be saved on an SD/USB memory and/or copied to another machine.</p> <p>All changed settings made in the menus; <b>2.1 Quick recipe / 2.2 Button settings / 2.3 Recipe settings</b> are saved in a data file (3Fxxx00.RCU) must be on the SD / USB memory.</p>
		COUNTERS	<p>With this menu item the <b>Log</b> (error messages overview) can be saved on an SD memory card.</p> <p>All counter readings from the menu; <b>1.03 Recipe counters</b> are saved in a data file (3Fxxx00.CNT) on the SD / USB memory.</p> <p><b>Note;</b> after the counters have been saved you will be asked if the counters in the machine must be reset. Press Cancel for NO, press OK for YES.</p>
		OPERATING HOURS	<p>With this menu item the <b>Operating hours</b> can be saved on an SD / USB memory.</p> <p>All operating hours from the menu; <b>2.07 Hardware test / Operating hours</b> are saved in a data file (3Fxxx00.TMR) on the SD / USB memory.</p> <p><b>Note;</b> after the operating hours have been saved you will be asked if the counters in the machine must be reset. Press Cancel for NO, press OK for YES.</p>
		LOG	<p>With this menu item the <b>Log</b> (error messages overview) can be saved on an SD/USB memory.</p> <p>All error messages from the menu; <b>2.08 Read log</b> are saved in a data file (3Fxxx00.LOG) on the SD / USB memory.</p> <p><b>Note;</b> Depending on your settings, Windows can read this file as a TXT file.</p>
		SAVE ALL	<p>With this menu all above mentioned items are saved in <b>one operation</b> can be saved on an SD/USB memory.</p>
LOGGING TO SD-CARD	COPY INTERNAL LOG FILES	<p>Use this function only when we ask you to send Animo a log file in case of undefined problems. Place an empty SD-card (min. 2Gb) in the SD-slot. To enter the 'hidden items' PIN-code (Hidden items) 47940. <b>START COPYING INTERNAL LOG FILES</b>, press OK</p> <p>During the use of the machine log files are written on the SD-card.</p>	

Service menu continued ...					
Main item	Sub-item	Item	Range	Set	Description
2.12 CHANGE SERVICE PIN CODE	NEW PIN CODE	REPEAT PIN CODE	With this menu item the PIN code can be changed. The complete service menu is secured behind this PIN code. This PIN code prevents unintentional changes to the machine settings by untrained personnel. <ul style="list-style-type: none"> <li>The factory service PIN code is 2-2-2-2-2</li> </ul> PIN code forgotten? In the PIN code input display a number is displayed on the right. Enter the associated PIN code (see the Pin code Table) to access the service menu.		
2.13 ADDITIONAL SETTINGS	WASTE MANAGEMENT	NUMBER OF BREWS	0-1000	130	After reaching the set number of brewer movements, the vending is blocked and on the display the message is shown; <b>Waste bin full</b>
		HYSTERESIS	0-100	20	After reaching the set number of brewer movements minus the hysteresis, on the display the message is shown; <b>Waste bin almost full</b>
		TIME-OUT RESET	0-50 sec.	15 s	The time that the waste bin must have been removed from the machine (to empty it). When it is replaced, the (internal) waste bin counter is reset. Any display messages disappear.
		WASTE BIN SIGNAL	YES - NO	YES	Deactivate waste bin sensor in software (bypass).
	CYCLE COUNTER	xxxxx	0-100.000		This cycle counter counts the number of brews the brewer has made. Tip; this counter can be reset after major maintenance when, for example, the brewer is checked.
	RESET CYCLE COUNTER	RESET COUNTER?			Reset cycle counter (Brewer)
	SERVICE BREWER		0-50.000	40.000	When the set number of brews (Brewer) is reached, the display shows the message 'Service brewer'.
	RESET SERVICE BREWER	RESET COUNTER?			Reset the Service brewer signal after maintenance has been carried out on the brewer.
	BREWER OPEN TIME		6,5- 10,5 s	7,3 s	To calibrate the exact brewer open position (piston complete down) after activating <i>brewer open/close</i> button.

EN

Pin code Tabel

Nr.	Pin ode				
1	3	4	2	4	2
2	3	1	4	3	4
3	4	1	3	4	3
4	4	3	2	3	2
5	2	3	3	4	1
6	4	2	1	3	1
7	2	4	2	4	4

Nr.	Pin code				
8	2	3	2	4	1
9	2	4	3	2	3
10	3	1	3	3	2
11	1	3	3	3	2
12	1	2	4	1	3
13	4	3	1	2	1
14	1	1	1	4	2

Nr.	Pin code				
15	2	1	2	1	1
16	1	2	2	3	3
17	3	4	1	4	4
18	4	1	4	3	3
19	3	1	2	4	1
20	2	2	3	2	4

Service menu continued ...					
Main item	Sub-item	Item	Range	Set	Description
2.16 CLEANING MANAGEMENT	RINSING	RINSE OBLIGATED	YES - NO	NO	If rinsing obligated is set to YES, the machine is locked if it is NOT rinsed after the set number of cups or days. <b>Out of order / rinse</b> After the rinse programme has been completed, the machine is released again.
		CUPS		0	
		DAYS		1	
	CLEANING	RINSE OBLIGATED	YES - NO	NO	If cleaning obligated is set to YES, the machine is locked if it is NOT cleaned after the set number of cups or days. <b>Out of order / clean</b> After the cleaning programme has been completed, the machine is released again.
		CUPS		0	
		DAYS		7	
	REPLACE BREWER FILTER	REPLACE OBLIGATED	YES - NO	NO	If change obligated is set to YES, the machine is locked if the brewer filter was NOT changed after the set number of cups or days. <b>After the change brewer filter programme has been completed, the machine is released again.</b>
		CUPS	0 - 10.000	10.000	
		DAYS	0-31	0	



### 5. SETTINGS & SOFTWARE

This chapter [5.1 & 5.2] informs how to work with files which can be created by the machine. In this files various machine settings are saved.

The second part [5.3] of this chapter informs how the complete machine software can be updated in case of a improvement.

To get access to the SD/USB slots remove the cover inside the door.




#### WARNING

- When using a SD card the contacts must point upwards and to the back.
- When using a USB memory stick the door must be left open to prevent damaging the USB- slot and memory stick. When during use the display shows CLOSE DOOR use the service pin to simulate the door is closed.



#### WARNING

- When a setting file is saved, the first 4 characters and the extension may never be changed. They contain important information which identify the exact machine execution.

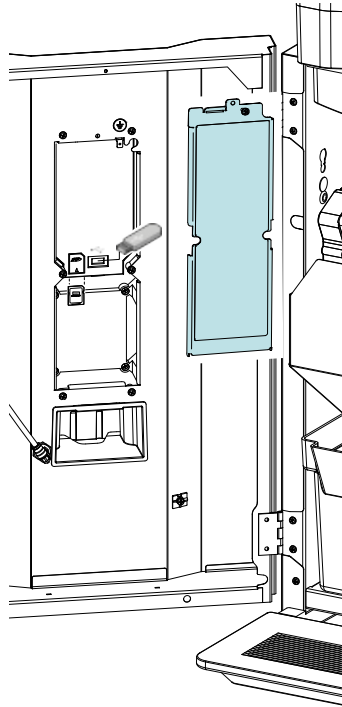

The file name contains the following information:

<b>3F</b>	<b>3A</b>	aa	00	.ext	
					extension*
					index number (00, 01, 02, etc.)
					internal code
					model code (OF1, OF 3 etc.)
					3F = OptiFresh Touch version

\* The different files are save with the following extentions:

- Personal settings      \*.MDU
- Recipe file            \*.RCU
- Counter file            \*.CNT
- Log file                \*.LOG
- Operating hours file   \*.TMR

### Reading your saved files on a computer

The following files can simply be opened on a computer and readable.



#### WARNING

- Never change the content in a file, they may not be changed and copied back into the machine!

Recipe file           \*.RCU  
 Counter file        \*.CNT  
 Log file             \*.LOG  
 Operating hours file \*.TMR

Place the SD / USB memory in your computer and open the required file with Wordpad.

Note: Depending on your settings, Windows can see the LOG file as a TXT file.

#### Recipe file

```

RECIPE SELECTION 1  COFFEE
00  RECIPE:: 1
01  RECIPE ACTIVE: 1
02  BREWER: 1
03  PRICE: 32767
04  CUP VOLUME: 180
05  MULTICUP: 0
06  SET RECIPE FUNCTION: 3
07  PUSH & HOLD: 0
08  LEAK OUT TIME: 2
09  BREWER VALVE DELAY TIME (DV1): 0
10  BREWER VALVE (DV1): 1000
11  RINSE 1 DELAY TIME: 5
12  RINSE 1: 75
13  INGREDIENT 1 DELAY TIME: 5
14  INGREDIENT 1: 150
15  INGREDIENT 2 DELAY TIME: 0
    
```

#### Counter file

```

Generated on 2017-09-11, 10:02
Software version: V6.1.2939
Android version: var_mx6-eng 5.0.2 1.0.0-ga-var03
20170303 V0.05

Button 1 (COFFEE)
Free: 44
PayedLow: 0
PayedHigh: 0
PayedToken: 0
Test: 22
Total: 66
Pot: 0
PriceLow: 0
PriceHigh: 32767
PriceTotal: 0

Button 2 (COFFEE CREME INSTANT)
Free: 5
PayedLow: 0
    
```

#### Log file

```

Generated on 2017-09-11, 10:02
Software version: V6.1.2939
Android version: var_mx6-eng 5.0.2 1.0.0-ga-var03
20170303 V0.05

01: E21 12-07-17 09:14 E21 BOILER TIMEOUT
02: E02 07-07-17 08:55 E2 LEVEL ERROR
03: E02 05-07-17 09:17 E2 LEVEL ERROR
04: E02 29-06-17 13:23 E2 LEVEL ERROR
05: E02 29-06-17 13:18 E2 LEVEL ERROR
    
```

#### Timer file

```

Generated on 2017-09-11, 10:02
Software version: V6.1.2939
Android version: var_mx6-eng 5.0.2 1.0.0-ga-var03
20170303 V0.05

Mixers:
1: 1255 0 - 1:35:36
2: 241 0 - 0:16:6:274
3: 121 0 - 0:11:25:765

Ingredient motors:
1: 117 0 - 0:3:48:238
2: 0 0 - 0:0:0:0
3: 68 0 - 0:2:15:208
4: 21 0 - 0:0:38:747
5: 23 0 - 0:0:18:232
6: 0 0 - 0:0:0:0

Pump:
2 0 - 0:0:0:255

Heaters:
    
```


### 5.1 Save settings

After installing and setting up (fine tuning) a machine its possible to copy the most important settings to other Machines with the same canister configuration with a SD/USB memory device.



Please write down each file name when the display shows SAVE AS:

Please save the **Personal settings (.MDU)** and **Recipes (.RCU)** only.

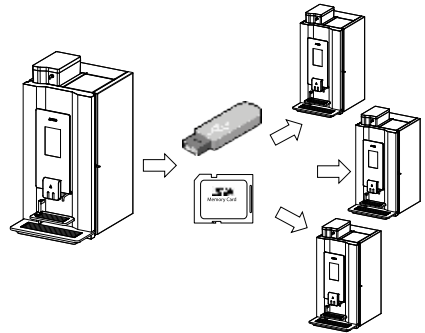

1. Place the SD/USB memory
2. Navigate to Save data
3. Save the personal- and recipe settings:

**SERVICE MENU**

2.11 SD/USB MENU

2.11.01 SAVE DATA

2.11.01.00 PERSONAL SETTINGS

2.11.01.01 RECIPE

5	x
SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU ←
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.16	CLEANING MANAGEMENT

5	x
2.11 SD/USB - MENU	
2.11.00	LOAD DATA / SOFTWARE UPDATE
2.11.01	SAVE DATA ←
2.11.02	REMOVE SD-CARD

5	x
2.11.01 SAVE DATA	
2.11.01.00	PERSONAL SETTINGS ←
2.11.01.01	RECIPE ←
2.11.01.02	COUNTERS
2.11.01.03	LOG
2.11.01.04	OPERATING HOURS
2.11.01.05	SAVE ALL

2.11.00.00 PERSONAL SETTINGS SAVE AS: 3Bxxxx00.MDU OK	2.11.00.00 PERSONAL SETTINGS SAVED 3Bxxxx00.MDU OK
2.01.00.01 RECIPE SAVE AS: 3Bxxxx00.RCU OK	2.01.00.01 RECIPE SAVED 3Bxxxx00.RCU OK

4. Remove the SD/USB memory


### 5.2 Load settings

When loading previous saved settings into an other machine with the same canister configuration.

If the display shows RDU MDU NOT AVAILABLE there are no suitable files found on the SD/USB memory.



Its not possible to copy settings from a:  
**OptiFresh 2 Touch** into a **OptiFresh 3 Touch**  
**OptiFresh 3 Touch** into a **OptiFresh 4 Touch**

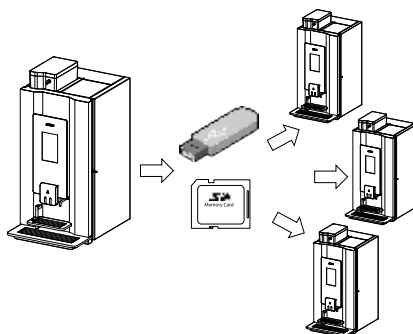

Please load the **Personal settings (.MDU)** and **Recipes (.RCU)** only.

1. Place the SD/USB memory with previous copied settings on it in the machine
2. Navigate to Load data
3. Load the personal- and recipe settings:

#### SERVICE MENU

##### 2.11 SD/USB MENU

##### 2.11.01 LOAD DATA/SOFTWARE UPDATE

##### 2.11.01.00 PERSONAL SETTINGS

##### 2.11.01.01 RECIPE

<table border="1"> <tr><th>⏪</th><th>×</th></tr> <tr><td colspan="2">SERVICE MENU</td></tr> <tr><td>2.01</td><td>QUICK RECIPE PRO</td></tr> <tr><td>2.02</td><td>RECIPE BUTTON SETTINGS</td></tr> <tr><td>2.03</td><td>RECIPE SETTINGS</td></tr> <tr><td>2.04</td><td>SETTINGS</td></tr> <tr><td>2.05</td><td>RESET COUNTERS</td></tr> <tr><td>2.06</td><td>SERVICE BOILER</td></tr> <tr><td>2.07</td><td>HARDWARE TEST</td></tr> <tr><td>2.08</td><td>READ LOG FILE</td></tr> <tr><td>2.09</td><td>REMOVE LOG FILE</td></tr> <tr><td>2.10</td><td>LOAD DEFAULTS VALUES</td></tr> <tr><td>2.11</td><td>SD/USB MENU ←</td></tr> <tr><td>2.12</td><td>CHANGE SERVICE PIN</td></tr> <tr><td>2.13</td><td>OTHER SETTINGS</td></tr> <tr><td>2.16</td><td>CLEANING MANAGEMENT</td></tr> </table>	⏪	×	SERVICE MENU		2.01	QUICK RECIPE PRO	2.02	RECIPE BUTTON SETTINGS	2.03	RECIPE SETTINGS	2.04	SETTINGS	2.05	RESET COUNTERS	2.06	SERVICE BOILER	2.07	HARDWARE TEST	2.08	READ LOG FILE	2.09	REMOVE LOG FILE	2.10	LOAD DEFAULTS VALUES	2.11	SD/USB MENU ←	2.12	CHANGE SERVICE PIN	2.13	OTHER SETTINGS	2.16	CLEANING MANAGEMENT	<table border="1"> <tr><th>⏪</th><th>×</th></tr> <tr><td colspan="2">2.11 SD/USB - MENU</td></tr> <tr><td>2.11.00</td><td>LOAD DATA / SOFTWARE UPDATE ←</td></tr> <tr><td>2.11.01</td><td>SAVE DATA</td></tr> <tr><td>2.11.02</td><td>REMOVE SD-CARD</td></tr> </table>	⏪	×	2.11 SD/USB - MENU		2.11.00	LOAD DATA / SOFTWARE UPDATE ←	2.11.01	SAVE DATA	2.11.02	REMOVE SD-CARD	<table border="1"> <tr><th>⏪</th><th>×</th></tr> <tr><td colspan="2">2.11.00 LOAD DATA/SOFTWARE UPDATE</td></tr> <tr><td>2.11.00.00</td><td>PERSONAL SETTINGS ←</td></tr> <tr><td>2.11.00.01</td><td>LANGUAGE</td></tr> <tr><td>2.11.00.02</td><td>RECIPE ←</td></tr> <tr><td>2.11.00.03</td><td>COUNTERS</td></tr> <tr><td>2.11.00.04</td><td>OPERATING HOURS</td></tr> </table>	⏪	×	2.11.00 LOAD DATA/SOFTWARE UPDATE		2.11.00.00	PERSONAL SETTINGS ←	2.11.00.01	LANGUAGE	2.11.00.02	RECIPE ←	2.11.00.03	COUNTERS	2.11.00.04	OPERATING HOURS
⏪	×																																																									
SERVICE MENU																																																										
2.01	QUICK RECIPE PRO																																																									
2.02	RECIPE BUTTON SETTINGS																																																									
2.03	RECIPE SETTINGS																																																									
2.04	SETTINGS																																																									
2.05	RESET COUNTERS																																																									
2.06	SERVICE BOILER																																																									
2.07	HARDWARE TEST																																																									
2.08	READ LOG FILE																																																									
2.09	REMOVE LOG FILE																																																									
2.10	LOAD DEFAULTS VALUES																																																									
2.11	SD/USB MENU ←																																																									
2.12	CHANGE SERVICE PIN																																																									
2.13	OTHER SETTINGS																																																									
2.16	CLEANING MANAGEMENT																																																									
⏪	×																																																									
2.11 SD/USB - MENU																																																										
2.11.00	LOAD DATA / SOFTWARE UPDATE ←																																																									
2.11.01	SAVE DATA																																																									
2.11.02	REMOVE SD-CARD																																																									
⏪	×																																																									
2.11.00 LOAD DATA/SOFTWARE UPDATE																																																										
2.11.00.00	PERSONAL SETTINGS ←																																																									
2.11.00.01	LANGUAGE																																																									
2.11.00.02	RECIPE ←																																																									
2.11.00.03	COUNTERS																																																									
2.11.00.04	OPERATING HOURS																																																									
	<table border="1"> <tr><td>2.11.00.00</td><td>PERSONAL SETTINGS</td></tr> <tr><td><input checked="" type="checkbox"/> 3Fxxxx00.MDU</td><td></td></tr> <tr><td colspan="2" style="text-align: center;">CANCEL OK</td></tr> </table>	2.11.00.00	PERSONAL SETTINGS	<input checked="" type="checkbox"/> 3Fxxxx00.MDU		CANCEL OK		<table border="1"> <tr><td>2.11.00.00</td><td>PERSONAL SETTINGS</td></tr> <tr><td colspan="2" style="text-align: center;">LOADED</td></tr> <tr><td colspan="2" style="text-align: right;">OK</td></tr> </table>	2.11.00.00	PERSONAL SETTINGS	LOADED		OK																																													
2.11.00.00	PERSONAL SETTINGS																																																									
<input checked="" type="checkbox"/> 3Fxxxx00.MDU																																																										
CANCEL OK																																																										
2.11.00.00	PERSONAL SETTINGS																																																									
LOADED																																																										
OK																																																										
	<table border="1"> <tr><td>2.01.00.02</td><td>RECIPE</td></tr> <tr><td><input checked="" type="checkbox"/> 3Fxxxx00.RCU</td><td></td></tr> <tr><td colspan="2" style="text-align: center;">CANCEL OK</td></tr> </table>	2.01.00.02	RECIPE	<input checked="" type="checkbox"/> 3Fxxxx00.RCU		CANCEL OK		<table border="1"> <tr><td>2.01.00.02</td><td>RECIPE</td></tr> <tr><td colspan="2" style="text-align: center;">LOADED</td></tr> <tr><td colspan="2" style="text-align: right;">OK</td></tr> </table>	2.01.00.02	RECIPE	LOADED		OK																																													
2.01.00.02	RECIPE																																																									
<input checked="" type="checkbox"/> 3Fxxxx00.RCU																																																										
CANCEL OK																																																										
2.01.00.02	RECIPE																																																									
LOADED																																																										
OK																																																										


4. Remove the SD/USB memory

**ATTENTION !**  
 Untill futher notice  
 please use a SD only

### 5.3 Software installation

New software can easily be installed on the machine.  
 New software is available in the following ways:

- www.animo.eu/en/sd (no log in needed)
- www.animo.eu / dealer login: Extranet
- by e-mail from Animo Technical Support

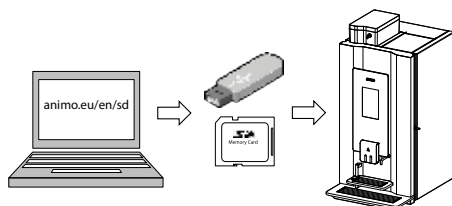

When loading new software all the existing settings are automatically saved on the SD card /USB memory. After the software update you can decide if you want to work with the factory settings, or if you want to use the settings back upped before the software update. Please follow the instruction in chapter 5.2. Movies, screensaver picture, Counters, Log and operating hours will be preserved!

EN

The complete software update take abt. 5-8 minutes (depending on the bootloader).

1. Download the OptiFresh Touch software.
2. Unpack the ZIP file and copy the all directories & files (see right) on an empty SD card / USB stick.
3. Leave the machine switched on and remove the cover plate inside the door.
4. Insert the SD card / USB stick in the designated opening in the door
5. Navigate to Automatic software update:

- SD:
- Media standard
  - 6.2.2954.thx
  - 6.1.2910.ahx
  - 1.1.2958.apk

SERVICE MENU

2.11 SD/USB MENU

2.11.00 LOAD DATA/SOFTWARE UPDATE

2.11.00.06 AUTOMATIC SOFTWARE UPDATE

5	x
SERVICE MENU	
2.01	QUICK RECIPE PRO
2.02	RECIPE BUTTON SETTINGS
2.03	RECIPE SETTINGS
2.04	SETTINGS
2.05	RESET COUNTERS
2.06	SERVICE BOILER
2.07	HARDWARE TEST
2.08	READ LOG FILE
2.09	REMOVE LOG FILE
2.10	LOAD DEFAULTS VALUES
2.11	SD/USB MENU ←
2.12	CHANGE SERVICE PIN
2.13	OTHER SETTINGS
2.16	CLEANING MANAGEMENT

5	x
2.11 SD/USB - MENU	
2.11.00	LOAD DATA / SOFTWARE UPDATE ←
2.11.01	SAVE DATA
2.11.02	REMOVE SD-CARD


5	x
2.11.00 LOAD DATA/SOFTWARE UPDATE	
2.11.00.00	PERSONAL SETTINGS
2.11.00.01	LANGUAGE
2.11.00.02	RECIPE
2.11.00.03	COUNTERS
2.11.00.04	OPERATING HOURS
2.11.00.05	MANUAL SOFTWARE UPDATE
2.11.00.06	AUTOMATIC SOFTWARE UPDATE ←

6. Press **OK** if you want save your existing files from the machine (preferred).  
*Press SKIP if you don't want to save your existing files from the machine.*



The personal- and recipe files are automatically stored on the SD/USB memory.


If the machine not detect files on the SD/UBS memory it will show  
NO DATA PRESENT ON MEDIA

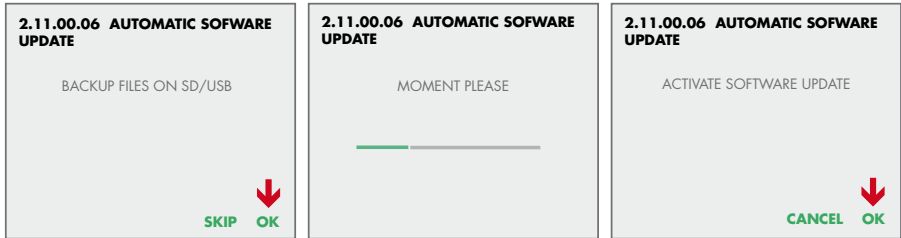

7. Press **OK** to start the automatic software update.  
*Press CANCEL if you don't want to start the automatic software update.*  
*The machines will start up again.*




The AHX\* or THX\* file is being uploaded to the main PC board which is positioned behind the left side panel. \*Depending on the bootloader (bios) which is preinstalled on the main PC board., the AHX or THX file is uploaded.

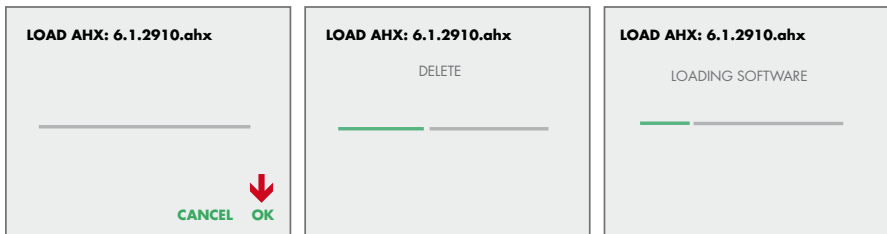

8. Press **INSTALL** to start continue the software update.




The Application (APP) is being updated to the PC board behind the display.

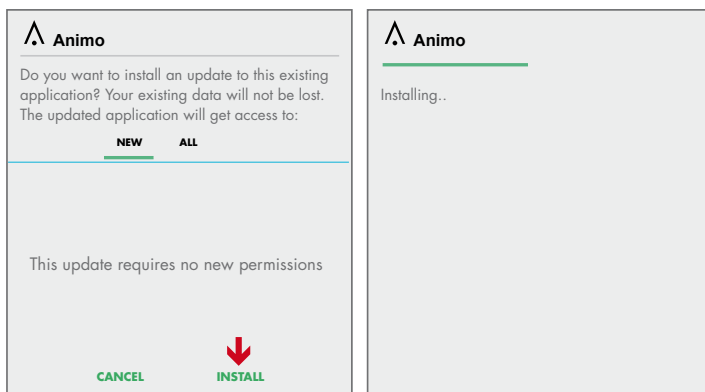

9. Select **Standard** and Press the button **LOAD**




The machine model-, media- an recipe files are copied to the internal storage

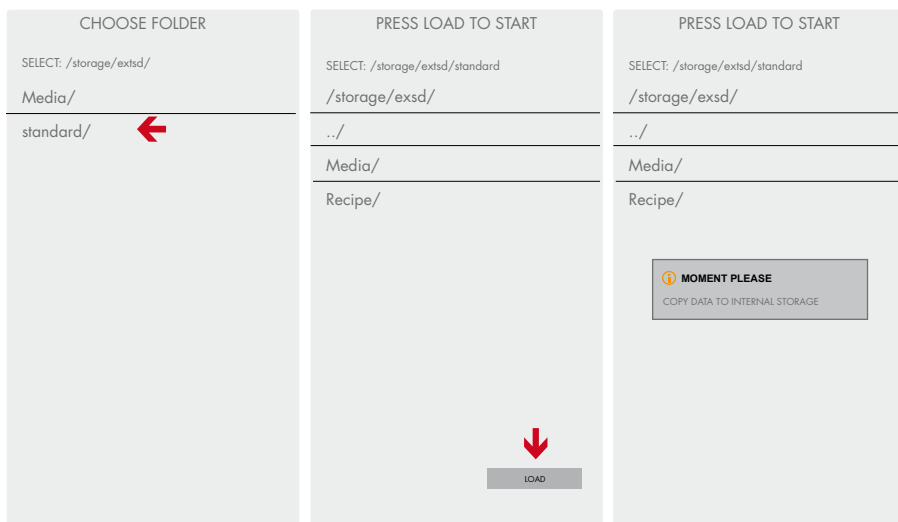

10. Select the **OptiFresh Touch** model of your choice.

To select the right model please go to chapter 1.2 Model code.

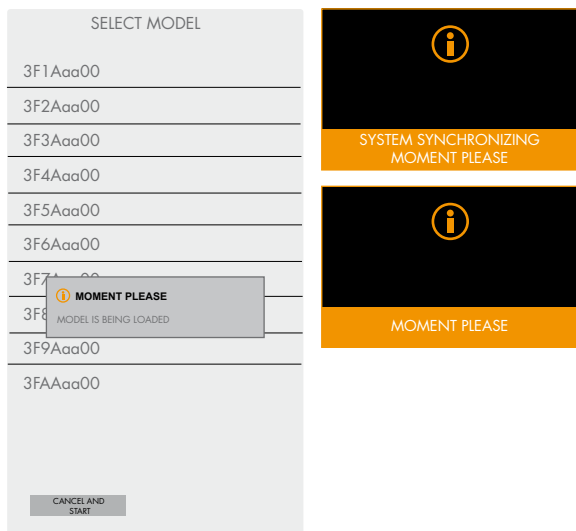

11. The software update is successfully updated. The machine operates like a new machine straight from the factory.

If you want load the saved settings (recipes) in the machine, leave the SD/USB memory in place and please follow the next step.



12. Load the personal- and recipe settings which were back upped on the SD/USB memory before the software update was started back into the machine.


Navigate to Automatic software update:

2.11 SD/USB MENU

2.11.00 LOAD DATA/SOFTWARE UPDATE

2.11.00.00 PERSONAL SETTINGS

2.11.00.02 RECIPE

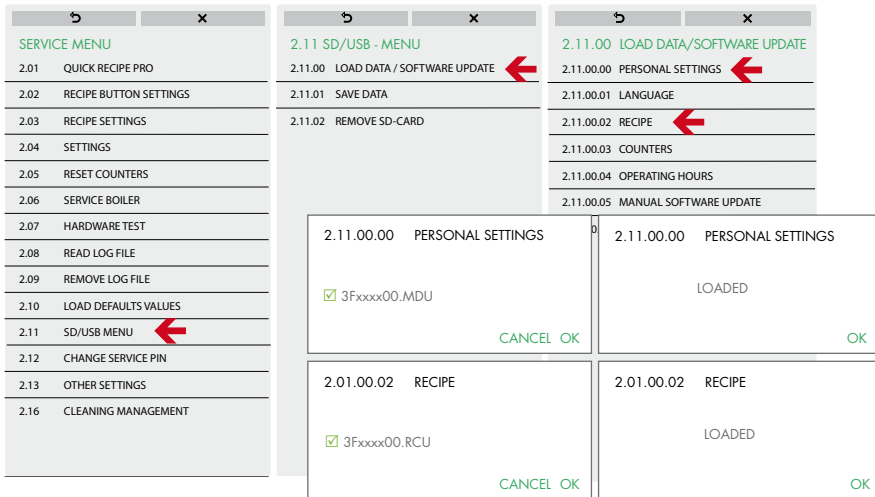


13. Remove the SD/USB from the slot

### 6. MAINTENANCE

#### 6.1 Daily rinsing program

After 1 day the display shows RINSE.  
This message will disappear again after the rinsing program is executed.

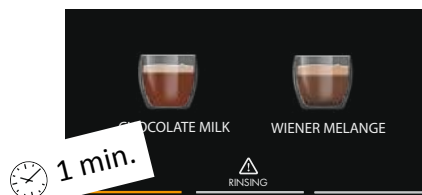

#### Start rinsing program

1. Press the text MAKE YOUR CHOICE for 2 sec. to enter the cleaning management menu.
2. Press RINSING, and follow the instructions.
3. Confirm with OK to start the rinsing.  
The brewer and mixer unit are rinsed with clean hot water.




**i** The user can even be obliged to carry out the rinsing program. If the rinsing program was not activated, the machine blocks.

#### 2.16 CLEANING MANAGEMENT

##### RINSING


##### RINSING MANDATORY

YES

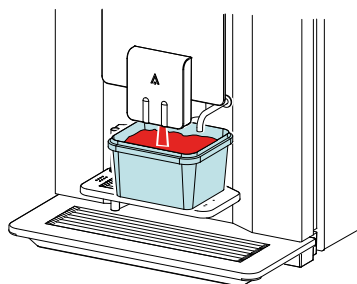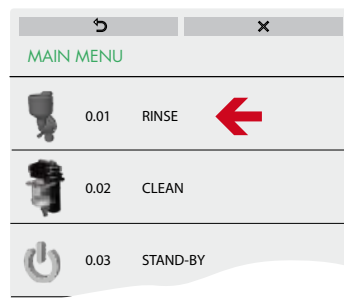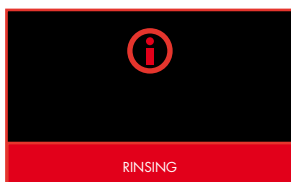



## 6.2 Weekly cleaning program

After 7 days appears the display shows CLEANING. This message will disappear again after the cleaning program is executed.

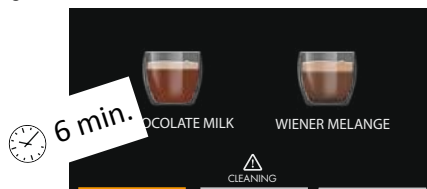

### Start cleaning program

1. Press the text MAKE YOUR CHOICE for 2 sec. to enter the cleaning management menu.
2. Press CLEANING, Place an empty container and press OK.
3. Add the coffee cleaner powder in the brew chamber and confirm with OK
4. The cleaning program for the fresh brew unit is started.
5. After the CLEANING program the RINSING program starts automatically and rinses the brewer (and mixer) with clean water.
6. After the RINSING cycle the brewer chamber opens, so it can be taken out and rinsed.
7. Place the brewer chamber back in the right way (wiper in the middle) and press OK.

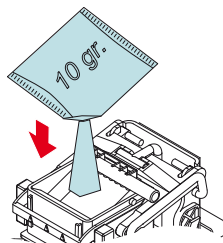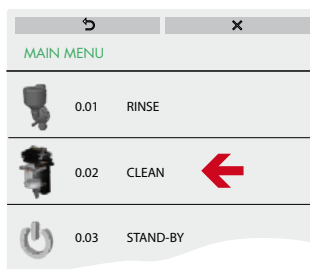



**i** The user can even be obliged to carry out the cleaning program. If the cleaning program was not activated, the machine blocks.

### 2.16 CLEANING MANAGEMENT

#### CLEANING


RINSING MANDATORY

YES

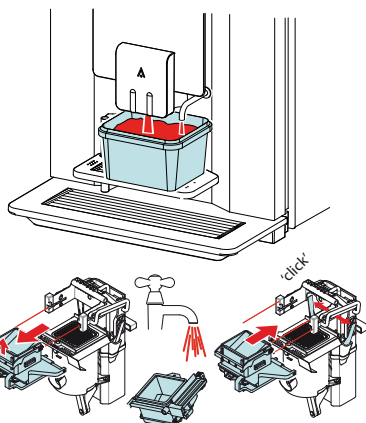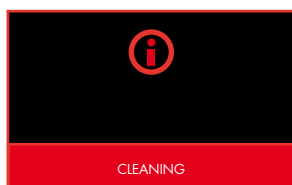

### 6.3 Change brewer filter

Monthly (or 4000 cups of coffee) the display shows REPLACE BREWER FILTER. This message will disappear again until the entire program is executed.

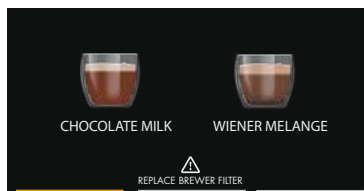


1. Activate the OPEN / CLOSE BREWER and follow the instructions in the display. The brewer is opened so the permanent filter can be replaced for a clean one.
2. Remove the brewer chamber and outlet.
3. Insert the filter removal tool in the coffee spout and press the dirty filter is upwards to remove.
4. Replace the permanent filter for a clean one. Clean the dirty filter in the prescribed powerful liquid coffee cleaner.
5. Clean brewer chamber and coffee spout.
6. Place the brewer chamber back in the right way (wiper in the middle).
7. Activate OPEN/CLOSE BREWER again to close the brewer.
8. The display shows the text FILTER REPLACED? No? press CANCEL / Yes? press OK

Only after pressing OK the internal counter is reset and the REPLACE BREWER FILTER instruction disappears from the display

- 2.16 CLEANING MANAGEMENT
- CHANGE BREWER FILTER
  - CHANGE MANDATORY
  - YES



	0.02	CLEANING
	0.03	STAND-BY
	0.04	CLEANING TOUCH SCREEN
	0.05	OPEN / CLOSE BREWER
	0.06	OPERATOR...

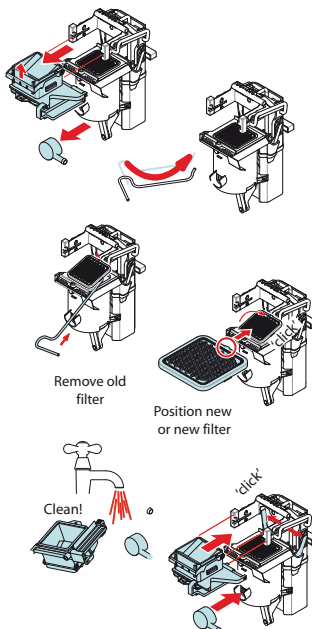


## 6.4 Periodic maintenance

### 6.4.1 Service boiler

During installation of the machine the boilers service moment has been set. See service menu item **2.6 Service boiler / 2.6.1 Service moment**

#### Service boiler / 2.6.1 Service moment

During use, the drinks are counted. When the boiler service moment is reached the text [ *Service Boiler* ] will appear in the display.

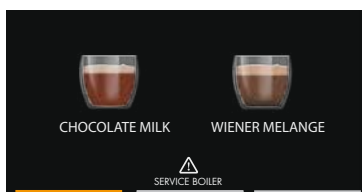

#### 1 / Descale Boiler



Reaching the service boiler time is an indication that the boiler need descaled. Follow the instructions in section 6.6 Descaling.

#### 2 / Replaced water filter

If a water filter is used (advice), this is the signal to replace the filter.

**i** Always inspect the boiler on scale after replacing the water filter. If necessary carried out a descaling procedure using a small amount of descaler.

**i** Reset after descaling the service boiler signal in the service menu:

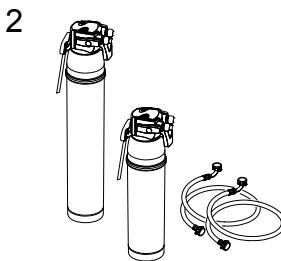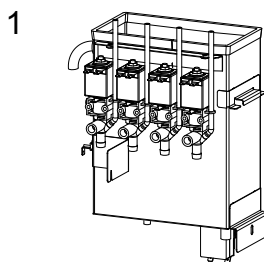

## 2.06 SERVICE BOILER

### RESET SERVICE COUNTER


YES

### 6.4.2 Service brewer

The service moment brewer is factory set. See service menu item **2.13 Other Settings / 2.13.2 Service brewer**

During use the brewer movements are counted. When the service brewer moment is reached the text [ *Service brewer* ] will appear in the display.

Achieving the service brewer moment indicates that the brewer needs servicing.

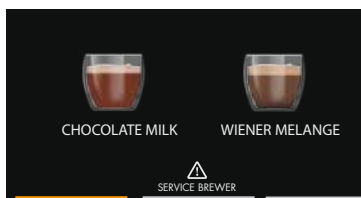

#### 1/ Fresh brew group

- After 40,000 cycles, the permanent filter(s), wiper and brewer chamber seal must be replaced. See chapter 6.5.1
- After 80,000 cycles, a complete inspection of the fresh brew group is recommended and any worn parts must be replaced.

#### 2/ Gear motor unit

Service life 2 years or 80,000 cycles

After 40,000 cycles, check the operation of the drive and micro switch unit and clean it.

After 80,000 cycles, check the whole drive unit and replace as necessary.


**i** After the brewer maintenance reset the service brewer signal in the service menu:

#### 2.16 OTHER SETTINGS


RESET SERVICE BREWER

YES

1

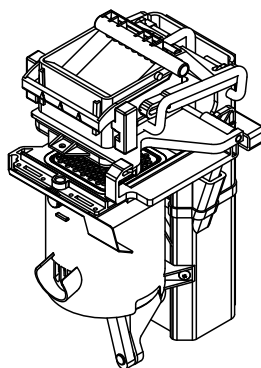

2

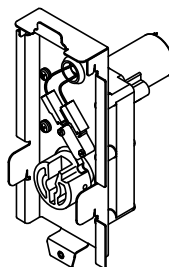

## 6.5 Service contracts

### Preface

Preventative maintenance will lengthen the life cycle of the device and reduce the chance of malfunction. Before carrying out maintenance, read the safety instructions in the user manual, service manual, and recommended cleaning agents.

User manuals, service manuals and software updates can be found on the Extranet section of [www.animo.eu](http://www.animo.eu). If you do not have access, please request your personal login code on our website.

### Water filter

We strongly advise you to use a water softener and/or water filter if the mains water is heavily chlorinated or is too hard. This increases the quality of the drink and will ensure that you do not have to descale the device too often.






### Brewer unit





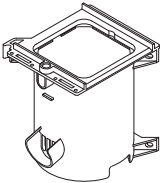
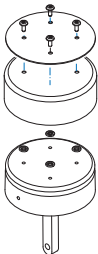
We advise to use a substitute brewer for maintenance. The removed brewer can then be repaired in the workshop before being used again during the next service.

### 6.5.1 Servicing


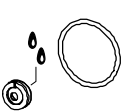
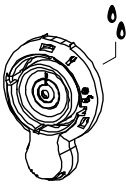

For an estimated total of < 20,000 cups a year we recommend one service a year.

For an estimated total of > 20,000 cups a year we recommend two services a year.

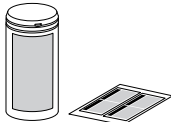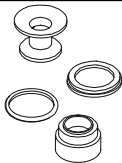Service activity	Time	Product	Art.No.	OptiFresh (Bean)			
				1	2	3	4
<b>Descale</b>							
	45 min.						
Descale boiler system and dispensing valves (see service manual).			00009 (can) / 49007 (sachet)				
Use valve seal set if necessary.			99673	2x	3x	3x	4x
<b>Grinder</b> (OptiFresh Bean)							
	10 min.						
Empty the grinder. Fill with two caps of coffee grinder cleaner, hold a drip tray under the outlet and run the grinder until it is empty.			1000151				

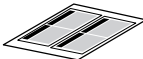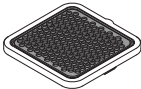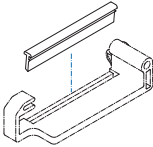Service activity	Time	Product	Art.No.	OptiFresh (Bean)			
				1	2	3	4
<b>Brewer 20,000</b>		20 min.					
Perform maintenance at each of <b>20,000</b> brew cycles the brewer cleaning program with sachet coffee cleaner.		49009					
		03488	1x	1x	1x	1x	
<b>Brewer 40,000</b>		20 min.					
Replace at least after <b>40,000</b> brew cycles [Service brewer] parts shown here. Clean brewer and check it for proper operation. Perform major maintenance if the cylinder shows internal scratches and /or exhibit leakage and if the Teflon piston does not moves easy. Check brewer tension settings.		03380	1x	1x	1x	1x	
		03375	1x	1x	1x	1x	
<b>Brewer 80,000</b>		30 min.					
Replace at least after <b>80,000</b> (major maintenance) Brewer cylinder [03372] Teflon piston [03370] O-rings [03368]		03372	1x	1x	1x	1x	
		03370 03368	1x 4x	1x 4x	1x 4x	1x 4x	



Service activity	Time	Product	Art.No.	OptiFresh (Bean)			
				1	2	3	4
<b>Mixer(s)</b>		10 min.					
Check the motor shaft for dirt and wear. Apply silicone grease to the water connection.							
Replace mixer blade.			03254	-	1x	1x	2x
Replace the seals in the green mixer mounting ring.			1000742	-	1x	1x	2x
			1003572	-	1x	1x	2x
or replace green mounting ring complete.			1003568	-	1x	1x	2x
Clean the mixer components with Animo cleaning agent			00008 (can) / 49009 (sachet)				
<b>Checking (general)</b>							
Check the complete machine operation. Check parts for damage/wear and/or leaks.							
<b>Cleaning (general)</b>							
Brewer and mixer unit as for weekly cleaning. The entire interior and exterior of the machine.							

EN



### WARNING

- The machine has to be opened to descale the water reservoir. This will expose parts under voltage that can easily be touched. This can lead to life threatening situations!



### WARNING

- Do not leave the device during maintenance work.
- When descaling always follow the instructions for the descaler used.
- It is advisable to wear safety goggles and protective gloves when descaling.
- After descaling, allow the device to run a minimum of three times.
- Wash hands thoroughly after descaling
- The device must not be submerged or hosed down.

## 6.6 Descaling instructions

Animo supplies Descaler in the following quantities:

- Descaler 48 x 50g sachets (Art. No. : 49007)
- Descaler 1kg tube (Art. No. 00009)

Time required, products and tools:

- Time: approximately 45 minutes
- 2 sachets Animo Descaler or 8-10 dessert spoons
- Drip tray of approximately 1.5 litres
- Crosshead screwdriver
- Bucket or basin at hand


### Descalce preparations

1. Switch off the device and pull the plug out of the socket.
2. Drain the boiler completely (3 litre) empty using the drain hose [ 1 ] at the from of the machine.



### WARNING

- HOT WATER !

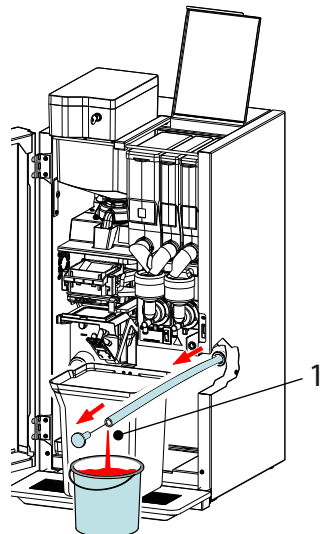

- Remove the rear plate [ 2 ] and unscrew the reservoir lid [ 3 ].








## WARNING

- HOT!
- Read the warnings and instructions for use on the Animo Descaler sachets before dissolving two 50g sachets (8-10 dessert spoons) into 2 litres warm water.
  - Slowly pour the 1 litre acid solution into the reservoir [ 4 ]. The acid solution will now react with the lime scale.
  - Leave the solution to soak for a minimum of 10 minutes, until the foaming has stopped.

### Disassemble the dispensing valves

- Remove the dispensing valves. They are accessible through the cover plate behind the ingredient canisters

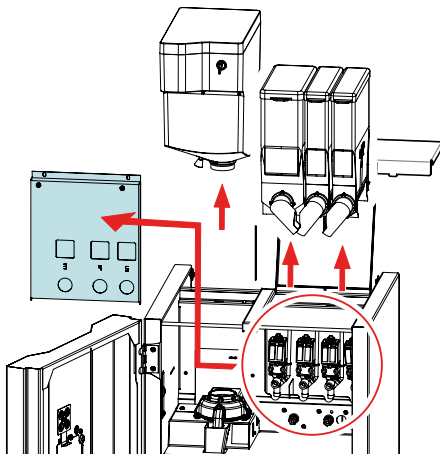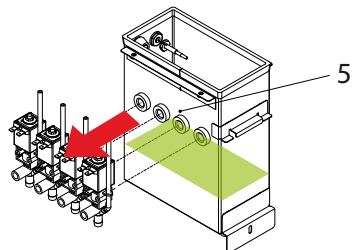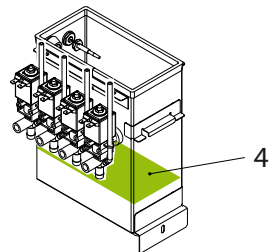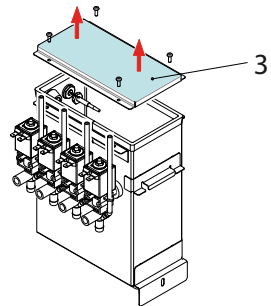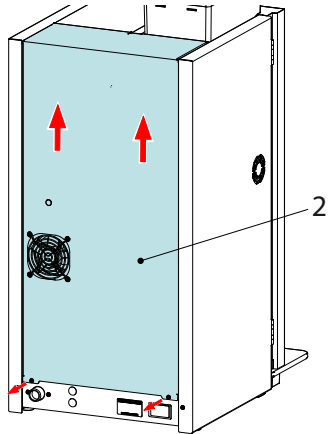


- Disconnect the wiring and hoses and carefully pull the valves from the silicone seals [ 5 ].

EN

9. Disassemble the valves. There are three possibilities:


**A** Cleaning / descaling

Remove the seals and place them in a descaler solution. After the parts are cleaned build the valves back together. See Section 3.5.1 Dispensing valves

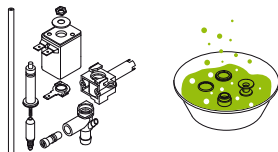

**B** Fit a replacement set



After the parts are replaced entirely by the seal replacement set build the valves back together. See Section 3.5.1 Dispensing valves.

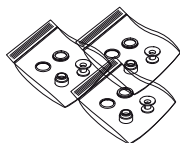

**C** Fit new valves



Attention: new dispensing valves must be set on the correct dosing!  
See Section 3.8.3 Calibration

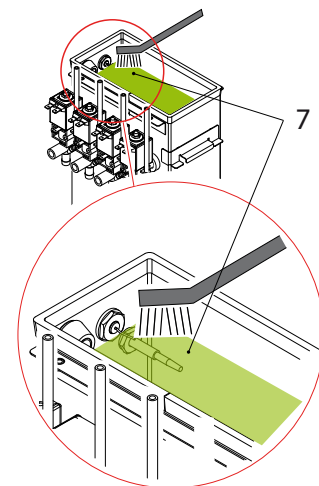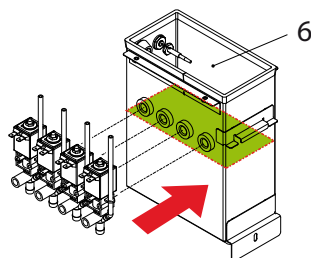

10. Replace the valves into the boiler [ 6 ] and install the wiring and hoses again.

continuation boiler descaling....


11. Fill the boiler with the rest of the solution, and fill if necessary with extra hot water.

Use a brush to spread the descaler over the level electrodes [ 7 ] during the soaking time.

## OptiFresh (Bean) Touch

### Rince!

12. Drain the boiler completely empty using the drain hose [ 8 ] and inspect if the boiler is clean. Repeat the above scaling procedure if there is still scale in the boiler.
13. Turn on the machine, the boiler refills with fresh water and heats up.
14. Turn off the machine and drain the boiler completely empty using the drain hose [ 8 ].
15. Turn on the machine again, the boiler refills with clean water and heats up. Repeat instruction 12-15 ones again to remove the boiler from descaler.
16. Place reservoir under **both** outlets [ 10 ] and activate the rinsing programme [ 9 ], to rinse clean the dispensing valve so the valves. Follow the instructions on the display.
17. Screw the lid back onto the reservoir and replace the cover plate [ 2 ].
18. Clear the service parameter counter in the Service Menu **2.6 Service boiler / 2.6.2 Reset service counter**.
19. The machine is now ready for use again.

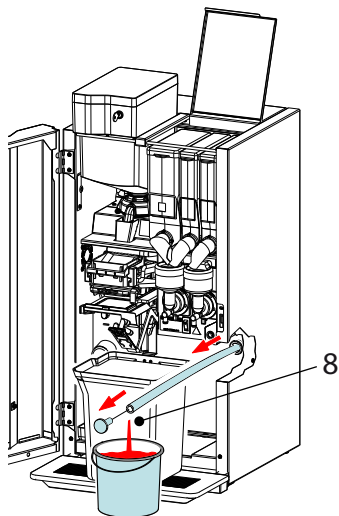


EN



Always check if no descaler solution stayed behind in the heating system. Draw some tea water and mix some coffee milk through it. If the milk curdle, additional flushing of the heating system is required.



9

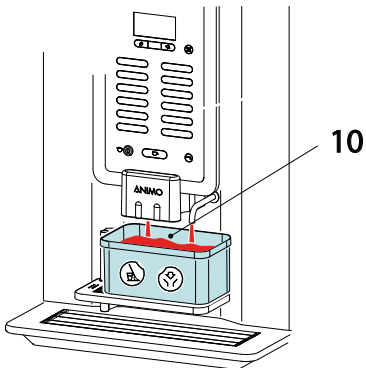

10

### 6.7 Maintenance freshbrew group

#### 6.7.1 Replacing the Brewer Cylinder and Teflon Seal

The Zuma brewer creates a vacuum that pulls hot water through the coffee grounds and the filter screen, and into the brewer cylinder. The brewer pauses prior to dispensing the brewed coffee to allow this vacuum to pull all of the liquid into the cylinder.



After several thousand cycles, the brewer cylinder and/or the Teflon seal will become worn and scored. When this scoring gets severe, air will enter the brewer cylinder from between the Teflon seal and the cylinder wall, resulting in a loss of vacuum. In many cases, you will actually be able to see these air bubbles during the brew cycle. When a vacuum loss occurs, the brewer cylinder and Teflon seal will both need to be replaced.

Required parts:



- 4x O-ring art.no. 03368
- 1x Teflon seal art.no. 03370
- 1x Brewer cylinder art.no. 03372
- 4x toothpicks

Preparations:

1. Remove the brewer from the machine, and then remove the filter screen and the brew chamber from the brewer.
2. Remove the c-clip at the rear of the crank arm, and then remove the crank arm pin.
3. Remove the four screws that secure the brewer cylinder to the brewer mainframe.
4. Pull down the piston to remove this assembly from the brewer cylinder. At this point, the old brewer cylinder can be discarded (but not the piston assembly).
5. Remove the four screws at the top of the piston assembly. Remove the stainless steel top plate from the assembly.
6. Remove the old Teflon seal. It may be necessary to twist the seal or rock it back and forth until it clears the large rubber piston ring. Once removed, discard the old Teflon seal.

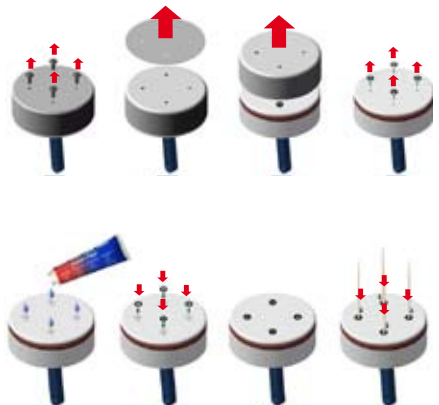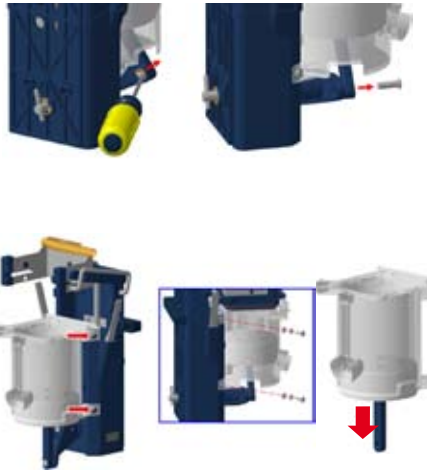

7. Remove the four old O-rings. These O-rings cannot be re-used and must be discarded.
8. Add a drop of Lubri-film around the perimeter of each of the holes to temporarily hold these o-rings in place.
9. Insert a toothpick through the centre of the o-ring and into each of the screw holes on top of the piston. The toothpicks will hold the o-rings in place and act as a guide for the Teflon seal.
10. Replacement Teflon seals are shipped inside a thick cardboard sleeve. Do not remove them from this protective sleeve until they are needed.
11. Place the new Teflon seal over the toothpicks. Remove the toothpicks and replace the stainless steel top plate with the four screws.
12. Slide the piston assembly into the bottom of the cylinder. Make sure the hole at the bottom of the piston rod is pointing perfectly forward in the same direction as the brewer pour spout.
13. Secure the piston and cylinder assembly to the mainframe of the brewer using four screws. Do not forget to install the two washers that are used with each of the four screws.
14. Insert the crank arm pin through the front of the piston rod and through the crank arm. Secure it in place by inserting a c-clip on the pin at the rear of the crank arm.
15. Install a filter screen onto the top of the new brewer cylinder and install the brew chamber.
16. Install the brewer into a machine and brew several cups of coffee through it. The coffee oils will lubricate the new cylinder's walls and the new Teflon seal.

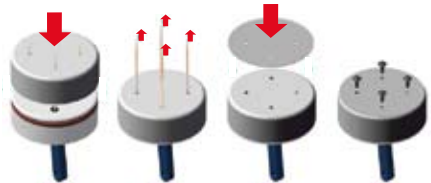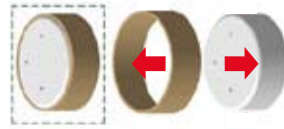

### Maintenance freshbrew group (continuation)

#### 6.7.2 Replacing the T-Bar & Housing, Crank Arm, Triple Cam, and the Brewer Arms

The following procedure will guide you through the steps required to remove the T-bar (and its housing), the crank arm, the triple cam, and the two wiper arms.

As these components are all mechanically linked together, they will all be removed in this procedure.

Should you need to replace only one of these components, follow this procedure until the point where that particular component can be removed and replaced.

1. Press down on the H-Frame and turn the T-bar counter-clockwise until it can be removed from its housing. This may require 20-30 full turns.

At this point in the procedure, the T-bar can be completely removed and replaced.

2. Remove the coupling pin at the back of the brewer. This pin is tapered and press-fit into the shaft - tap the longer end of the pin with a hammer until it pops out of the shaft. Once the pin is out, remove the c-clip securing the crank arm shaft to the mainframe.

3. Remove the c-clip at the rear of the crank arm, and then remove the crank arm pin.

4. Move the piston rod away from the front of the crank arm. Place the brewer on the table with the cylinder down and gently tap the crank arm shaft with a hammer to unlock it from the triple cam - these two components are press-fit together

5. Flip the brewer over (cylinder up) and pull the T-bar housing until the housing and the triple cam can be removed. It may be necessary to rock the components back and forth to release them.

At this point in the procedure, the T-bar housing, crank arm and triple cam can be completely removed.

6. To remove the two brewer arms (the 'wipe' and 'unwipe' arms), remove the two c-clips securing the arm pins to the mainframe, and then remove the two pins at the rear of the brewer. It may be necessary to push them from the front of the brewer through to the rear.






7. Pull the two arms and the large spring connected to the arms out through the bottom of the mainframe.  
At this point in the procedure, the two arms can be completely removed.



8. Install the spring onto both of the brewer arms. Note that the each end of the spring must be hooked to each arm, as illustrated.

With the spring in place, slide the spring and arm assembly into the mainframe through the bottom of the brewer (the spring must be facing towards the front of the brewer).

9. Move the spring and arm assembly up against the front inner wall of the mainframe and insert the two arm pins through the rear of the mainframe and through the holes in each arm. At this point, the spring should now be sandwiched in between the arms and the wall of the mainframe. At the front of the mainframe, insert a c-clip into each of the arm pins to secure the pins (and arms) in place.  
At this point in the procedure, the brewer arm replacement is complete.

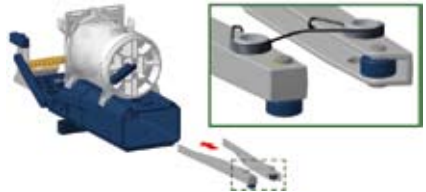

EN

10. The next part of the procedure is to replace the triple cam and T-bar housing. Even if you were only replacing one of the two, both of these components need to be removed.

Partially insert the bottom of the triple cam into the opening in the T-bar housing. While keeping the triple cam angled towards the top of the brewer, slide the triple cam and housing into the brewer mainframe. You need to get the top of the triple cam resting inside the opening for the crank arm on the mainframe, while the bottom is inside the opening in the T-bar housing.



11. Insert the crank arm shaft through the opening in the front of the brewer, and through the triple cam and T-bar housing. Please note that the crank arm needs to properly couple with the triple cam.



12. Once you are certain that the crank arm and triple cam are properly aligned, place a center punch in the centre of the crank arm shaft (on the side with the plastic crank arm), and give it one or two taps. If the two are properly aligned, the crank arm will easily couple with the triple cam.
13. On the other side of the brewer, secure the crank arm to the brewer mainframe using the c-clip that was removed earlier in this procedure.
14. Insert the crank arm pin through the front of the piston rod and through the crank arm. It may be necessary to raise or lower the piston in the cylinder to properly align the two. Secure it in place by inserting a c-clip on the pin at the rear of the crank arm.
15. Insert the drive pin into the crank arm shaft at the rear of the brewer. Note that the pin is tapered (one end is thicker than the other due to three splits added along the pin's sides).

Insert the thinner end (without the splits) into the crank arm shaft, and then tap it a couple of times with a hammer to wedge (press-fit) the pin in place.

16. While pressing down on the H-frame, insert the T-bar from the top of the brewer down into the threaded section of the T-bar housing, and turn the T-bar approximately 20 turns clockwise. Once done, install the T-bar into its recession on top of the H-frame.


**NOTE:** You have now successfully re-assembled the Zuma brewer, You must now re-adjust the brewer chamber's tension. For the procedure for adjusting the brewer tension see chapter **1.3.2 Adjustment brewer chamber tension**.



## 7. TRANSPORT / STORAGE

Please do the following before transporting or putting the device in storage.

1. Carry out the brewer and mixer unit cleaning programme.
2. Clean the ingredient canister(s), mixer system, leaking tray and casing.
3. Switch off the device and remove the plug from the wall socket.
4. Close the water supply tap and disconnect the water connection tube.
5. Drain the water reservoir (approx. 3 litres) by using the draining tube [ 1 ].

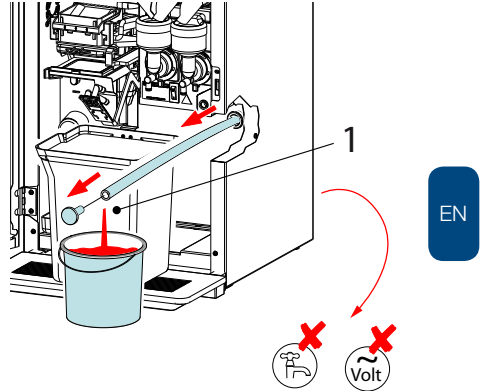


### WARNING


- HOT WATER !
6. The device is now ready for transport.


### 8. COMPONENT ACCESSIBILITY

OptiFresh Touch

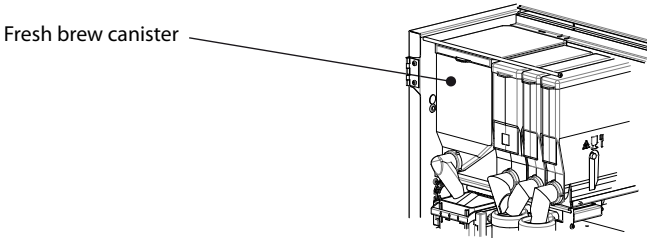

OptiFresh Bean Touch

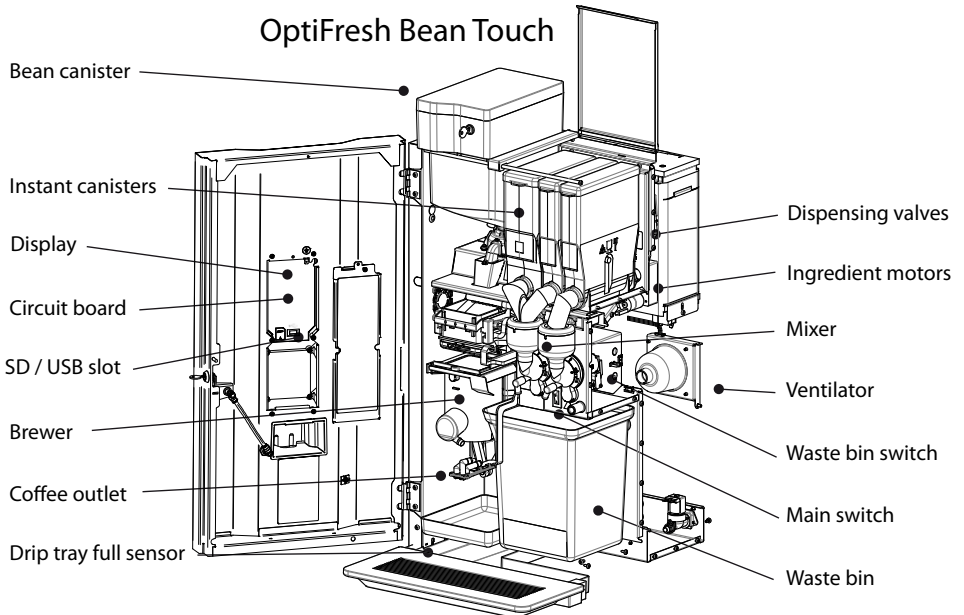

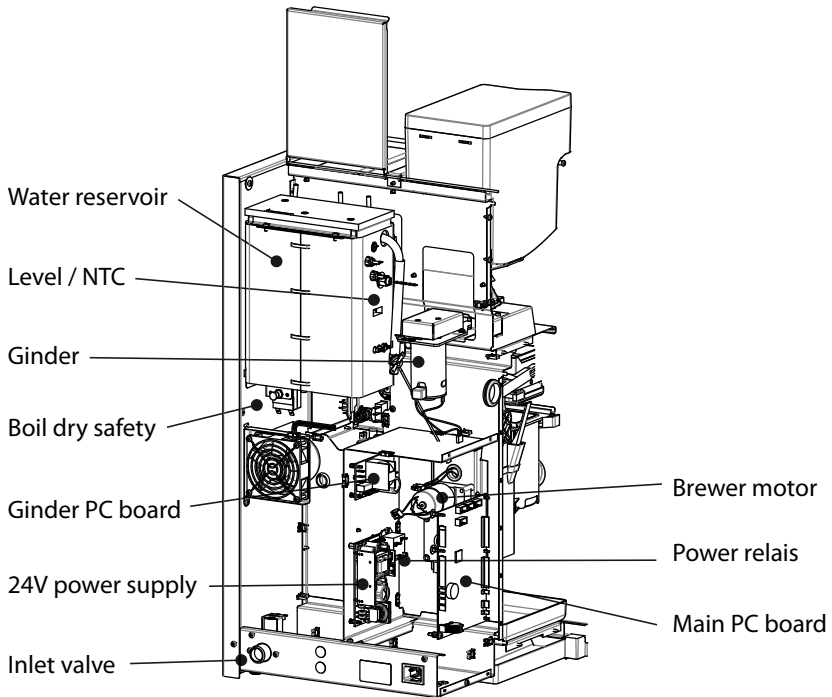

### 9. ELECTRONICS SUMMARY



#### WARNING


During repairs or maintenance work, avoid electrostatic discharge (ESD) on the control unit.

- Main control ..... 9.1
- Interface / Touchpanel / LCD ..... 9.2
- Supply 100-240Vac / 24Vdc 65W ..... 9.3
- Grinder circuit board 230Vac / 230Vdc ..... 9.4

#### 9.1 Main PC board

This control unit is the device's main control unit and is accessible by removing the left side panel. The following important parts can be found in the main control unit:

- Fuse 6, 3A T (Art. No. 03391) : to safeguard the power supply to the main PC bard.
- Battery 3V Li CR2032 (Art. No. 02816);: to maintain the clock function when there is no power supply to the device.

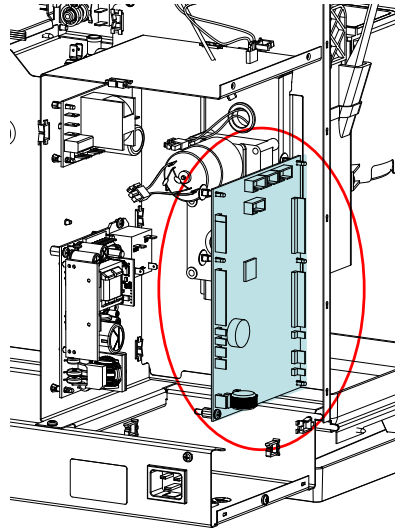


#### 9.1.1 Main circuit board inputs

##### Connector HDMI

A cable with HDMI plugs Connecting the main circuit board and the interface circuit board in the door

##### Connector J250 (PWM fan)

Pin	Fan	Colour	Notes
1	PWM signal	black	
2		-	
3	pos	red	
4	neg	blue	

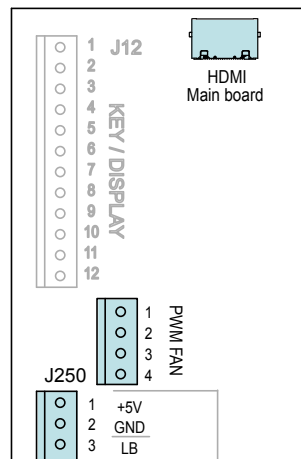

### Connector J7 (Inputs)

Pin	Sensor	Colour	Notes
1-2	-	-	
3	LB Drip tray	Yellow	
4	GND Drip tray	Black	
5	LSL level low	Brown	
6	GND level mass	Green	
7	LSH level high	White	
8	-	-	
9	AS waste bin	Pink	Waste bin in position; contact closed
10	Brewer witch	Grey	Brewer in home position; contact closed
11	DS Door 1	Orange	Door closed; contact closed
12-15	-	-	
16	IN3 Door 2	Pink	Door <u>lock</u> locked; contact closed
17-18	-	-	

### Connector J18 / T1 ( NTC sensor)


Pin	Sensor	Colour	Notes
1	NTC sensor	Violet	
2	-	-	
3	NTC sensor	Violet	

### Connector J1 (Supply)

Pin		Colour	Notes
1-2	Ground (GND)	black	
3-4	+24 Vdc	red	

**Battery B1** | Lithium 3V Type CR2025 | art.no. 02816

**Fuse F3** | 6.3 A slow | art.no. 03391

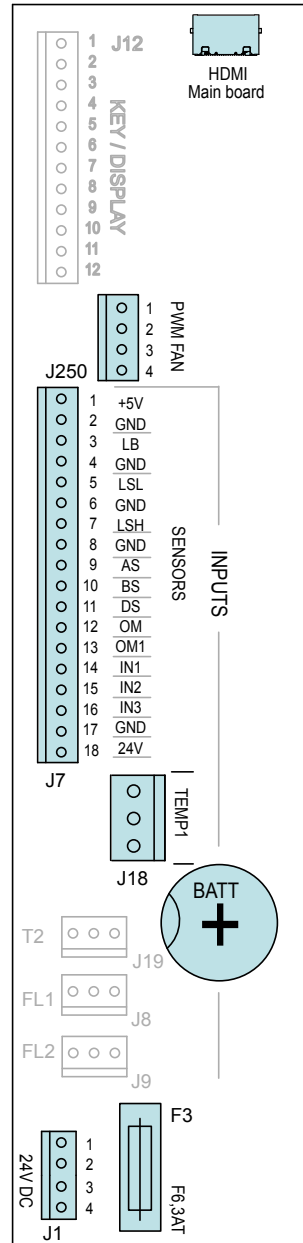


### 9.1.2 Main circuit board outputs

Connector J2			
Pin	Motor	Colour	Notes
17-18	Brewer	Black	<b>Pay attention to the right direction!</b> Common +24 Vdc (red wire) to red point on Brewer, Mixer and Ingredient motor.
15-16	Mixer 2	Violet	
13-14	Mixer 3	Pink	
11-12	Grinder signal 1	Brown	
9-10	Ingredient Motor 2	Green	
7-8	Ingredient Motor 3	White	
5-6	Ingredient Motor 4	Yellow	
3-4	Ingredient Motor 5	Grey	
1-2	Ingredient Motor 6		

Connector J4			
Pin	Valve	Colour	Notes
17-18	KW 1 (inlet valve)	Violet	* Hot & Cold option  Rode draad is gemeenschappelijke +24Vdc aansluiting
15-16	KW 2 (venting valve)*	Rose	
13-14	KW 3 (Cold water)*	Orange	
11-12	DV 1 (brewer valve)	Brown	
9-10	DV 2 (mixer 2 valve)	White	
7-8	DV 3 (mixer 3 valve)	Yellow	
5-6	DV 4 (hot water tap)	Green	
1-4	-	-	

Connector J6			
Pin	Relais	Colour	Notes
4	H1 Element via solid state relay	Red	
3		White	
2	-	-	-
1	-	-	-

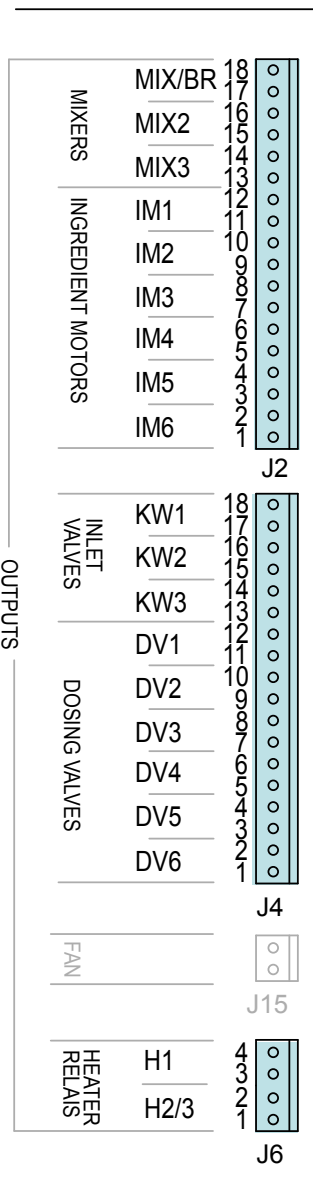






### 9.1.3 Main circuit board communication

The machine has standardized vending machine connections for connecting coin mechanism, coin changer or cashless payment systems.

These connectors meet the MDB protocol for vending machines.

For further information or advice please contact our support department.

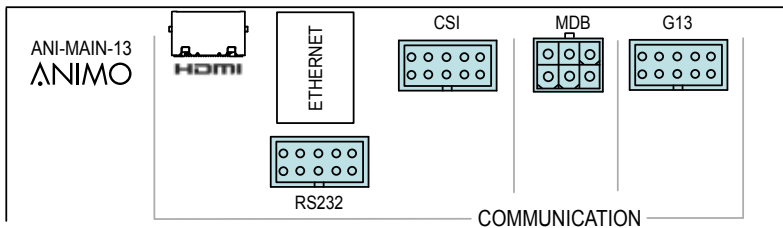

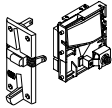
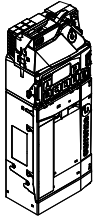
Communication		
Conn	Protocol	Notes
G13	Parallel interface  art. no. 04025 03267	<ul style="list-style-type: none"> <li>- Coin acceptor NRI G13</li> <li>- External release contact* <i>"the machine can be released by using a potential-free contact (pulse).</i></li> <li>- G13 Kabel 1 meter art. no. 03392</li> <li>- Extern vrijgave contact; kabel 1004237</li> </ul>
MDB	Serial interface MDB (Multi Drop Bus)  art. no. 03433	<ul style="list-style-type: none"> <li>- Coin changer NRI C<sup>2</sup></li> <li>- Cashless payment system</li> <li>- Telemetry EVA DTS</li> <li>- MDB cable 1 meter art. no. 03479</li> <li>- MDB cable 1 meter art. no. 1004564 (2x male connector)</li> <li>- MDB Y-kabel art.no. 1002008</li> </ul>
RS232	Serial interface DEX UCS new from sept 2015	<ul style="list-style-type: none"> <li>- Telemetry EVA DTS / DEX UCS</li> </ul>

### 9.2 Interface / Display

The interface connects all the components located in and on the door and is connected by a cable to the main control.

#### 9.2.1 Connections

Interface & Display		
Conn		Notes
OptiLight	connection to Optilight	
Jmp 1	jumper 1	Cup sensor A= Yes / B= No
Jmp 2	jumper 2	no function
Backlight	backlight Touchpanel	
Speaker	loudspeaker	
SOM	System on module	
Touch	connection touch surface	see dismantling instructions
LCD	connection lcd	see dismantling instructions
Cup 1	cup sensor left (optional)	coffee spout position
Cup 2	cup sensor right (optional)	hot water spout position
SD	SD card holder	
USB	USB stick connection	
HDMI	connection to mainboard	

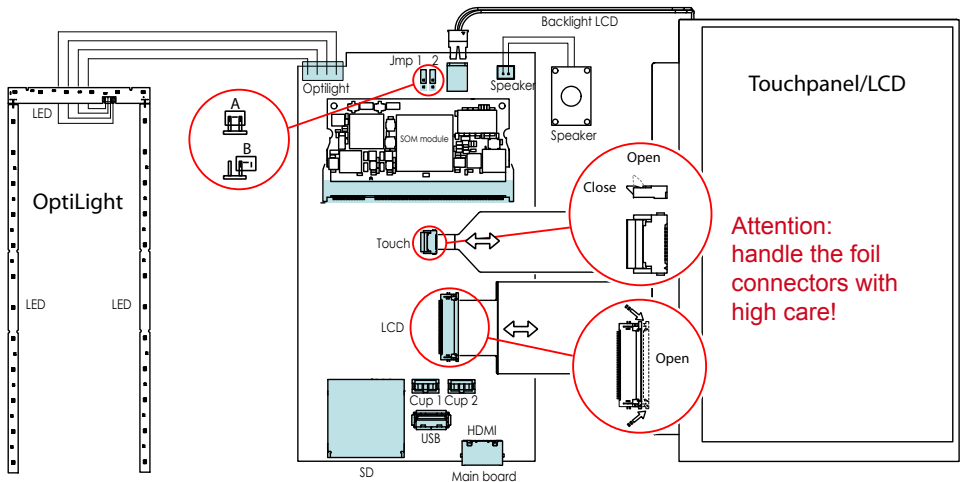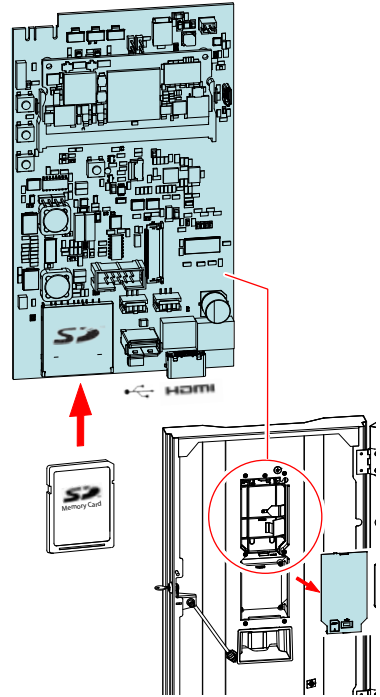

## OptiFresh (Bean) Touch

### 9.3 Power supply

The 24 Vdc supply consists of a 24 Vdc – 65 W switched power supply and can be accessed by removing the rear wall.


- On an overload, the power supply switches itself off automatically. Reset the power supply by turning the main switch off and on again.
- Main fuse 4A Slow art.no. 1004957; to protect the power supply.

#### 9.3.1 Connections


Connector TB2 24Vdc			
Pin		Colour	Comments
1-3	24 Vdc +	red	
4-7	24 Vdc -	black	
8	-	-	

Connector TB1 100-240Vac			
Pin		Colour	Comments
1	230 Vac Neutral	blue	
3	230 Vac Phase	yellow	

Fuse F1	
4A slow	art.no. 1004957

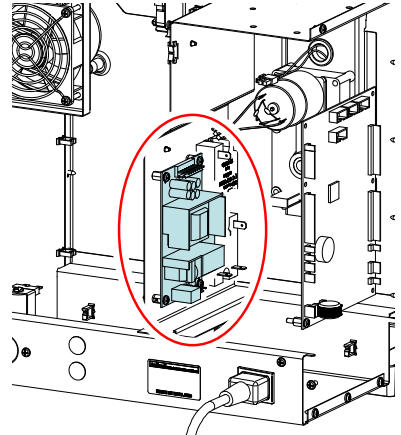

EN

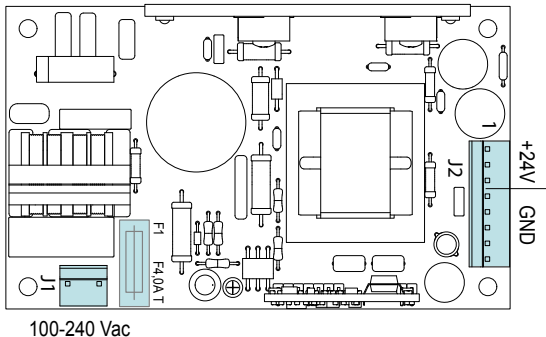

### 9.4 Grinder circuit board

This grinder circuit board converts 230 Vac (alternating current) into 230 Vdc (direct current) with a rectifier to drive the grinder motor. (OptiFresh Bean)

The IM1 signal (24 Vdc) from the main control is connected to connection J5-J6 (the red LED lights). This signal controls the grinder motor with a triac.

This control can be accessed by removing the rear wall.

- Fuse 3.15 A Slow art.no. 02580; to protect the grinder motor.

#### 9.4.1 Connections




24 Vdc ingredient 1 signal			
Pin		Colour	Notes
J5	24Vdc +	red	polarity not important
J6	24Vdc -	brown	

230Vdc			
Pin		Colour	Notes
1	230Vdc +	red	polarity is important!
3	230Vdc -	black	

230Vac			
Pin		Colour	Notes
J2	230 Vac Zero	blue	
J3	PE (ground)	y/gr/	
J4	230 Vac Phase	brown	

Fuse F1		
3.15 A slow		art.no. 02580

Grinder motor 230Vdc			
Pin		Colour	Comments
	230Vdc +	red	<b>Please pay attention, for right direction.</b> +24dc (red wire) according drawing
	230Vdc -	black	

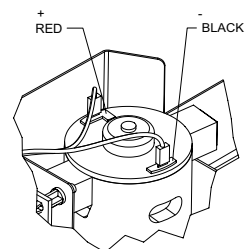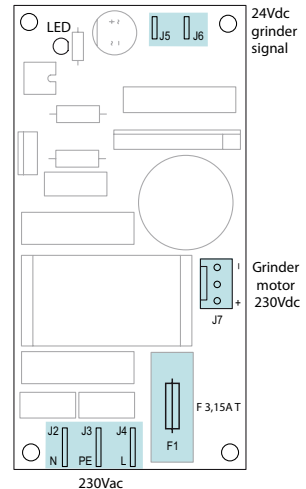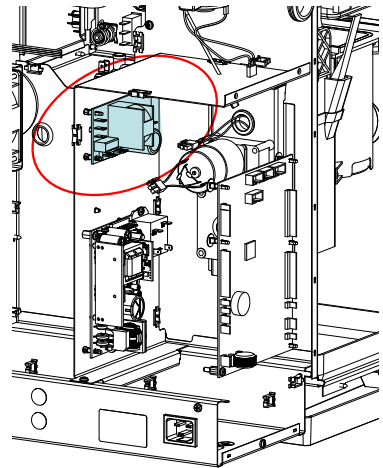

## 10. FAULT ANALYSIS



### WARNING

- When carrying out repairs and cleaning the device, the plug should always be removed from the wall socket before the device is opened.

### Preface

Before searching for the defect, check that all parts are in their correct position. To do this, remove the device's rear plate and check that all printed circuit boards, connectors, wire beams and pipes are mounted correctly.

After carrying out a general parts inspection, use section 10.4 Troubleshooting analysis to verify the probable cause of the problem.

#) If the column solution advises replacement of the part concerned, there is always the possibility that the defect may be caused by another problem. The functioning of the device should therefore be thoroughly tested to make sure that the defect does not reappear.

EN

### 10.1 Read log


During use, the last 20 error messages displayed are registered and saved.

To read these error messages, activate the menu item Read log (menu 2.8) in the service menu. The first error displayed is the most recent error message.







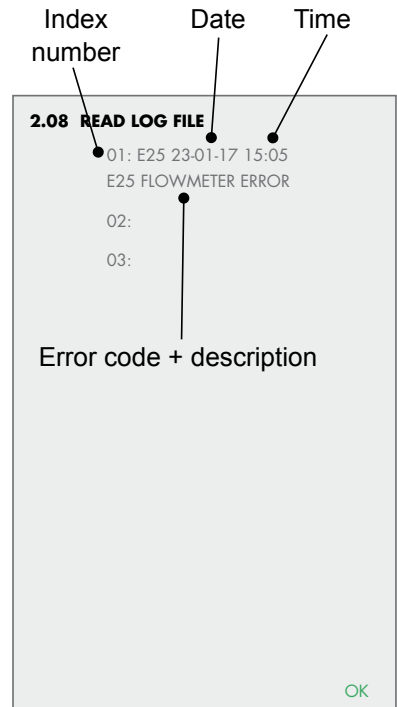





- The 1st line shows the error code, the date time at which the error occurred.
- The 2nd line shows the Error number and description used in the fault analysis table (see chapter 10.4).













### 10.2 Clear log







Use the Clear log function (service menu 2.9) to clear the log.



### 10.3 Display messages during use


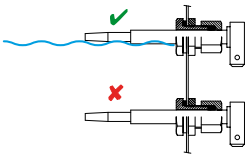
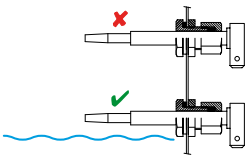
Display	Possible cause	Action
 RINSING	Rinse program not activated in time.	 Run the rinse program and follow the instructions in the display. See chapter <b>6. Maintenance / 6.1 daily rinsing program</b>
 CLEANING	Cleaning program is not activated in time.	 Run the cleaning program and follow the instructions in the display. See chapter <b>6. Maintenance / 6.2 Weekly rinsing program</b>
 REPLACE BREWER FILTER	Brewer filter should be replaced with a <u>clean</u> one.	 Replace brewer filter. See chapter <b>6. Maintenance / 6.3 Change brewer filter</b>
 SERVICE BOILER	Boiler needs maintenance.	See chapter <b>6.4 Periodic maintenance / 6.4.1 Service boiler.</b>
 SERVICE BREWER	Brewer needs maintenance.	See chapter <b>6.4 Periodic maintenance / 6.4.2 Service brewer and 6.5.1 Servicing</b>
 WASTE BIN ALMOST FULL	Waste bin need to be emptied shortly.	If you wait too long the machine blocks when the bin is full
 BOILER FILLING	When used for the first time: boiler is still empty and is being filled.	No action required. When boiler reaches the appropriate level, the display will show 'Boiler heating'.
	During use: boiler is not filling up or is filling up too slowly. After 60 sec. the display will show 'E3 Level error'.	Check the water pressure, turn the water supply tap completely open and check the connection tube for any kinks.
 BOILER HEATING	The boiler temperature is (temporarily) too low because too much water has been used.	Once the temperature is restored, the message automatically disappears and the drink selection buttons are reactivated.
 DRIP TRAY FULL	Drip tray full.	Once the drip tray is emptied, the message automatically disappears and the drink selection buttons are reactivated.

Display	Possible cause	Action	
 WASTE BIN FULL	The maximum number of coffee cups that the waste bin can hold has been reached.	Empty waste bin. The cup counter is automatically reset when the waste bin is replaced.	
 WASTE BIN MISSING	Waste bin is not detected.	Check the waste bin.	
 DOOR OPEN	For safety reasons, the machine automatically switches off if the door is opened.	The machine can be operated with the door open by using the door pin.	
 Stand-by	The machine is on standby.	This function can be set manually or automatically. Touch the screen and use pin code 1 1 1 1 to unlock it	
 ENERGY MODUS	The machine is in energy modus	Touch the screen to activate	
 CLOSE DOOR	Door lock not closed properly. Hot water dispensing not possible.	Close door lock.	
 RINSING	Rinse program not activated in time. The machine locks up.		Run the rinse program and follow the instructions in the display. See chapter <b>6. Maintenance / 6.1 daily rinsing program</b>
 CLEANING	Cleaning program is not activated in time. The machine locks up.		Run the cleaning program and follow the instructions in the display. <b>6. Maintenance / 6.2 Weekly rinsing program</b>
 REPLACE BREWER FILER	Brewer filter should be replaced with a <u>clean</u> one. The machine locks up.		Replace brewer filter. See chapter <b>6. Maintenance / 6.3 Change brewer filter</b>

Display	Possible cause	Action
 PLACE CUP	no cup positioned under the spout.	position a cup under the spout.
 PLACE CUP UNDER CORRECT OUTLET	no cup positioned under the correct the spout.	position a cup under the correct spout.
 YOUR DRINK HAS CANCELED	the cup was taken away to quickly	keep the cup in position during the drink preparation.
 cup sensor left error	the cup detection sensor as shown in the display is faulty cup detection window is dirty	the fault can be (temporarily) be neutralized by pressing the stop button.
 cup sensor middle error		after 20 reset attempts the error will be registered in the log menu clean the cup detection sensor windows.
 cup sensor right error		replace the cup detection sensor



## 10.4 TROUBLESHOOTING

Display	Possible cause	Action
 E1 LEVEL ERROR	Minimum electrode error: minimum electrode detects no water but maximum electrode does. Inlet valve shuts.	Check that the level sensors are functioning. See service menu <b>2.7 Hardware test</b> . Switch the device off and on again.
		Water level up to max. level sensor? Check min. Level sensor calcification. Switch the device off and on again.
		Water under the min. Level sensor? Check max. level sensor for cracks in the insulation and check if capillar tube of the boil-dry protection. This should not touch the electrode tip. Switch the device off and on again.
E2 LEVEL ERROR	Maximum electrode error: maximum electrode not reached within 30 sec. Inlet valve shuts. Boiler fills up too slowly. Water pressure has dropped or the water tank (stand-alone) is empty.	Check the water pressure, turn the water supply tap completely open and check the connection tube for any kinks. Switch the device off and on again.
E3 FILL ERROR	Electrode error: minimum electrode not reached within 90 sec. Boiler fills up too slowly. Water pressure has dropped or the water tank (stand-alone) is empty.	Check the water pressure, turn the water supply tap completely open and check the connection tube for any kinks. Switch the device off and on again.
E4 BREWER ERROR	Brewer was not started from its initial position. Brewer motor not turning.	Check the brewer motor function in the service menu <b>2.7 Hardware test</b> . Switch the device off and on again.
		Check break pin of Brewer motor. Replace if broken.
		Check the brewer switch. When brewer motor is in its home position, switch lever must fall into driving wheel notch. Contact must be closed. When brewer motor rotates, switch lever must be pressed IN. Contact must be open.

Display	Possible cause	Action
E5 BREWER ERROR	Brewer was not returned to its initial position.	Check the brewer switch and brewer motor function in the service menu <b>2.7 Hardware test</b> . Switch the device off and on again.
		Check break pin of Brewer motor. Replace if broken.
E6 HIGH TEMPERATURE	Temperatuur sensor measures a temperature over 99°C	Check the temperature sensor function in the service menu <b>2.7 Hardware test</b> .
		Check if the steam thermostat in the overflow pipe has been triggered. Reset if necessary.
E7 BREWER MOTOR ERROR	Brewer motor has stalled. Brewer motor output overloaded (current too high). The control has disabled the output.	Check that the brewer unit is secured properly in the holder. Remove the brewer and repair the obstruction. Switch the device off and on again.
		Check that the wiper is placed between the wiper arms. Remove the brewer and repair the obstruction. Switch the device off and on again.
		Coffee Filter is clogged up with coffee stains. Piston must pull (vacuum) too hard. Clean or replace the filter. Turn machine off and on again.
E8 MIXER 2 ERROR	Mixer 2 motor stalled. Mixer 2 motor output(s) overloaded (current too high). The control has disabled the output.	Check whether mixer 2 is contaminated or incorrectly mounted. Clean and/or check whether the rotor turns freely. Switch the machine off and on again.
E9 MIXER 3 ERROR	Mixer 3 motor stalled. Mixer 3 motor output(s) overloaded (current too high). The control has disabled the output.	Check whether mixer 3 is contaminated or incorrectly mounted. Clean and/or check whether the rotor turns freely. Switch the machine off and on again.
E10 VALVE ERROR	Valve or Fan output(s) overloaded (current too high). The control has disabled the output.	Check the valves and wiring for short circuits. Switch the machine off and on again.
E11 INGREDIENT MOTOR ERROR	Ingredient motor(s) stalled. Ingredient motor output(s) overloaded (current too high). The control has disabled the output.	Check the operation of the drive motors in the service menu <b>2.7 Hardware test</b> . Empty the canister(s) and clean thoroughly.


Display	Possible cause	Action
E13 MIXER GROUP ERROR	Brewer and Mixer output group overloaded (current too high). The control has disabled the output.	Carry out the checks as specified for E7 and E8. Switch the machine off and on again.
E14 OUTPUT ERROR	Ingredient motor output group overloaded (current too high). The control has disabled the output.	Carry out the checks as specified for E11. Switch the machine off and on again.
	Valve output group overloaded (current too high). The control has disabled the outputs.	Carry out the checks as specified for E10. Switch the machine off and on again.
E16 LEVEL ERROR	Electrode error; Max. and Min. Electrode both suddenly detect no water level. Inlet valve shuts.	Make sure if the boiler does not leaks. Check the water pressure, turn the water supply tap completely open and check the connection tube for any kinks. Switch the device off and on again.
E17 MDB ERROR	There is no communication between the machine and the MDB payment system.	Check the connection between the machine and the MDB payment system.
E18 MIXER GROUP FET ERROR	Brewer or mixer motor output remains activated.	Brewer or mixer motor output (FET) defective. Replace control.
E19 OUTPUT FET ERROR	Ingredient motor / valve / fan output remains activated.	Ingredient motor / valve / fan output (FET) defective. Replace control.
E20 SOFTWARE ERROR	Software error	Reset the machine. Load the defaults. Install new software.
E21 BOILER TIMEOUT	Heating element active for 8 minutes. If the boiler has still not come up to temperature, this error results. Steam- and /or dry boil protection activated.	Reset the steam thermostat, see CHAPTER 3.8. Check the logmenu. If a E6 boiler temp. the boiler has boiled to long. Check the NTC sensor and wiring / connection.
E26 LOW TEMPERATURE	Temperatuur sensor measures a boiler temperature below 0°C	Boiler and/or NTC sensor is below -0°C. Let the machine warm up to room temperature.
E27 NTC SHORT CIRCUIT	Temperatuur sensor has a short circuit	Check the NTC sensor and wiring / connection.
E28 NTC NOT DETECTED	Temperatuur sensor is not detected.	Check the NTC sensor and wiring / connection.

### 11. SPECIAL OPTIONS

#### 11.1 Installation Hot&Cold

##### Required equipment:

- OptiFresh Touch H&C
  - Base cabinet with cooling unit [1001569].
1. Build the cooling unit in the cabinet according the instructions supplied.
  2. Connect the machine to the water (incl. water filter) and electricity. Connect the cooling system to the electricity.
  3. Connect the tube which come from the cooling unit to the push fit connectors at the back of the machine.
  4. Program the cold water recipe onto one of the empty buttons.
  5. Flush and venting the cold water system by dispensing a number of litres of water.

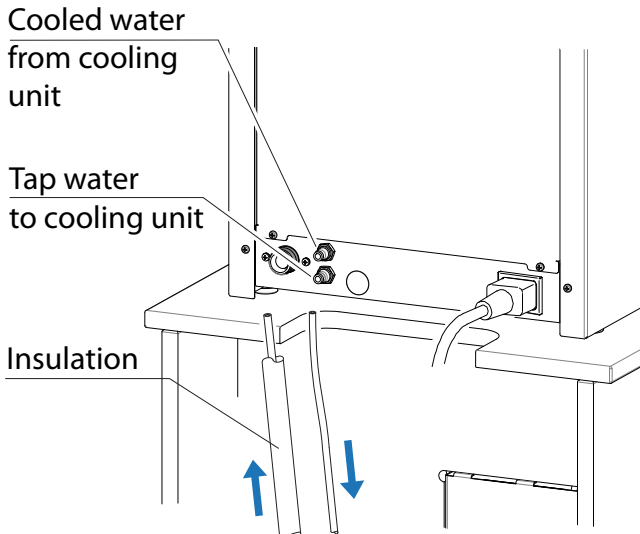

## 11.2 Installation waste to litter bin

### Required equipment:


- OptiFresh Touch
  - Base cabinet with access to litter bin
- Change the cup amount counter: **Service menu / 2.13 Other settings / Waste bin management / cup amount** between 300 to 500 cups.

#### 2.13 Other settings

- └─ 2.13.0 Waste bin management
  - └─ 2.13.00 Cup amount

EN

**i** We don't recommend to switch off the waste bin signal. By taking out the stainless steel funnel [1004770] and casing [1003414] regularly for cleaning, the counter will be reset automatically.

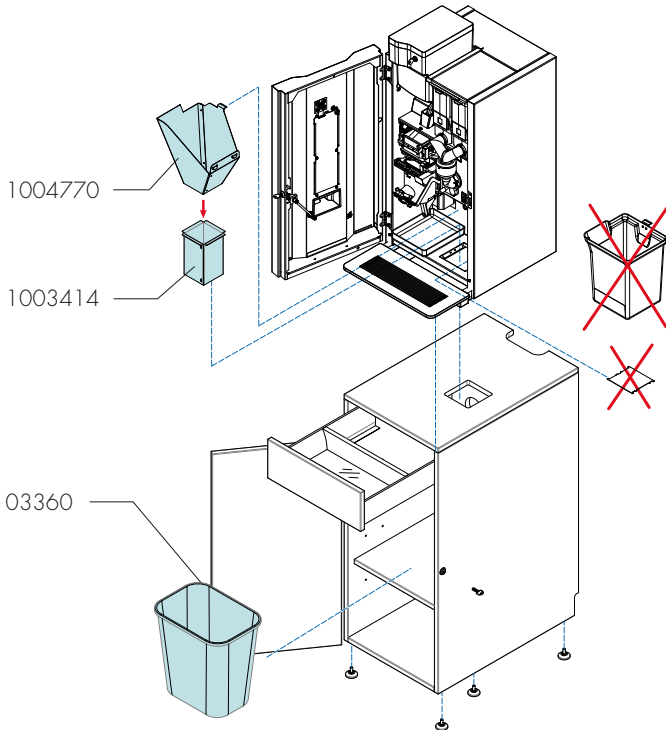

### 12. PAYMENT SYSTEMS


#### 12.1 Coin mechanism (optional)

The OptiFresh is available with an optional coin mechanism suitable for euros (€0.05 - €2.00). Other currencies are available on request.

The coin mechanism can also easily be programmed to accept tokens.

It is also possible to have an existing device fitted with the coin mechanism. The right-hand side panel is replaced by a wider side panel, which houses the coin mechanism and slot.

1. Coin insert
2. Return button
3. Return slot
4. Money drawer
5. Door lock (also locks the money drawer)

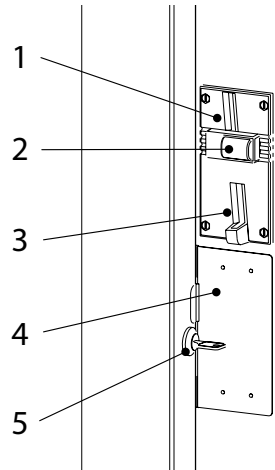

#### 12.1.1 Standard configuration




Right picture shows the standard configuration of the DIL switches, S1-10 ON

The coin mechanism is connected to the device with a connector A.

#### 12.1.2 Rejecting coins

If desired, certain types of euro coins can be rejected by using DIL-Switch block S1 + S2.

Coin €	S1	S2	Coin £	S1	S2
€ 0.05	S1-1	S1-7	£ 0.05	S1-1	-
€ 0.10	S1-2	S1-8	£ 0.10	S1-2	-
€ 0.20	S1-3	S2-1	£ 0.20	S1-3	-
€ 0.50	S1-4	S2-2	£ 0.50	S1-4	S2-1
€ 1.00	S1-5	S2-3	£ 1.00	S1-5	S1-7
€ 2.00	S1-6	S2-4	£ 2.00	S1-6	S1-8
Token 607	-	S2-5	£ 0.05 new	S1-4	-
Token Eagle	-	S2-6	£ 0.10 new	S1-5	-
Token new	-	S2-7	Token 607	-	S2-6
Token new	-	S2-8	Token Eagle	-	S2-7
ON = locked / OFF = free			Token new	-	S2-8

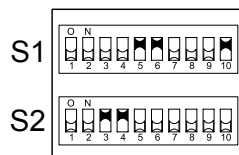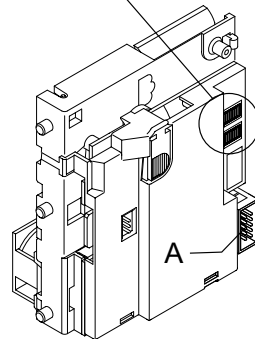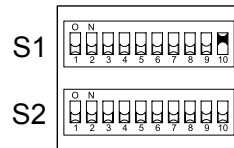

Example on the right : Reject €1 and €2 euro coins

- S1-5, S2-3 -> ON (€ 1,00 rejected)
- S1-6, S2-4 -> ON (€ 2,00 rejected)

### 12.1.3 Activating existing tokens

The token shown here is programmed in the coin mechanism as standard.



Configure the service menu as described in the following section from point 4.

Token Art. No. : 03344



### 12.1.4 Programming a new token

- Required: 10 tokens
  - Attention: remember the DIL switch positions for any rejected coins. Leave S1.10 ON!
1. The following DIL switches on Switch Block S2 should be facing upwards and switch to ON.
    - a) First switch S2-9 Teach Mode to ON
    - b) Then, switch S2-7 coin channel 6 (TM) to ON
  2. Insert a minimum of ten tokens (Fig. 40). These ten tokens should not be the same. After the ten tokens have been inserted the (internal) reject coil will be automatically drawn.
  3. End programming by switching the DIL switch S2-9 downwards to OFF. If saved successfully, the reject coil will be drawn once again. After this, switch S2-7 OFF again. (To halt programming, first switch S2-7 and then S2-9 to OFF).
  4. Service menu: change coin channel 6 (menu item 2.5 Payment system) from €2,00 to TOKEN.
  5. The device now accepts the token as a method of payment.

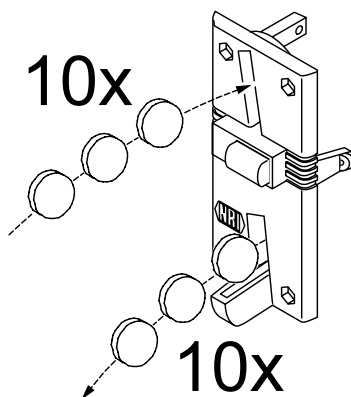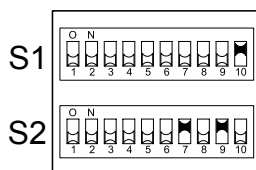

### 12.1.5 Accepting Euros and Tokens

Carry out section 12.1.3 and 12.1.4 beforehand.

- Open the service menu
- Set a price using menu 2.2 Button settings / Button 1-12 / Price (e.g. € 0.50)
- The recipe buttons are activated after sufficient euros or tokens have been inserted!


### 12.1.6 Accepting Tokens only (no Euro's)

Carry out sections 12.1.3 and 12.1.4 beforehand.

1. Open the service menu
2. Set to TOKEN using menu 2.2 Button settings / Button 1-12 / Price.
3. Block the €0.05 - €2.00 coins using the coin mechanism DIL switches and the table below.
4. The recipe buttons are only activated after a token is inserted!

Coin €	S1	S2	Coin £	S1	S2
€ 0.05	S1-1	S1-7	£ 0.05	S1-1	-
€ 0.10	S1-2	S1-8	£ 0.10	S1-2	-
€ 0.20	S1-3	S2-1	£ 0.20	S1-3	-
€ 0.50	S1-4	S2-2	£ 0.50	S1-4	S2-1
€ 1.00	S1-5	S2-3	£ 1.00	S1-5	S1-7
€ 2.00	S1-6	S2-4	£ 2.00	S1-6	S1-8
			£ 0.05 new	S1-4	-
			£ 0.10 new	S1-5	-

ON = locked / OFF = free

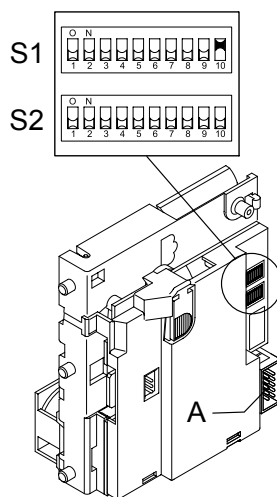


### 12.1.7 Cleaning the coin holder

From time to time, the coin mechanism should be cleaned with a light, damp cloth (lukewarm water containing a mild cleaning agent). No further maintenance is necessary.



#### **i** ATTENTION

- The cloth must not be so wet that liquid enters the system or the circuit board could be damaged.
  - Do not use any solvents and/or abrasive cleaning agents that could attack the plastic.
  - We advice to use a water free Surface cleaner (e.g. Surface 95) to remove the coin channel from grease, and dirt.
1. Turn off the device.
  2. Take the coin mechanism out of the side panel.
  3. Carefully open the coin holder valve (A) and hold it open.
  4. Clean the coin holder with a cloth and close the valve again.
  5. Turn on the device again.

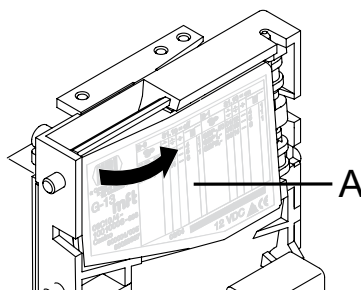



## 12.2 Coin changer (optional)

The OptiFresh is available with an optional coin changer suitable for euros (€ 0.05 to 2.00).

Other currencies are available on request.


The changer has 6 change tubes (€ 0.05 / 2x 0.10 / 0.20 / 0.50 / 1.00).

- |                  |                           |
|------------------|---------------------------|
| 1. Return button | 6. Coin insert funnel     |
| 2. Coin slot     | 7. Display                |
| 3. Door lock     | 8. Key panel              |
| 4. Change        | 9. Cassette removal Lever |
| 5. Return lever  | 10. Tube cassette         |

### 12.2.1 Tube filling

We advice to fill the coin tubes by inserting coins via the coin insert /slot.



1. Activate filling mode:  
Main menu > F = Fillins mode

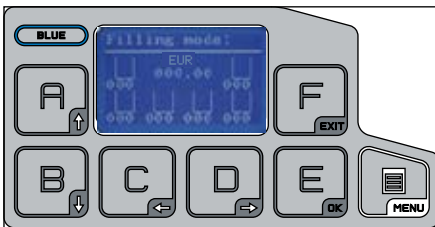

2. Insert coins individually in opening [2] or [6].
3. The tubes are full if the machines displays [*insert money*]. If display shows [*insert exact money*] the coin tubes does not contain enough coins (change).
4. Go back to operator mode by pressing MENU key 2x

### 12.2.2 Tube emptying

Remove the complete tube cassette [10] by pulling it out by the cassette removal lever [9].

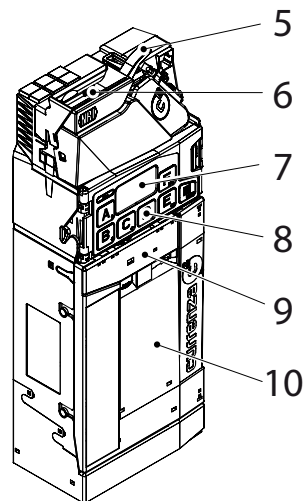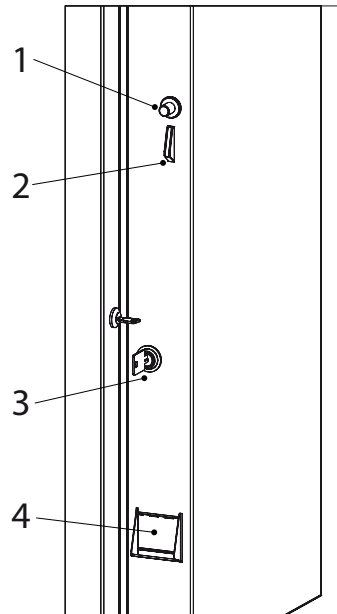

### 12.2.3 Programme a new token

The token shown opposite is already programmed in the coin changer [Token A].

For programming a new token ([B] see detailed token teach instructions in the NRI technical documentation.

Attention; switch the machine OFF/ON twice after a new token has been programmed.



### 12.2.4 Coin channel cleaning

Only the changer's coin path, flight deck and sorter cover must be cleaned from time to time.



#### ATTENTION


- The cloth must not be so wet that liquid enters the system or the circuit board could be damaged.
- Do not use any solvents and/or abrasive cleaning agents that could attack the plastic.
- We advice to use a water free Surface cleaner (e.g. Surface 95) to remove the coin channel from grease, and dirt.

1. Turn power OFF.
2. Unlatch sorter cover (blue latch on the right of the display) and swing it open [A & B].
3. Open flight deck at the insert funnel and hold it open [C].
4. Remove any debris. Dust off any accumulation with a small brush or compressed air.
5. Clean the complete coin path, front and back, with a slightly wet cloth.
6. Allow to dry.
7. Close flight deck and latch sorter cover.
8. Turn power ON.

A



B

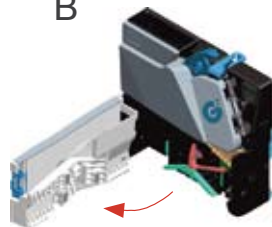




C









### 12.2.5 Fault analysis

For a detailed diagnosis of the fault, see the NRI technical documentation.










OptiFresh Touch

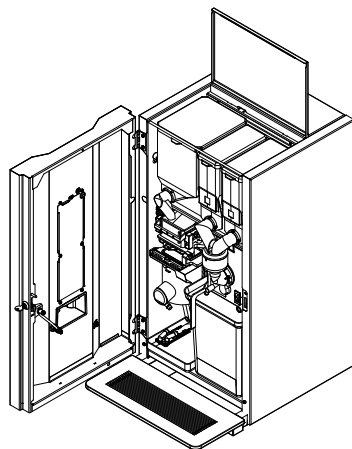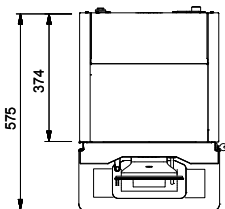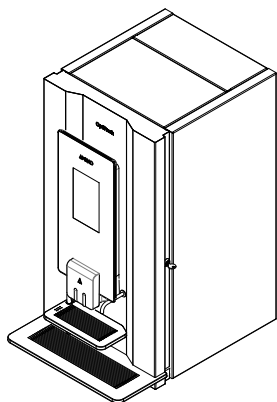

EN

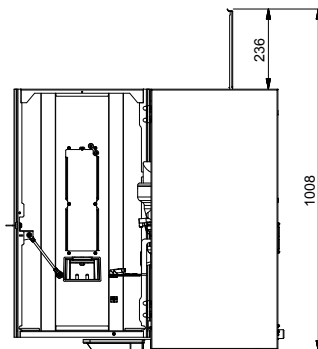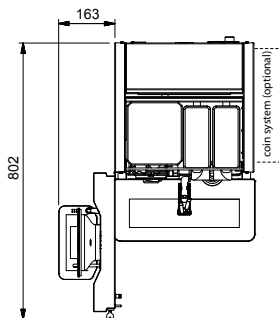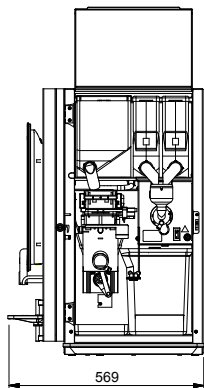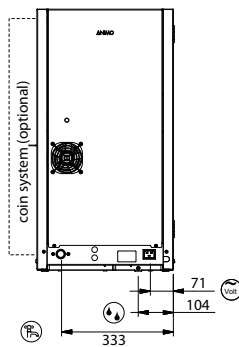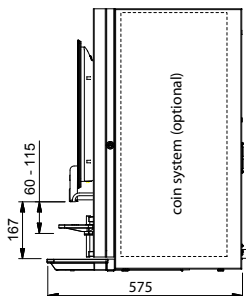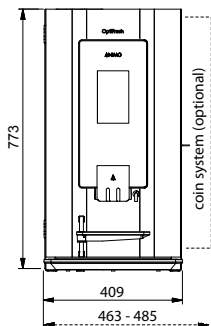

### OptiFresh Bean Touch

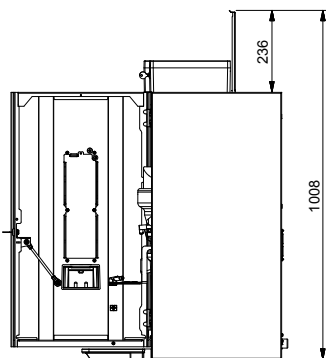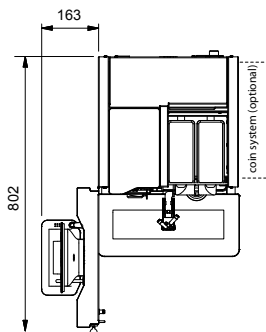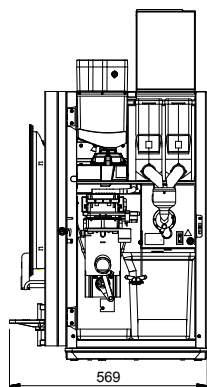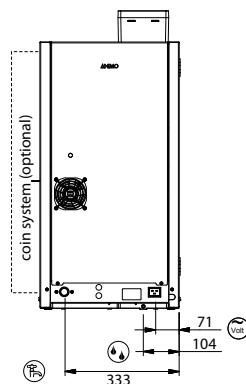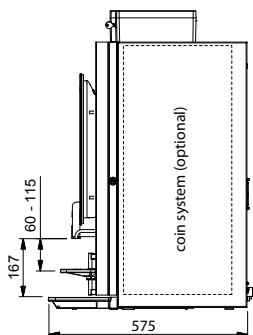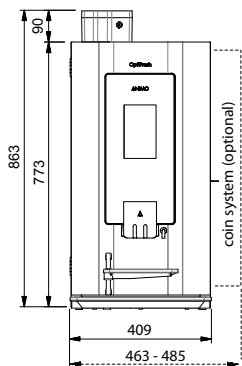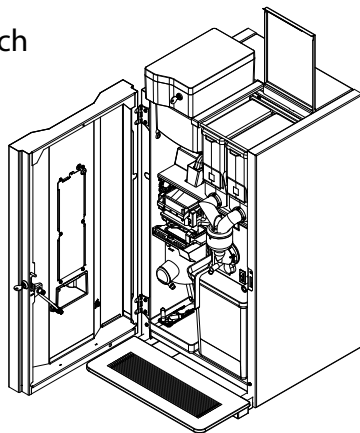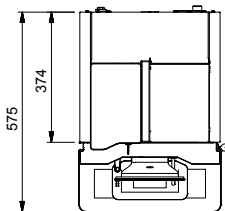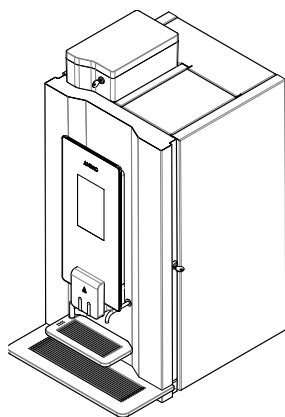







---

# ANIMO

---

**Animo B.V.  
Dr. A.F. Philipsweg 47  
9403 AD Assen  
The Netherlands**

**Tel. no. +31 (0) 592 376376**

**Fax no. +31 (0) 592 341751**

**E-mail: [info@animo.nl](mailto:info@animo.nl)**

**[www.animo.eu](http://www.animo.eu)**